

FRS60

Multiburner Control Flame Relay

The FRS60 is an optional cassette, mountable on the FRS100 Flame Relay, enabling continuous monitoring of flame voltage.

An external voltmeter is not required for adjustment or at start-up operation. Maintenance and checking during operation is easily carried out.




Specifications		
Model No.	FRS60A100	FRS60A104
Indication method	LED indication	
Indication	Flame voltage (V)	LED indication
	4.5 or higher	LED 5 ON (Red)
	3.5 to 4.5	LED 4 ON (Green)
	2.5 to 3.5	LED 3 ON (Green)
	1.5 to 2.5	LED 2 ON (Green)
	1.0 to 1.5	LED 1 ON (Red)
	0 to 1.0 (Ignition detection level)	All LED's OFF
7-segment indication	7-segment digital indication	
Mounting	Direct mounting to FRS100	
Power supply	Power supplied from FRS100	
Weight	Approx. 40g	

Selection Guide	
Model No.	Description
FRS60A100	LED indication
FRS60A104	7-segment indication

Dimensions (unit:mm)

• FRS60A100

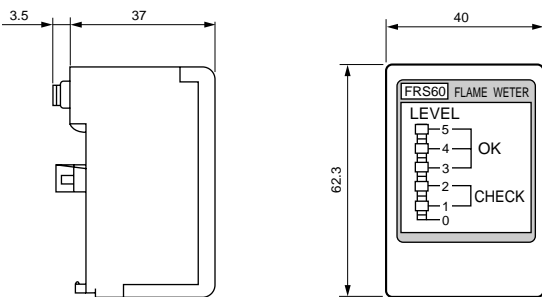

• FRS60A104

