




SMART TERMINAL EST555Z

User's Manual

Installation

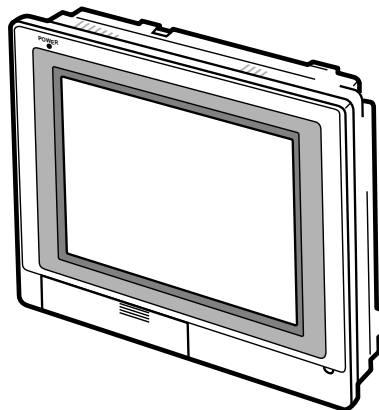

Thank you for purchasing the Smart Terminal EST555Z.

This manual contains information for ensuring correct use of the EST555Z. It also provides necessary information for installation, maintenance, and troubleshooting.

This manual should be read by those who design and maintain devices that use the EST555Z.

Be sure to keep this manual nearby for handy reference.

Yamatake Corporation

RESTRICTIONS ON USE

When using this product in applications that require particular safety or when using this product in important facilities, pay attention to the safety of the overall system and equipment. For example, install fail-safe mechanisms, carry out redundancy checks and periodic inspections, and adopt other appropriate safety measures as required.

REQUEST

Ensure that this User's Manual is handed over to the user before the product is used.

Copying or duplicating this User's Manual in part or in whole is forbidden. The information and specifications in this User's Manual are subject to change without notice.

Considerable effort has been made to ensure that this User's Manual is free from inaccuracies and omissions.

If you should find any inaccuracies or omissions, please contact Yamatake Corporation.

In no event is Yamatake Corporation liable to anyone for any indirect, special or consequential damages as a result of using this product.

©2001 Yamatake Corporation ALL RIGHTS RESERVED

The smart terminal® is a registered trademark of Yamatake Corporation.
Other company names and product names listed in this manual are registered trademarks or trademarks of respective companies.

SAFETY PRECAUTIONS

■ About Icons

Safety precautions are for ensuring safe and correct use of this product, and for preventing injury to the operator and other people or damage to property. You must observe these safety precautions. The safety precautions described in this manual are indicated by various icons.

As the following describes the icons and their meanings, be sure to read and understand the descriptions before reading this manual:



WARNING

Warnings are indicated when mishandling this product might result in death or serious injury to the user.



CAUTION

Cautions are indicated when mishandling this product might result in minor injury to the user, or only physical damage to this product.

■ Examples

	<p>Triangles warn the user of a possible danger that may be caused by wrongful operation or misuse of this product.</p> <p>These icons graphically represent the actual danger. (The example on the left warns the user of the danger of electrical shock.)</p>
	<p>White circles with a diagonal bar notify the user that specific actions are prohibited to prevent possible danger.</p> <p>These icons graphically represent the actual prohibited action. (The example on the left notifies the user that disassembly is prohibited.)</p>
	<p>Black filled-in circles instruct the user to carry out a specific obligatory action to prevent possible danger.</p> <p>These icons graphically represent the actual action to be carried out. (The example on the left instructs the user to remove the plug from the outlet.)</p>

WARNING



Be sure to turn off the power when you wire, assemble or disassemble the EST.

Otherwise, electric shock hazard could occur.



Ground the FG terminal to an Earth of less than 100Ω.

Otherwise, electric shock hazard could occur.



Be sure to turn off the power before maintenance and inspections of the EST.

Otherwise, electric shock hazard could occur.



The display unit is very heavy. Make sure not to drop it when you replace it. Doing so can harm your body or the unit.

CAUTION



Prevent debris of wiring or other foreign materials from entering the EST. It may cause trouble or burning the EST.



Do not give a shock to the unit, especially the touch switches or do not scratch them with sharp edges like screw driver and sharp pencil.

Otherwise, some malfunction may occur.



Do not hit and break the touch switches. Otherwise, the those broken switches may cause injuries.



Do not connect to outdoor wiring, or lightning could cause malfunction.



A thin plastic film is attached on the panel protective sheet to protect the surface from scratch. Remove it before using the EST.



Input/output signal cable, power supply cable, and grounding cable should be wired separately from power unit cables. If routing these cables together cannot be avoided, use a shielded cable and ground one end of the shield.



Be sure to turn off the power before you wire the EST.

Otherwise, electric shock hazard can be caused.








Be sure to turn off the power before the maintenance and inspection of the EST.

Otherwise, electric shock hazard can be caused.




Do not touch the leads of IC and other electronic parts and the PWB patterns with bare hand. Internal electric devices can be damaged by static electricity. The use of antistatic work benches are highly recommended.

CAUTION

	The display unit is made of sheet metal. Be careful not to be injured by the sharp edges.
	Do not throw used batteries into fire or discard. If you discard them at your site, follow regulations and rules stipulated by your local self-governing body.
	Do not short-circuit the batteries as they may overheat or catch fire also, do not expose them to water.
	When replacing the battery, make sure to replace the battery within 10 minutes after the electrical charging of at least 30 minutes. Otherwise, the functions hereunder may return to the initialized data or may be lost if the replacement takes more than 10 minutes. <ul style="list-style-type: none">• When time, user touch switch adjustment value and backlight candela value return to the initialized data, make sure to reset them.• The trend data disappears.• The recipe data changed in the EST becomes disabled. If the “application upload” is made by the AP Editor, the change to memory in the EST is reflected.
	When you discard the EST, discard it as industrial waste, following regulations and rules stipulated by your local self-governing body.

Request

The protective sheet on the panel front has a thin plastic film protecting the panel surface. After the works such as mounting and wiring are completed, please remove it as follows:

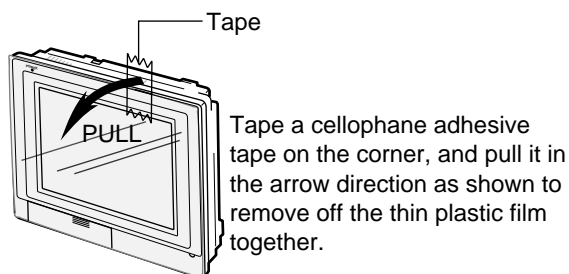


Handling Precautions

Peeling off the protective film with your fingernail might scratch the surface of the EST.

The Role of This Manual

Outline of EST555Z Manuals

The below 6 manuals are provided to cover a range of EST555Z-related topics. Use the manual that best fits your application. In the event such a manual is not available, contact us or your local EST555Z dealer.

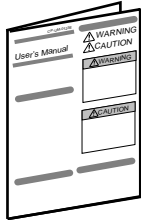


Smart Terminal EST555Z User's Manual Manual No. CP-UM-5229E

This manual is packaged with the EST555Z body.

This manual should be read by those who produce units that use the Smart Terminal.

This manual contains safety precautions when using the Smart Terminal, installation methods, and descriptions for wiring the power supply and signal lines.

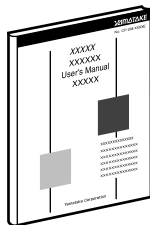


Smart Terminal EST555Z User's Manual Installation

Manual No. CP-SP-1103E

This manual.

This manual should be read by those who use the EST555Z to design units and those in charge of maintenance.

This manual describes safety cautions when using the Smart Terminal, how to install for incorporating into units, wiring methods, maintenance and inspection, troubleshooting, and hardware specifications.

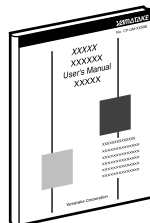


Smart Terminal EST-Z Series User's Manual Application Preparation

Manual No. CP-SP-1088E

This manual should be read by those who design screens that are displayed on the EST-Z Series and operations.

This manual describes the environment of the personal computer on which AP Editor can be used, installation methods, startup, system settings, file operations, printing, how to paste smart objects, and other AP Editor operations.

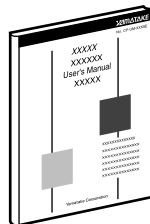


Smart Terminal EST-Z Series User's Manual Smart Object Library

Manual No. CP-SP-1089E

Graphic elements that have functions for displaying on the EST-Z Series are called "smart objects."


This manual describes the concept of smart objects and the functions of each smart object.

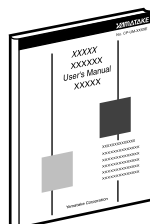

Smart Terminal EST-Z Series User's Manual Communications Connection

Manual No. CP-SP-1090E

This manual should be read by those who combine the EST-Z Series with PLCs made by other manufacturers and dedicated board computers to build systems. This manual describes how to connect to PLCs, address maps that correspond to PLCs, how to paste smart objects, drawing, and other operations and settings required for making applications using PLCs.

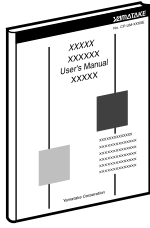

**Smart Terminal EST555Z User's Manual
DMC10 Package**

Manual No. CP-SP-1124E

This package is used when constructing systems by connecting the EST555Z to Yamatake's Distributed Multi-channel Controller DMC10.

This manual describes the specifications of the software package, how to use the package, how to install the software, and how to operate the software.

Organization of This User's Manual

The user's manual has the following configuration:

Chapter 1. PRODUCT OUTLINE

This chapter gives the EST555Z model numbers and describes EST555Z system configurations and related equipment.

Chapter 2. NOMENCLATURE AND FUNCTIONS

This chapter gives the nomenclature of EST555Z parts and describes their functions.

Chapter 3. INSTALLATION AND WIRING

This chapter describes the installation procedures and precautions required for installing the EST555Z.

Chapter 4. CONNECTIONS AND INSTALLATION

This chapter describes how to connect the EST555Z to other equipment and how to use the EST setting menu.

Chapter 5. OPERATION PROCEDURES

This chapter describes downloading procedure of application data to EST555Z and how to start the operation.

Chapter 6. MAINTENANCE AND INSPECTION

This chapter describes inspection procedures and how to replace maintenance parts to ensure maximum service life of the EST555Z.

Chapter 7. TROUBLESHOOTING

This chapter describes check points and countermeasures when the EST555Z is not operating normally.

Chapter 8. DISPOSAL

This Chapter describes the precautions required for discarding the EST555Z.

Chapter 9. SPECIFICATIONS

This chapter gives the general specifications, performance specifications and the external dimensions of the EST555Z.

Contents

SAFETY PRECAUTIONS

Unpacking

The Role of This Manual

Organization of This User's Manual

Conventions Used in This Manual

Chapter 1. PRODUCT OUTLINE

1-1	Model Numbers	1-1
■	EST555Z	1-1
■	AP Editor, package software	1-1
■	Accessories	1-1
■	Maintenance parts	1-1
■	Optional parts	1-1
1-2	Connections and Configuration	1-2

Chapter 2. NOMENCLATURE AND FUNCTIONS

2-1	Nomenclature and Functions	2-1
■	Front view	2-1
■	Rear view	2-1
2-2	Materials Used	2-2

Chapter 3. INSTALLATION AND WIRING

3-1	Attention before the installation	3-1
■	Installation environment	3-1
■	Precautions to be taken in installation and wiring	3-2
3-2	Installation	3-3
■	Panel cut-out dimensions	3-3
■	Installation	3-3
■	Installing the power supply unit in a separate location	3-4

Chapter 4. CONNECTIONS AND INSTALLATION

4-1	Preparations	4-1
■	Connection points and required parts	4-2
■	Recommended crimp type terminal lug and tightening torque	4-2
4-2	EST connections	4-3
■	Power supply connection	4-4
■	CH1(RS-232C based communication port)	4-5
■	CH2(RS-485 based full-/half-duplex communication port)	4-6
■	CH3, CH4(RS-485 based half-duplex communication port x 2)	4-8
■	Parallel output connection	4-10

4-3	EST configuration	4-11
	■ Screen shown at the first start up	4-11
	■ System menu	4-12
	■ Application info. (information).....	4-14
	■ Memory switch conf. (configuration)	4-15
	■ Communications conf. (configuration)	4-16
	■ Clock settings	4-18
	■ Memory card.....	4-19
	■ Error reset	4-19
4-4	Self-Diagnostic Function	4-20
	■ Display test	4-20
	■ Touch switch test.....	4-21
	■ Memory test	4-21
4-5	Touch Switch Adjustment	4-22
	■ Touch switch adjustment procedure.....	4-22

Chapter 5. OPERATION PROCEDURES

5-1	Downloading.....	5-1
5-2	Operation start.....	5-2

Chapter 6. MAINTENANCE AND INSPECTION

6-1	Maintenance	6-1
	■ Replacing the panel protective sheet	6-2
	■ Replacing the display unit	6-3
	■ Touch switch panel replacement.....	6-5
	■ Backlight replacement	6-8
	■ Battery replacement	6-11
6-2	Inspections	6-14
	■ Notes on inspections	6-14
	■ Inspection procedures.....	6-14

Chapter 7. TROUBLESHOOTING

7-1	Error messages and Countermeasures.....	7-1
7-2	Checks to be Performed in the Event of a Problem.....	7-2

Chapter 8. DISPOSAL



Chapter 9. SPECIFICATIONS

- 9-1 **General Specifications**..... 9-1
 - **Electrical specifications**..... 9-1
 - **Environmental specifications**..... 9-1
 - **Mechanical specifications** 9-1
- 9-2 **Performance Specifications** 9-2
- 9-3 **Interface Specifications**..... 9-3
 - **Interface specifications** 9-3
 - **DC input/output interface specifications**..... 9-3
- 9-4 **External Dimensions**..... 9-4

Index

Conventions Used in This Manual

The following conventions are used in this manual:

-  **Handling Precautions** : Handling Precautions indicate items that the user should pay attention to when handling the **EST555Z**.
-  **Note** : Notes indicate useful information that the user might benefit by knowing.
- (1), (2), (3) : The numbers with the parenthesis indicate steps in a sequence or indicate corresponding parts in an explanation.
- [ABC] : Indicate commands, messages, and touch switch menus, displayed on the screen.
- [Exit]button : Indicate touch switch buttons displayed on the screen.
- >> : Indicate messages displayed on the screen or the result of each operation.

Chapter 1. PRODUCT OUTLINE

1 - 1 Model Numbers

The model No. of EST555Z(occasionally described as EST) and the related products/parts are as follows:

■ EST555Z

Model No.	Description	Power Supply	Memory
EST0555Z01□ EX00	640 X 480 pixels Colour TFT LCD 10.4	100Vac	2M bytes
EST0555Z05□ EX00 *		24Vdc	
EST0555Z01□ ES00 *	640 X 480 pixels Colour TFT LCD 10.4	100Vac	
EST0555Z05□ ES00 *		"Memory card" correspondence	

□ B:Black model / W:White model

* The memory card function will be added shortly and the 24Vdc power supply models of is to be sold in the near future.

■ AP Editor, package software

Software name	Model No.
AP Editor for Windows 95, 98/Me, CD	ESTX240SWWJC000
Only for EST555Zs Package for DMC10, floppydisk	ESTX220D5AE3001

■ Accessories

Accessory name	Model No.
Mounting braket	ESTX939FB00

■ Maintenance parts

Parts name	Model No.	Remark
Panel protective sheet Clear (Normal)	ESTX955SS10	White model
	ESTX955SS20	Black model
Backlight	ESTX955BL11	Only for EST555Z
Battery	81446345-001	

■ Optional parts


Parts name	Model No.	Remark
Cable	CBL232AFT02	RS-232C cable (2m) D-sub25pin pin contact – D-sub9pin socket contact
	CBL232FFT02	RS-232C cable (2m) D-sub9pin pin contact – D-sub9pin socket contact

1 - 2 Connections and Configuration

Since the EST has several communication ports, the EST can be connected to devices such as PLCs, controllers and PCs without any special programs.

This allows the data exchange between PLCs and controllers, or the controller's configuration changes to be performed easily.


- Configuration example

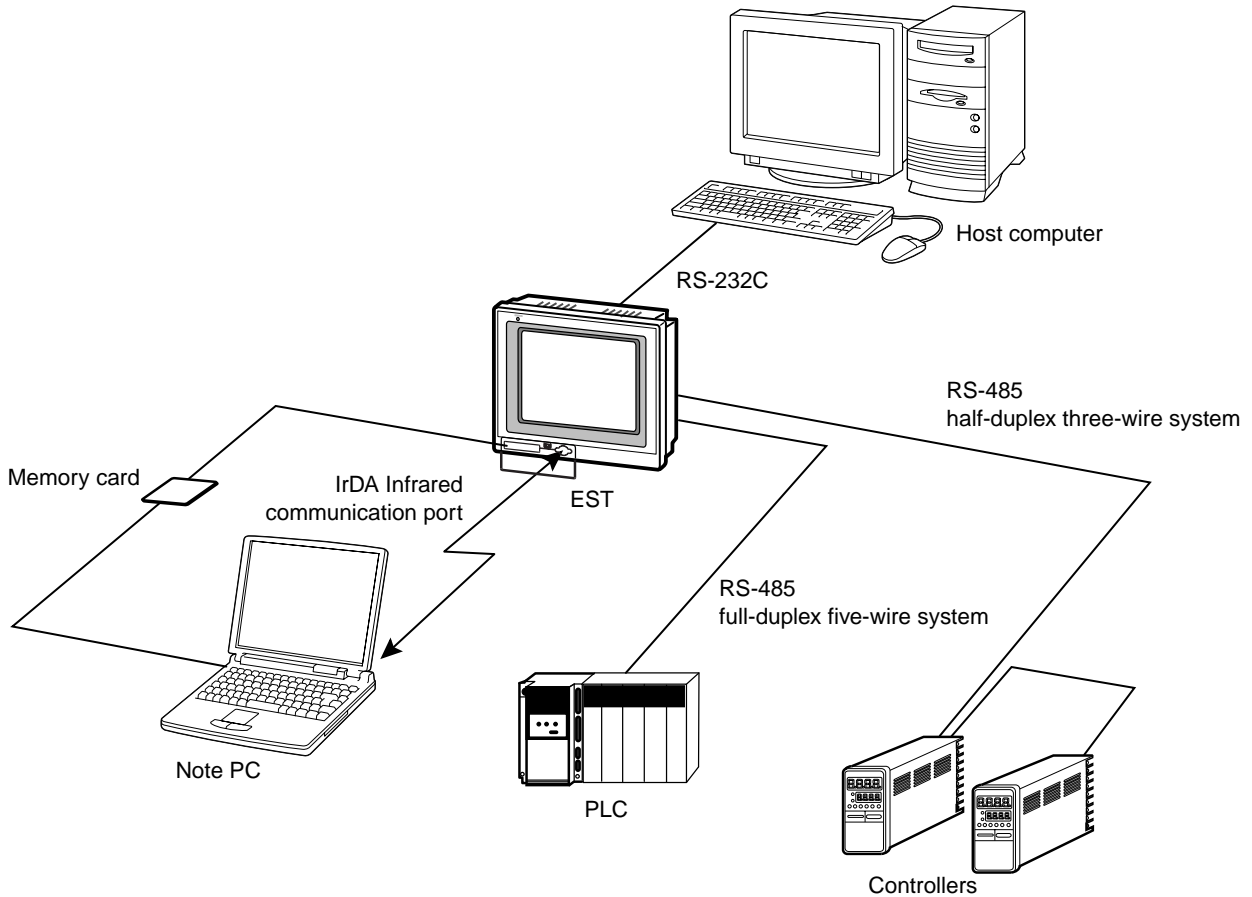


Chapter 2. NOMENCLATURE AND FUNCTIONS

2 - 1 Nomenclature and Functions

■ Front view

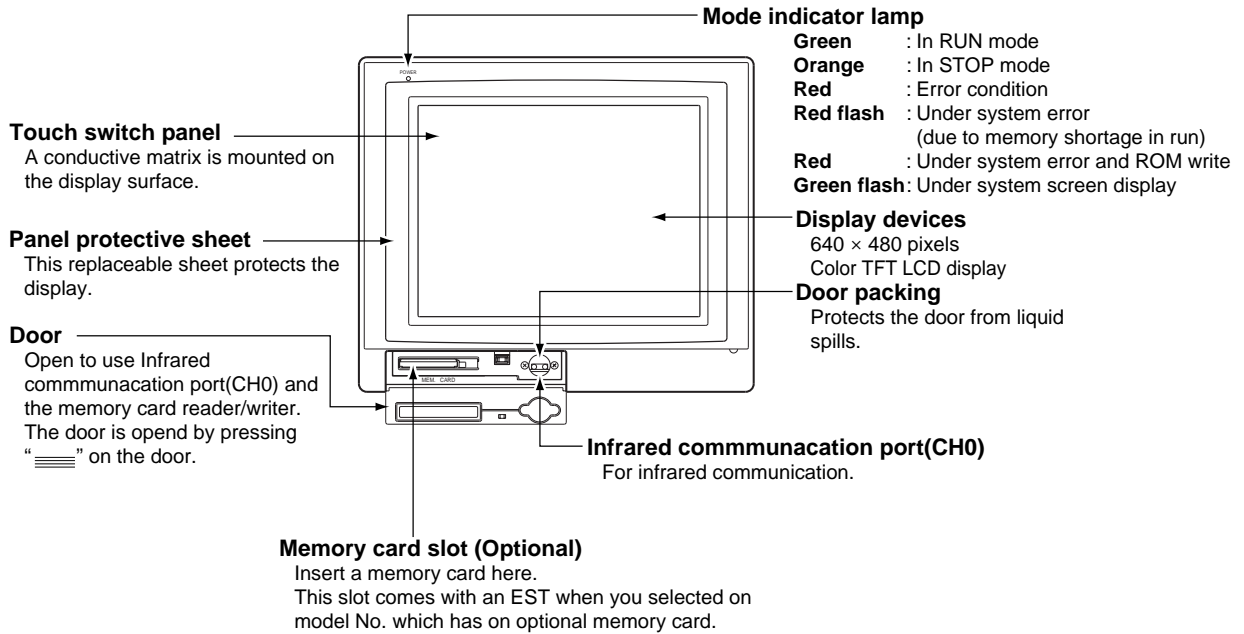

■ Rear view

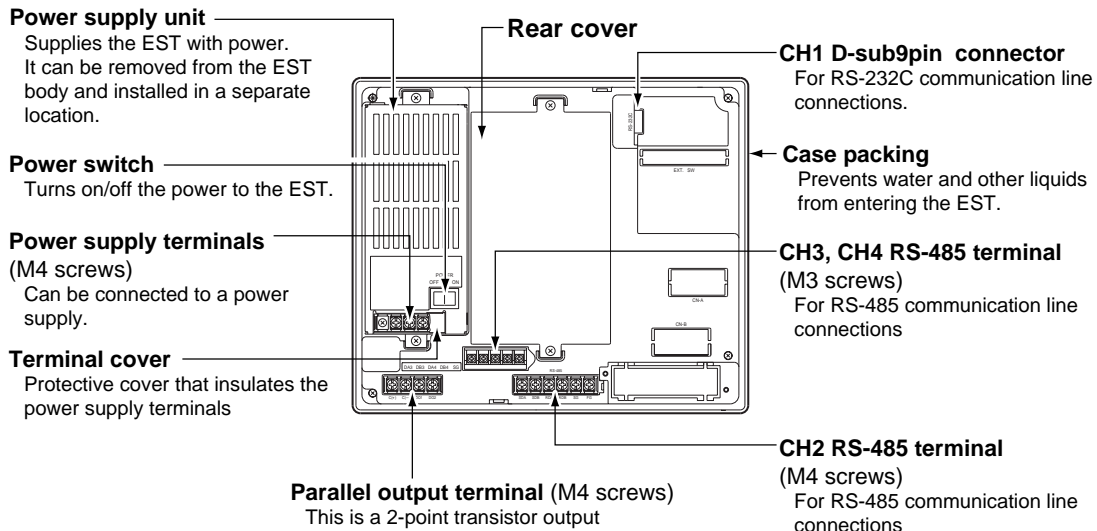

2 - 2 Materials Used

The table below shows the materials that the EST is made with and their environmental durability.

Part name	Material	Resistance to chemicals and oil
Case Door	PC / ABS (polycarbonate/ acrylonitrile/ butadiene/ styreneplastic)	These materials are resistant to water, alcohol, oil, salts and weak acids. However, alkali, aromatic hydrocarbons, halogenated hydrocarbons and other substances may cause them to swell or dissolve.
Touch switch panel Panel protective sheet	PET (polyethylene terephthalate)	PET is used in the panels. Although it is permeable to strong acid, alkali, boiling water and steam, it is highly resistant to organic solvents and oils. It is a thermoplastic material and a crystalline resin.
Door packing	EPDM (ethylene propylene rubber)	The material is EPDM combined with a heat-resistant foam open cell type flexible foam. Generally, it is susceptible to mineral oil. It is highly resistant to ozone and has a high degree of resistance to heat and heat aging and is also resistant to hot water and steam.
Case packing	CR (chloroprene rubber)	A foam material with a flexible, independent cell structure derived from chlorine. Generally, it is susceptible to mineral oil. It is almost as resistant to ozone as EPDM, has excellent heat and oil resistance qualities and is autolytic.
Rear cover	Fire and heatresistant vinyl chloride panel	Though it is highly resistant to gasoline, alcohol, inorganic acid, and alkali, the resistance to benzene, toluene, trichloroethylene, ether, ketone, acetic ether, organic acid, etc. is poor.


Chapter 3. INSTALLATION AND WIRING

3 - 1 Attention before the installation


■ Installation environment

In order to ensure the reliability of the system and to take full advantage of the EST's functions, the user should heed the instructions given below.


Do not install the EST outside or in the following locations where:

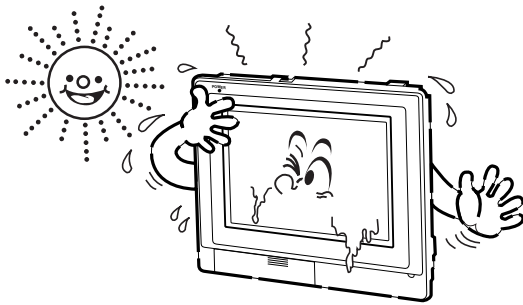


- Ambient temperature exceeds 50 °C.
- Equipment is exposed to direct sunlight.
- Out door

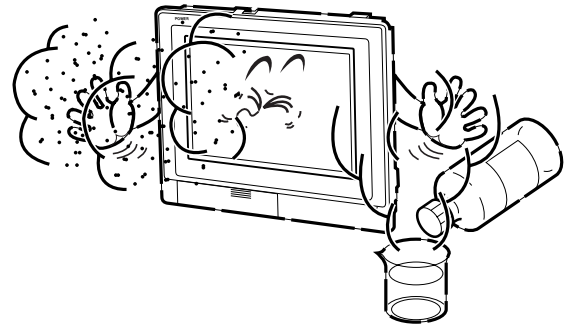


- Equipment is exposed to corrosive or inflammable gas.
- Equipment is exposed to large amounts of dust, salt, iron powder and other conductive substances or organic solvents.

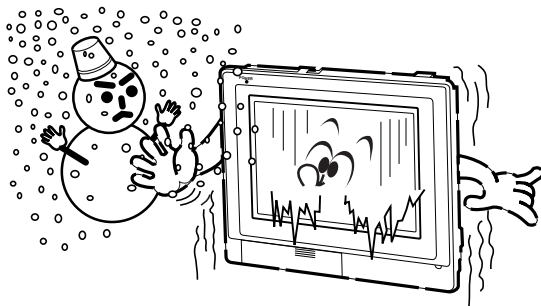


- Ambient temperature is below 0 °C.
- Out door

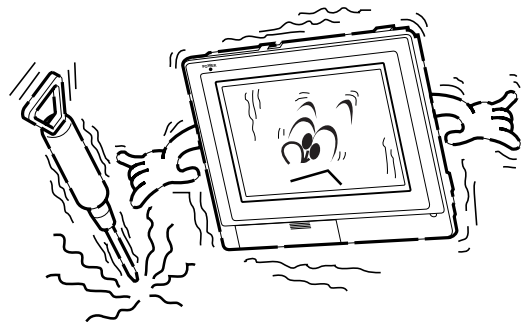

- Equipment would be directly exposed to vibrations or shocks.

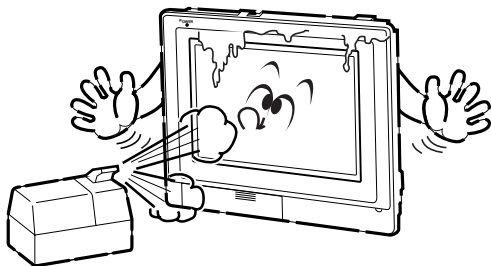

- Ambient humidity exceeds 85%
- Equipment is exposed to sudden temperature fluctuations and dew condensation.
- Equipment would be exposed to water, oil or chemical spills (panel surfaces satisfy the IP65 standard).
- Out door

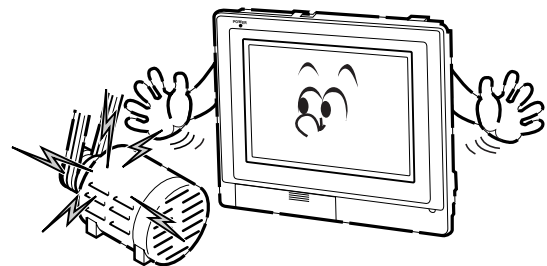

- Equipment would be exposed to strong electric or magnetic fields.

■ Precautions to be taken in installation and wiring

⚠ WARNING




Be sure to turn off the power when you wire, assemble or disassemble the EST or the power supply unit. Otherwise, electric shock hazard could occur.

! Handling Precautions

This section describes precaution to be taken when the EST is mounted in an operation panel. Observe the instructions listed below to ensure optimum resistance to environmental conditions and guarantee ease of use and maintenance.


- Provide sufficient free space around the EST to ensure good ventilation.
- Do not mount the EST directly above transformers or high capacity resistors that dissipate large amounts of heat.
- Do not install the EST together with high voltage devices or motors. Preferably, install the EST in a different panel.
- Make sure the EST is properly grounded to improve noise resistance. Use a grounding cable with a diameter of at least 2mm². When a long grounding cable is required, use a thick insulated cable and route it through a conduit.
- Do not bundle the EST communications cables or data lines with a noise source such as the power cable of a motor. If routing these cables in the same duct cannot be avoided, use a shielded cable and connect the shield to the FG terminal of unit.
- Mount the EST on a flat, even surface as performance may otherwise not meet the IP65 standard.
- Packings are subject to aging and all packings that have lost their elasticity through long use should be replaced with new ones.
- Note that if the screws of the metal fittings are overtightened, the panel protective sheet on the display surface may crease. Should this happen, loosen the screws. If the protective sheet does not return despite of loosening of the screws, make sure to spread the sheet again.
- Install the EST in a vertical attitude to ensure natural convection. Horizontal and oblique installation will affect operating temperature range and should be avoided.
Consult Yamatake Corporation for technical advice when normal installation is not possible.

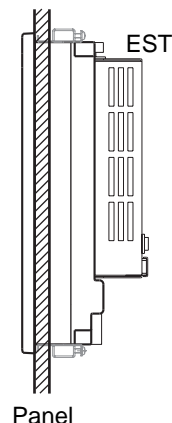

3 - 2 Installation

■ Panel cut-out dimensions

The figure below shows the dimensions of the panel cut-out required.
An SPC(old-rolled steel) panel should be at least 1.6mm thick.

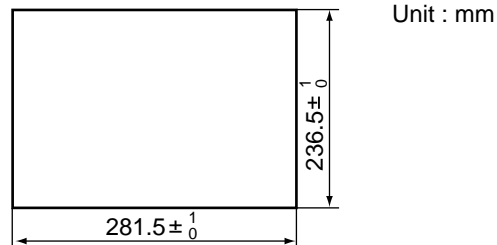


■ Installation

Insert the EST in the cut-out panel.

Use the provided mounting bracket to secure the top and bottom of the EST to the panel.

When the heads of the screws of the mounting bracket are flush with the panel and there is no looseness, turn the screws an extra half to one full turn to ensure that the EST is firmly secured.

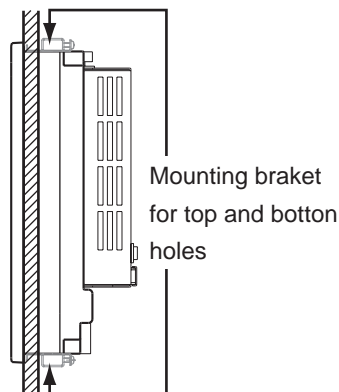

! Handling Precautions

Overtightening the screws of the mounting bracket can deform or damage the case.


■ Installing the power supply unit in a separate location

⚠ WARNING



Be sure to turn off the power when you wire, assemble or disassemble the EST or the power supply unit. Otherwise, electric shock hazard could occur.

The power supply unit can be detached from the EST and placed in a separate location. This reduces the depth of the EST and makes for a more compact panel.

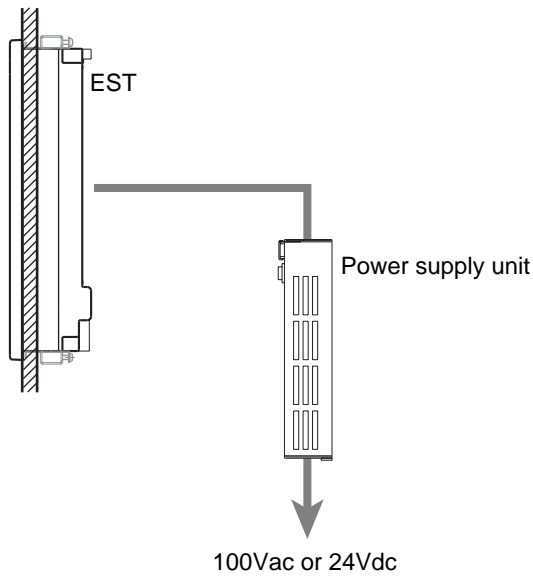


Connect the power supply unit and the EST with the provided power cable (Approx. 15 cm).

ⓘ Handling Precautions

- Install the power supply unit near the EST.
- Install the power supply unit vertically to ensure proper ventilation.

● Removing the power supply unit

- (1) Remove the two set screws on the rear panel of the EST.
- (2) Gently lift the power supply unit out of the EST.
- (3) Disconnect the power supply unit connectors.

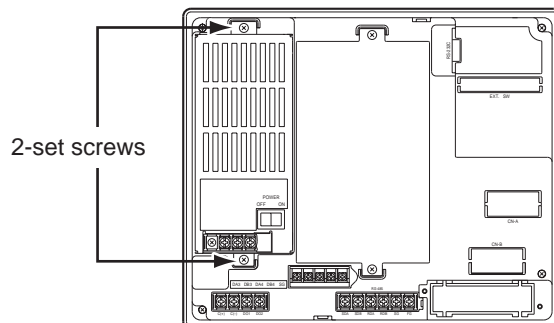


● **Installing the power supply unit**


Install the removed power supply unit in a separate location according to the following instructions:

● **Required items**


- Phillips-head screwdriver.
- M4 screws

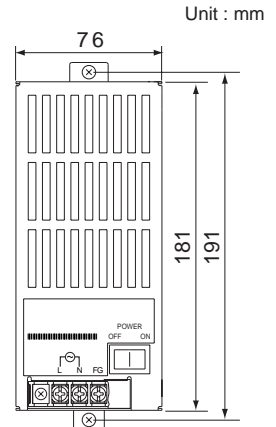


- (1) Determine the location of the power supply.
- (2) Drill holes for the set screws.
- (3) Remove the bushing in the top part of the power supply unit.

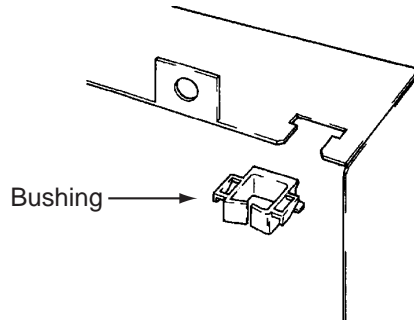

- (4) Pull out the power cable and thread it through the bushing.

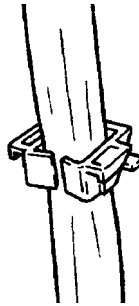

- (5) Fit the bushing with the power cable into the power cable outlet.

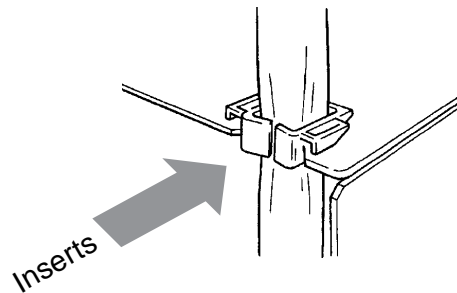

- (6) Mount the power supply unit using M4 screws.

Chapter 4. CONNECTIONS AND INSTALLATION

4 - 1 Preparations

WARNING



Be sure to turn off the power when you wire, assemble or disassemble the EST or the power supply unit. Otherwise, electric shock hazard can be caused.

CAUTION



Prevent debris of wiring or other foreign materials from entering the EST. It may cause trouble or burning the EST.



Do not give a shock to the unit, especially the touch switches or do not scratch them with sharp edges like screw driver and sharp pencil. Otherwise, some malfunction may occur.



Do not hit and break the touch switches. Otherwise, the those broken switches may cause injuries.



Do not connect to outdoor wiring, or lightening could cause malfunction.



Connectors and crimp contacts are required for wiring the EST. Be sure to use crimp contacts when wiring the terminal block.




A thin plastic film is attached on the panel protective sheet to protect the surface from scratch. Remove it before using the EST.

■ Connection points and required parts

Connection points	Required parts
Power supply terminal, parallel output terminal, CH2, RS-485 terminal	Crimp type terminal lug (M4)
CH3, CH4 terminals, RS-485 terminal	Crimp type terminal lug (M3)
CH1 9PINs Dsub connector	DDK Ltd. 17JE-13090-02(D8C2) or the equivalent

■ Recommended crimp type terminal lug and tightening torque

Terminal	* X [mm]	Tighting torgue	Screw	Recommended crimp contact JIS specifications	Suitable cross-sectional area of the wire [mm ²]	Parts No. of J.S.T. MFG CO., Ltd
Power supply terminal, parallel output terminal, CH2 RS-485 terminal	8.6	less than 1.2N·m	M4	RAV1.25-4	0.25 to 1.65	V1.25-4
CH3, CH4 terminals RS-485 terminal	7.2	less than 0.5N·m	M3	RAV1.25-3		V1.25-3

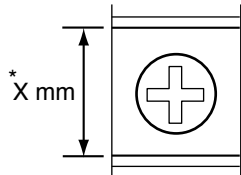

❗ Handling Precautions

To prevent the short circuit in case of the screws' loosening, use the crimp type terminal lug with insulator.

4 - 2 EST connections

! WARNING

- ! Be sure to turn off the power when you wire, assemble or disassemble the EST or the power supply unit. Otherwise, electric shock hazard can be caused.
- ! Ground the FG terminal(Power supply terminal) to an Earth of less than 100Ω. Otherwise, electric shock hazard could occur.


! CAUTION

- ! Prevent debris of wiring or other foreign materials from entering the EST. It may cause trouble or burning the EST.
- ! Do not give a shock to the unit, especially the touch switches or do not scratch them with sharp edges like screw driver and sharp pencil. Otherwise, some malfunction may occur.
- ! Do not hit and break the touch switches. Otherwise, the those broken switches may cause injuries.
- ⊘ Do not connect to outdoor wiring, or lightning could cause malfunction.
- ! Input/output signal cable, power supply input cable, and grounding cable should be wired separately from power cables. If routing these cables together cannot be avoided, use a shielded cable and ground one end of the shield.


This section describes EST connections.

Concerning the wiring of EST with PLC's or Yamatake temperature controllers, please refer to the following manual : EST-Z Series User's Manual Communication Connection, Manual No. CP-SP-1090E


A lower figure shows the state where all connection was made.

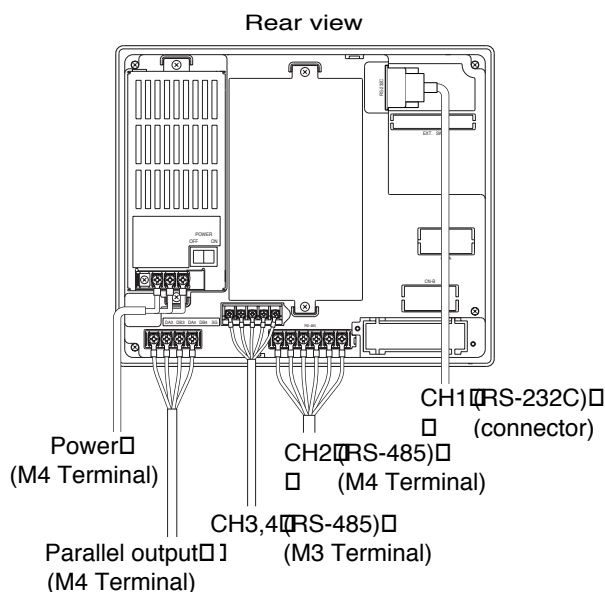

■ Power supply connection

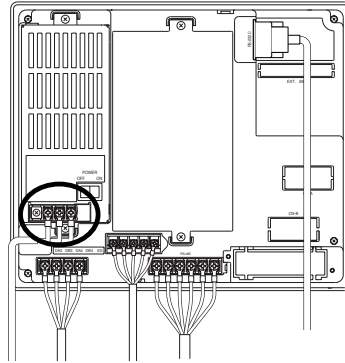


● AC power supply

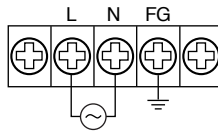

Signal	Description
L	100Vac input
N	
FG	Frame ground

● DC power supply


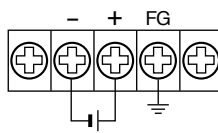


Signal	Description
-	GND
+	+24V
FG	Frame ground

! Handling Precautions

- Make sure that the polarity of DC power supply connections is correct.
- Use M4 crimp type terminal lug for power cable connections.
- The terminal screws should be tightened to no more than 1.2N.m torque.
- The power terminals are provided with plastic insulation covers. The covers are easily removed by pulling them towards you.
- Be sure to connect the FG terminal to the dedicated ground (ground resistance lower than 100Ω).
- Attach a circuit breaker to the EST's power supply input, or use a DC power supply with current limiting.

■ CH1 (RS-232C based communication port)

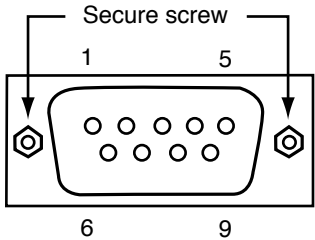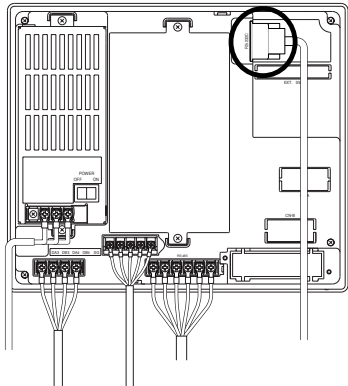


EST connector

Recommended connector
 DDK Ltd. 17JE-13090-02(D8C2)
 or equivalent (Secure screw : #4-40 UNC)



CH1 Signals

Pin No.	Signal	Description	Channel	Input/Output
1	NC	No connection	-	-
2	RD1	Reception data	CH1	Input
3	SD1	Transmission data	CH1	Output
4	ER1	Connected with DR(6-pin) internally	CH1	-
5	SG	Signal ground	-	-
6	DR1	Connected with ER (4-pin) internally	CH1	-
7	RS1	Transmission request	CH1	Output
8	CS1	Transmission permission	CH1	Input
9	NC	No connection	-	-
Shell	-	No connection	-	-

● Connection examples

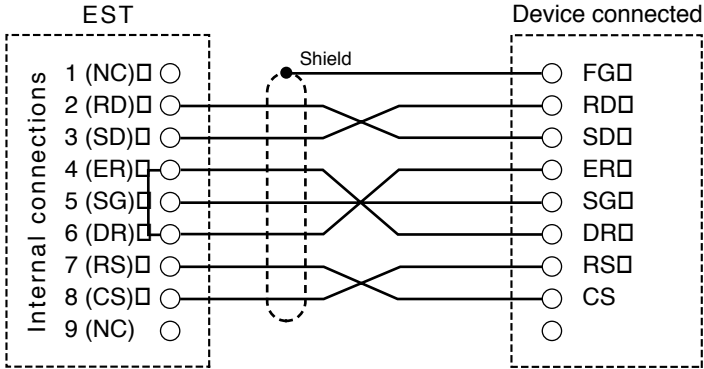

 ■ CH2 (RS-485 based full-/half- duplex communication port)

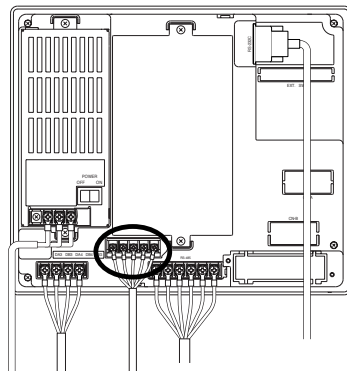


Terminal block screw size : M4
 Tightening torque : No more than 1.2N·m

CH2 Signals


Signal	Description	Channel	Input/Output
SDA	Transmission data (+)	CH2	Output
SDB	Transmission data (-)	CH2	Output
RDA	Reception data (+)	CH2	Input
RDB	Reception data (-)	CH2	Input
SG	Signal ground	-	-
FG	Relay terminal for frame ground	-	-

● Connection examples

Connection with full-duplex device

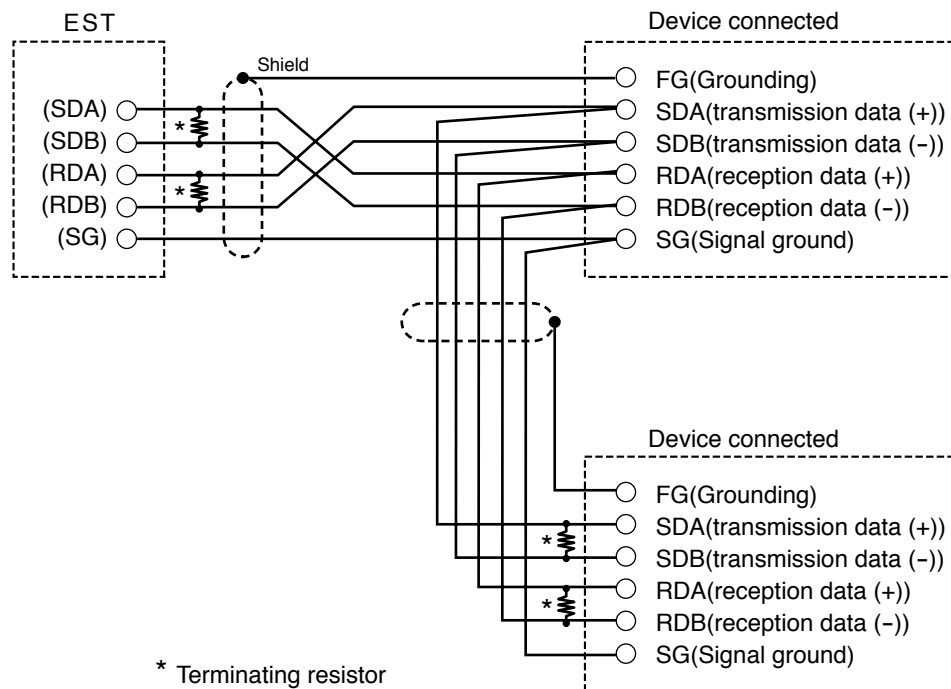

Connection with half-duplex device


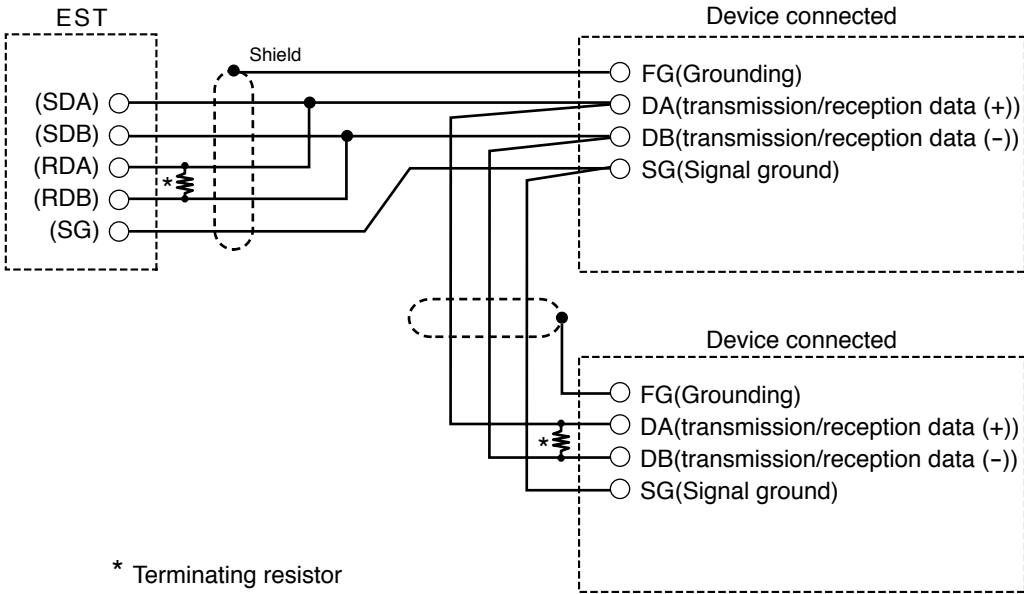


* Terminating resistor

! Handling Precautions

- Other device manufacturers may use different signal names.
- For wiring, use twisted pair-cable with shield, and ground the shields at one point.
- When connecting multiple devices, connect them in a multi drop configuration, and connect terminating resistors (120 to 150 Ω, 1/2W) at each end.
If a terminating resistor is built in the device, do not connect it.

■ CH3, CH4 (RS-485 based half-duplex communication port X2)

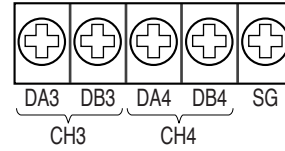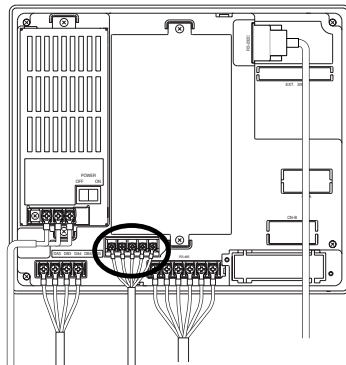

Terminal block screw size : M3
 Tightening torque : No more than 0.5N·m

CH3, CH4 Signals


Signal	Description	Channel	Input/Output
DA3	Transmission/Reception data (+)	CH3*	Input/ Output
DB3	Transmission/Reception data (-)		
DA4	Transmission/Reception data (+)	CH4	
DB4	Transmission/Reception data (-)		
SG	Signal ground	CH3, CH4	—

CH3 and CH4 are for the RS-485 based half-duplex communication.


* When CH2 is specified as the direct connection mode for the MITSUBISHI CPU, CH3 becomes an output-only terminal (RSA, RSB).

● Connection examples

CH3

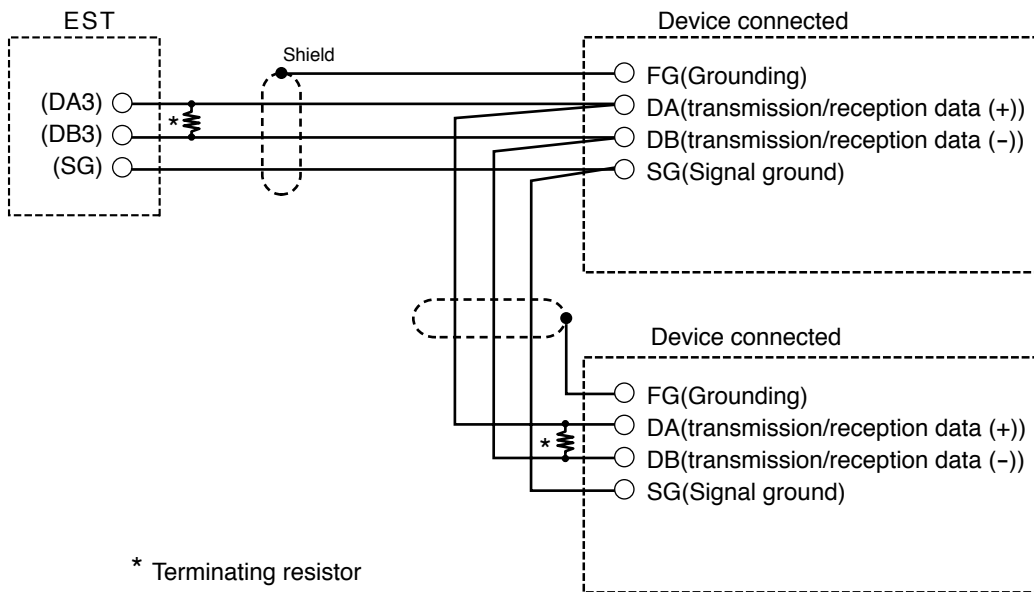



* Terminating resistor

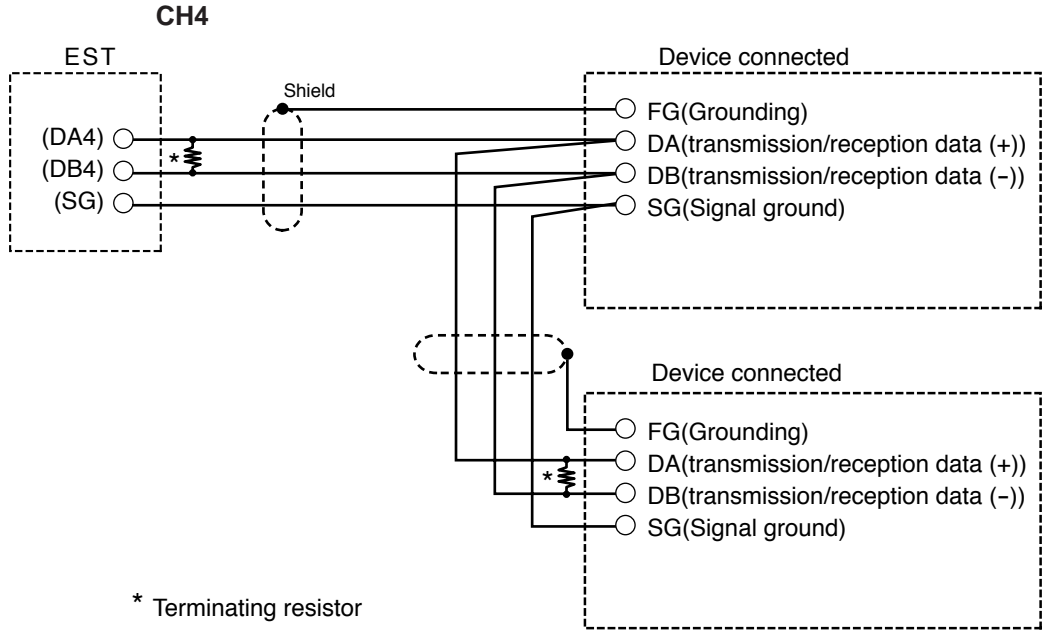

! Handling Precautions

- Other device manufacturers may use different signal names.
- For wiring, use twisted pair-cable with shield, and ground the shields at one point.
- When connecting multiple devices, connect them in a multi drop configuration, and connect terminating resistors (120 to 150 Ω, 1/2W) at each end.
If a terminating resistor is built in the device, do not connect it.

 ■ Parallel output connection

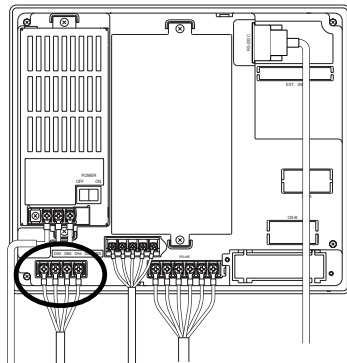

C(+) C(-) DO1 DO2

Terminal block screw size : M4

Tightening torque : No more than 1.2N·m

DC input/output connector


Signal	Description
C (+)	4.5 to 26.4 Vdc
C (-)	Ground
DO1	Output1 *
DO2	Output2 *

* Factory setting DO1 :Run mode output
DO2 :Typical switch output

! Handling Precautions

Wrong polarity, excess voltage or the wrong wiring may cause malfunction.

● Connection examples

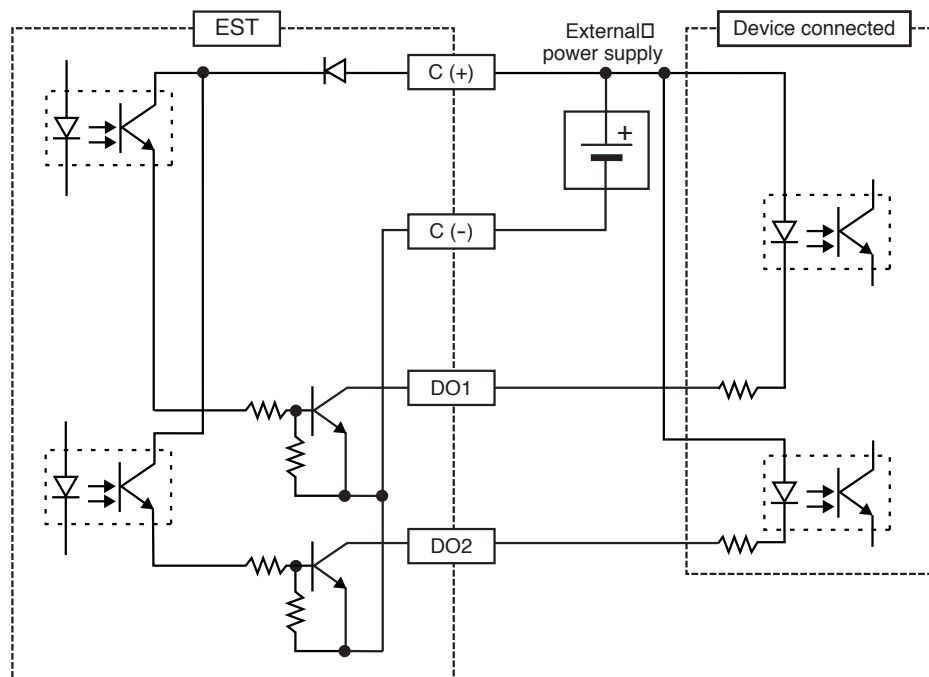

4 - 3 EST configuration

The settings of EST are basically made in the application data. However, they can be also changed on the EST afterwards.

To change the settings on the EST, call up the system menu on the EST and select the desired items.


■ Screen shown at the first start up

! Handling Precautions

- The system is not installed in the EST555Z when shipped from the factory.
- When downloading the application from AP Editor for the first time, the system is downloaded at the same time. Then the system menu can be called up.
(System downloading is only at the first application downloading.)


● Before downloading the system

>>When the EST is switched on for the first time, the following screen will be displayed:

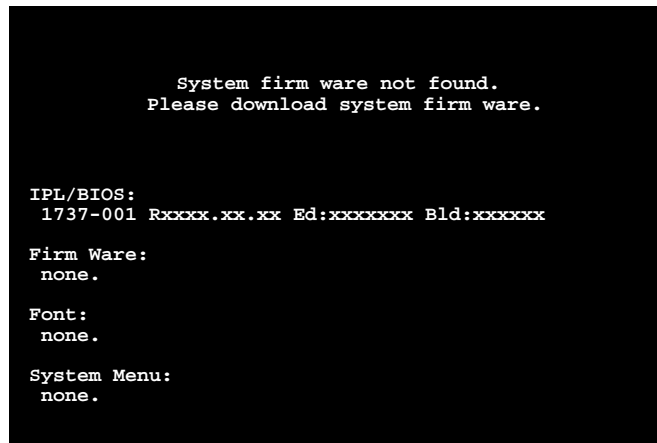


● After downloading the system

Press the upper left corner of the screen for at least 5 sec.

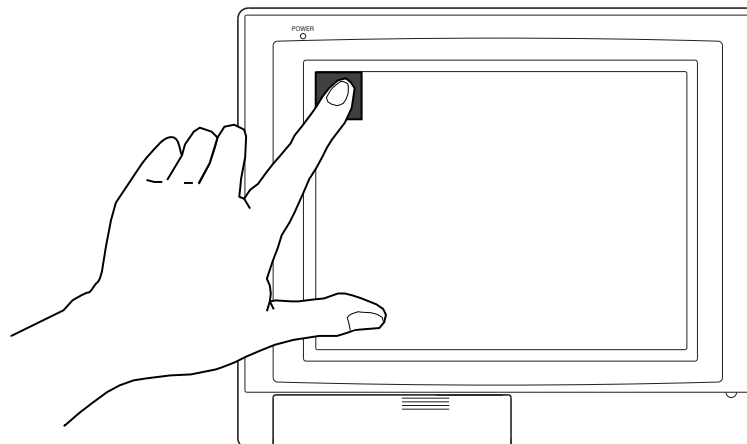

>>The mode indicator lamp (LED) flashes, the following screen will be system menu:

■ System menu

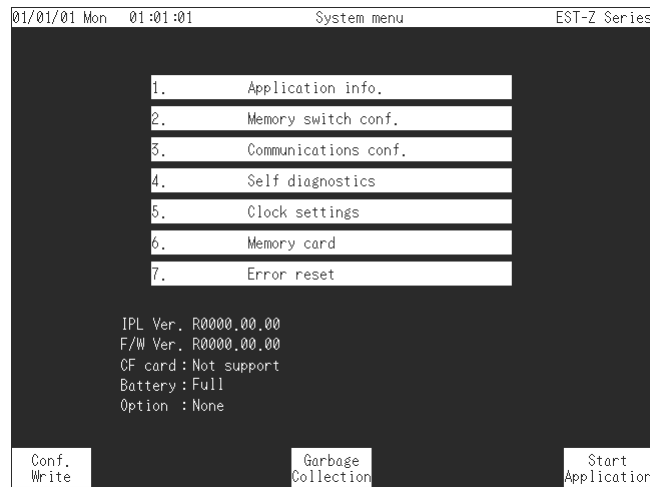

● Menu items

The system menu has the following items:

1. Application info
2. Memory switch conf.
3. Communications conf.
4. Self diagnostics
5. Clock settings
6. Memory card
7. Error reset

Item [4.Self diagnostics] is separately explained in the next section on page 4-20, 4-4 Self-Diagnostic Function.

● Function of the buttons

[Conf. Write] :

Touch to write the settings which were set in [2. Memory switch conf.] and [3.Communications conf.] Those written settings remain effective even after rebooting the EST.

[Garbage Collection] :

This is used when the error message of [Could not save Package configuration...] is displayed during the run of the DMC10 package.

For more detailed information, please refer to the following manual:

EST555Z User's Manual DMC10 Package Manual No.CP-SP-1124E.


[Start Application] : Touch to start the application.

! Handling Precautions

- These functions are not effective if the application data has not been downloaded.
- The settings made in the [2.Memory switch conf.] and [3.Communications conf.] will be lost unless they have been written by [Conf. Write]. (except the Backlight candela)

● When the message “Version warning” is displayed:

The following message may be displayed at the lower right of the screen if the EST and AP Editor were purchased at different times:

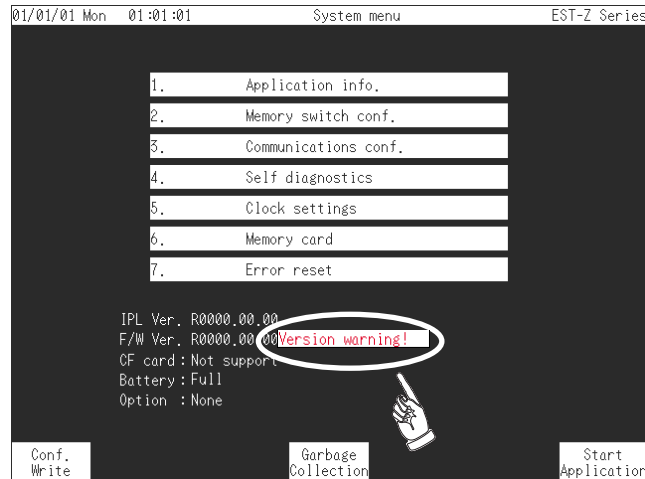

This message warns the user that one of the four components* of the EST system program is old and that some functions will not work. Those functions will mostly be newly added functions that are supported by the current AP Editor.

This message does not mean that all the functions will not work.

For more detailed information, please refer to the following manual:

EST-Z Series User's Manual Application Preparation,
Manual No.CP-SP-1088E

>>Touch the message [Version warning!]. The following screen will be displayed:



The program component concerned is indicated with a red dot.

The above example shows that the IPL/BIOS Program is old.

* The system program consists of the following four components:

- 1) F/W : Main unit of the system program.
Downloaded by AP editor.
- 2) IPL(IPL/BIOS) :This program activates the EST originally contained basic functions.
- 3) FONT :Character font data and auxiliary program.
Downloaded by AP Editor.
- 4) MENU :System menu program. Downloaded by AP Editor.

Since F/W, FONT, and MENU are downloaded by AP Editor, they are upgraded automatically when the AP Editor is upgraded.


! Handling Precautions

- IPL/BIOS has upward compatibility. Older program can be downloaded into a new EST and the warning message will not necessarily appear. (The warning message only appears in the case where there is an incompatibility.)
- The version of IPL/BIOS cannot be upgraded by the user. If necessary, please contact us.
For the method to upgrade the IPL version, please refer to the following manual:
EST-Z Series User's Manual Application Preparation,
Manual No.CP-SP-1088E

■ Application info. (information)

Information on the application stored in the EST can be checked with this menu. Touch [1. Application info.] in the system menu.

>>The following screen will be displayed:

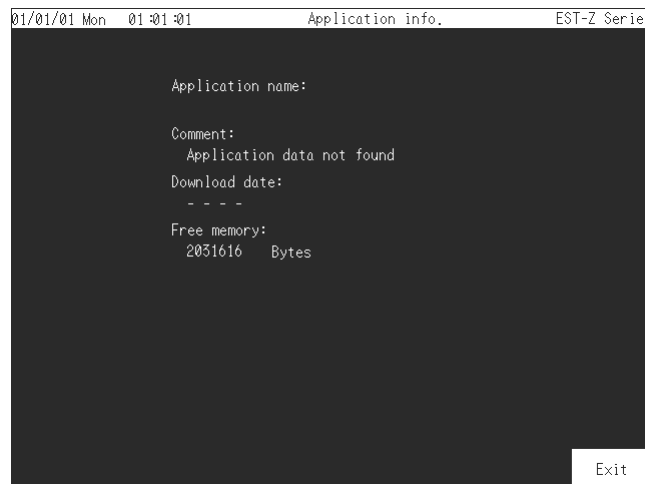

The items displayed on the screen are as follows:

Item	Description
Application name	The name of the application file
Comment	Comment on the application file
Download date	Date of download
Free memory	available memory space(in bytes) in user program memory

Touch [Exit] to go back to the system menu.

! Handling Precautions

To change the application name, be sure to use the AP editor. Otherwise, the application name will not be displayed correctly on the above screen.

■ Memory swich conf. (configuration)

All EST settings can be changed with this menu.

Touch [2. Memory switch conf.] in the system menu.


>>The following screen will be displayed:



To activate Auto Run Mode, Backlight off, and Screen saver, touch on the left. An activated item will be indicated with .

Setup method

Item	Setup
Auto run mode	The ten key panel is displayed when the setup section is touched.* Make the setting with the ten-key panel.
Backlight off	
Screen saver	
Message position	
Buzzer tone	Make the setting with <input type="up"/> <input type="down"/> keys by touching the setup section.
Backlight candela	
Message style	A setup section is touched directly and it is set as it.

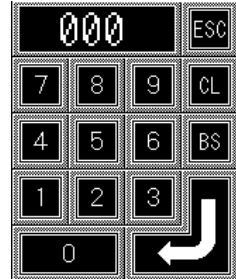

* When the ten-key image is wrongly displayed, press the [ESC]key of the ten-key panel so as to delete the screen.

Messages in the message area 1

Selected item	Message
Auto Run Mode	Set the RUN mode delay after power up.
Backlight off	Set the automatic backlight shutdown delay.
Screen saver	Set the screen saver start delay.
Buzzer tone	Select the buzzer tone.
Backlight candela	Adjust backlight candela.
Message style	Select the message style.
Message position	Set the message position.

Messages in the message area 2

The following is displayed on a message area 2 :

[Unless the new conf is saved with CONF WRITE, it will be lost at power down.]

Touch [Exit] to go back to the system menu.

! Handling Precautions

Be sure to save the setting changes with “Conf. Write”. Unwritten changes will be lost at reboot.

(Backlight candela / Message style / Message position)

■ Communications conf. (configuration)

This menu is to change or check the EST communication settings.

Touch [3. Communications conf.] in the system menu.

>>The following screen will be displayed:

Each time when you touch the switch marked , the indication changes.



For example, when you touch the parity switch, the indication changes “E” → “O” → “N”, and back to Even.

Messages displayed in the message area:

The following is displayed on a message area:

[Unless the new conf is saved with CONF WRITE, it will be lost at power down.]

! Handling Precautions

- The settings made in this menu become effective at the operation start.
- Be sure to save the setting changes by [Conf. Write]. Unwritten changes will be lost at reboot and the settings return to the factory set value.

Touch [Exit] to go back to the system menu.

When the [Drivers] button is touched in the communications conf. screen, the following menu is displayed.



The driver that is set can be confirmed but no change in setting can be made in this screen.

Touch [Exit] to go back to the Communication conf. menu.

! Handling Precautions

The drivers displayed on this screen are used only when the application is running.

When the application is not running, all the ports will use the Serial Driver (Slave).

* Format of the Serial Driver (Slave)

CH0 : 9600bps, no parity, 1 stop-bit

CH1 to CH4 : Just after rebooting : 9600bps, Even parity, 1 stop-bit


After the application start: Settings of the application are active.

■ Clock settings

The internal EST clock is set as described below.

Touch [5. Clock settings] in the system menu.

>>The following screen will be displayed:

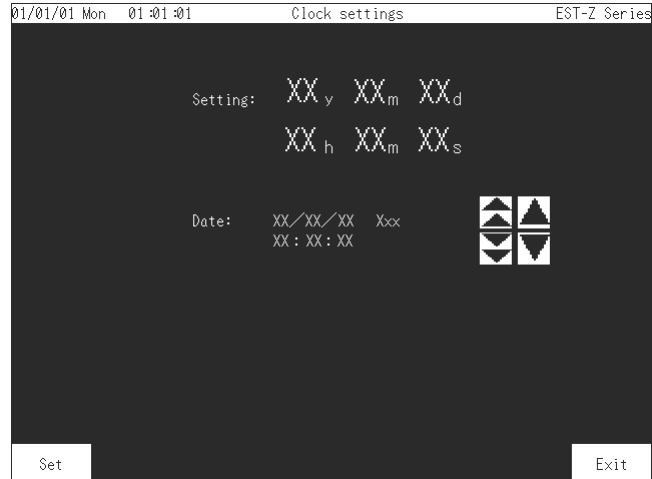

Touch any number of the “Setting” to highlight it. It can now be changed with the following keys.

Touch the  or  keys to select the next higher or lower value.

Hold the  or  keys to continuously change the value.

Any year between 1950 and 2035 can be set. The year is set by the last two digits.

The day of the week is automatically set.

[Set] Touch to change the currently selected value.

[Exit] Touch to return to the system menu.

Note

If [Exit] is touched before the [Set] , or the power is turned off before the [Set] is touched, the clock setting will not be changed.

■ Memory card


One of these days support schedule

■ Error reset

Clear the system error.

Touch [7. Error reset] in the system menu.

>>The following screen will be displayed:

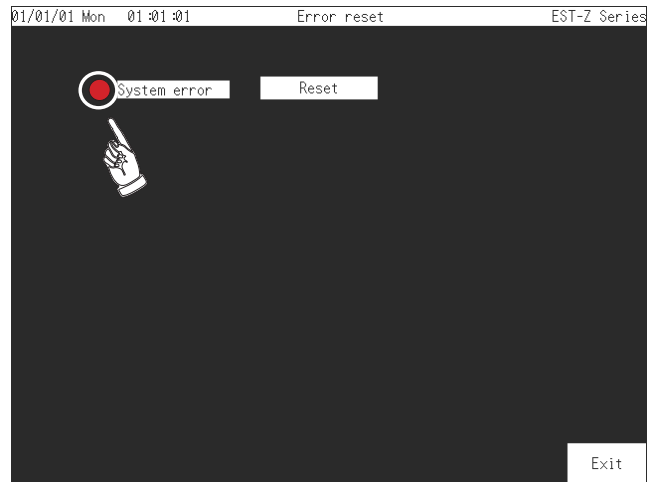

When the system error is generating, the red circle on the left of the [System error] keeps lighting. In this case, touch the [Reset] button to clear the system error.

Note

If the Error reset screen is shown in case the system error is not generated, the red circle does not light and no the [Reset] button is shown.

4 - 4 Self-Diagnostic Function

If the EST does not operate correctly, you can check its condition using these functions.

The conditions these functions diagnose are as follows:

- Abnormal display (strange color, part of the screen is not displayed, etc.)
- The touch switches do not respond in some areas.
- Erratic operation just after downloading application data.

Touch [4. Self diagnostics] in the system menu.

>>The following screen will be displayed:




■ Display test

This is to check if the LCD elements are operation normally.

Touch [1. Display test] in the self diagnostics menu.

>>The following screen will be displayed:

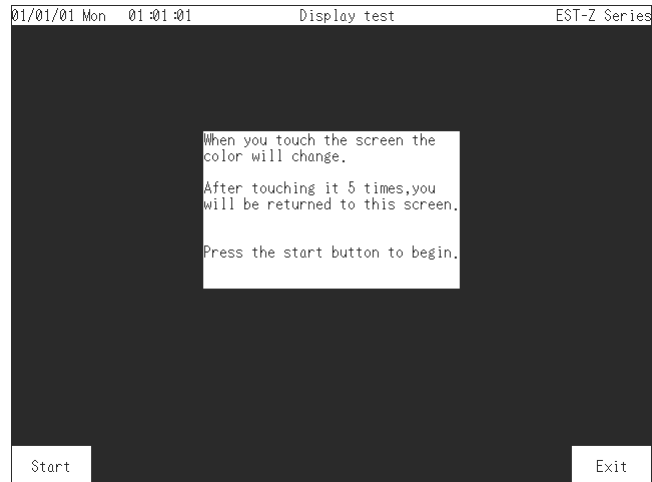

[Start] By touching this button, the screen will change in the following order.

Screen shown above → all white → all red → all green → all blue → all black → back to display test menu.

[Exit] Touch to return to the self diagnostics menu.

Note

There may be some permanently lit/unlit pixels, this is not a fault.

■ Touch switch test

To test the EST touch switches.
Touch [2. Touch switch test] in the self diagnostics menu.

>>The following screen will be displayed:



Each cell framed with white lines is one touch area.
When a cell is touched, an **OK** sign is displayed.
When the cell is touched again, the **OK** sign is cleared.

[Exit] Touch to return to the self diagnostics menu.

■ Memory test

To test the EST memory.
Touch [3. Memory test] in the self diagnostics menu.

>>The following screen appears and the memory test is performed:



After a few seconds, the test result is displayed.

Test result	Messages
Good	“Memory test completed. No errors found.”
No good *	“Memory test detected an error.”

The messages are as follows:
* In the case of “No good”, please contact to Yamatake.

[Exit] Touch to return to the self diagnostics menu.

4 - 5 Touch Switch Adjustment

CAUTION



Do not give a shock to the unit, especially the touch switches or do not scratch them with sharp edges like screw driver and sharp pencil. Otherwise, some malfunction may occur.

This function is used to recalibrate the touch switches which may shift slightly with time.

Start up procedure in this case is different from the usual.

When the battery is replaced, the setting returns to the factory-set value and it must be recalibrated again.

Handling Precautions

If the wrong part of the screen is touched during the adjustment procedure, it may cause the touch switches to not respond. In this case, perform the adjustment procedure from the beginning again.

● Required item

An item like a soft stick

 
(If an accurate positioning is not necessary, just use of a finger tip is sufficient.)

■ Touch switch adjustment procedure

Turn off the power of the EST.


While touching the screen (any part is OK), turn the power on and hold 10 sec.


>>The following screen will be displayed:



Touch the center of the mark  in the upper right corner
 
>>The following screen will be displayed:



Touch the center of the mark  in the lower left.

When the adjustment is completed, the system menu appears.

Chapter 5. OPERATION PROCEDURES

5 - 1 Downloading

The program used to operate the EST is referred to as application data. The application data is downloaded from a PC to start up an EST.

For more detailed information on download procedure, please refer to the following manual: EST-Z Series Application Preparation, Manual No.CP-SP-1088E

● Required items

- AP Editor (for EST-Z Series only; option)
- Connection cable
 - If downloading by CH1 : RS-232C cable with DSUB9pin
 - If downloading by CH2 : RS-485 cable

For the model No. of the above items, please refer to page 1-1, 1-1 Model Numbers.

● Download procedure

- (1) Turn off the EST.
- (2) Install the AP Editor into a PC.
 - Connect the EST to that PC with a communications cable (RS-232C or RS-485).
- (3) Turn on the EST.
- (4) Start up the AP Editor and select the file to download and start downloading.
 - On the EST screen, the following messages are displayed to indicate the progress of the download:
 - First,
 - >>[Initializ ing application data, please wait ...]
 - Then,
 - >>[Downloading data, please wait ...]
 - When the download is completed, the following message window is displayed on the AP Editor.
 - >>[Start application in EST]

Note

When you download the AP Editor for the first time after purchasing the EST, the System Program* is downloaded automatically at the same time.


In this case, the progress is a little different from the above procedure, and it takes 3 or 4 minutes longer.

* The system download is required only at the initial step.

5 - 2 Operation start

The operation can be started by one of the following procedures:

- The following screen appears after the AP Editor downloading:

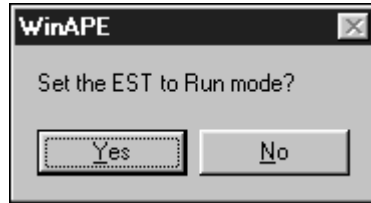

The operation starts when the [Yes] is selected.

- In case the automatic run start setting is made with the application data, turn on the EST again and touch turn on the EST again, and touch [Start Application] on the system menu screen.
- Touch the upper left of the panel until the system menu screen appears. Touch [Start Application] on that screen.

Note

- Auto Run Mode is used when EST is connected to a device with long start-up time.
Timing to start the EST operation can be specified.
When a long time delay is set, the screen stays black before operation starts, this is not abnormal behavior.
- For more detailed information on Auto run mode, please refer to the following manual: EST-Z Series Application Preparation, Manual No.CP-SP-1088E

Chapter 6. MAINTENANCE AND INSPECTION

6 - 1 Maintenance

WARNING



Be sure to turn off the power when you wire, assemble or disassemble the EST.
Otherwise, electric shock hazard could occur.

CAUTION



The display unit is made of sheet metal.
Be careful not to be injured by the sharp edges.



Do not touch the leads of IC and other electronic parts and the PWB patterns with bare hand.
Internal electric devices can be damaged by static electricity.

The replacement of consumption articles for the EST is hereunder described:

- Protective sheet for the TFT color LCD 10.4 type (hereafter called protective sheet)
- Backlight for the TFT color LCD 10.4 type (hereafter called backlight)
- Battery

Handling Precautions

- The protective sheet can be replaced independently. The protective sheet must be also replaced at the time of backlight or battery replacement.
- Maintenance should not be done by a person who does not have experience in handling or assembling electronic equipment.
- Be careful not to lose or damage disassembled parts like screws.

Note

The use of antistatic work benches are highly recommended.

Perform the following steps in the backlight replacement:

- (1) Removing the panel protective sheet
- (2) Removing the display unit
- (3) Removing the touch switch
- (4) Replacing the backlight
- (5) Mounting the touch switch
- (6) Mounting the display unit
- (7) Replacing the panel protective sheet

Perform the following steps in the battery replacement:

- (1) Removing the panel protective sheet
- (2) Removing the display unit
- (3) Battery replacement
- (4) Mounting the display unit
- (5) Replacing the panel protective sheet

The model No. of the maintenance parts are listed on page 1-1, 1-1 Model Numbers.

■ Replacing the panel protective sheet

Replace the panel protective sheet when it becomes dirty or scratched.

This replacement can be performed when the EST is mounted in a control panel or other equipment.

! Handling Precautions

- The surface of the touch switches is very sensitive and the dirt and dust cannot be removed. Be careful not to touch the surface, and protect it from dirt and dust.
- The panel protective sheet that is once removed has no adhesive power. Do not use it again, and replace with a new protective sheet.
- Make sure the panel protective sheet is properly attached as dirt on the side of the adhesive will lower the power of the adhesive and make it impossible to meet its specified drip-proof specifications.

● Required items


- New panel protective sheet
- Small flat-head screwdriver

● Replacement procedure

The sheet is attached to the display with an adhesive.

(1) There is a semi-circular recess at the lower right part of the screen.

Insert a small flat-head screwdriver into this recess and gently pull off the sheet.

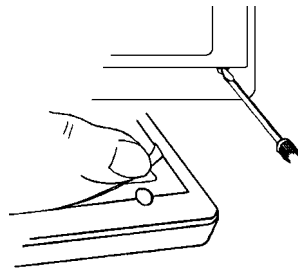

(2) Remove dirt and remaining adhesive from the display screen.

(3) Remove the exfoliate paper on the backside of the new panel protective sheet.

! Handling Precautions

Make sure that no dirt get stuck in the adhesive.

(4) Attach the sheet aligning the long side of the sheet with the lower and upper side of the screen.


(5) Make sure that the sheet is properly attached to the screen.

(6) The panel protective sheet has a thin plastic film protecting the surface.

After the works (including mounting and wiring) have been completed, remove it as follows.

! Handling Precautions

Peeling off the film with your fingernail may scratch the surface of the EST.

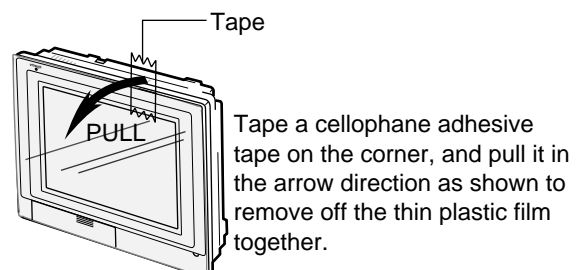

■ Replacing the display unit

The display unit consist of touch-switch, display device and PWB.

⚠ WARNING



The display unit is very heavy.
Make sure not to drop it when you replace it. Doing so could harm you, or the unit.

⚠ CAUTION




The display unit is made of sheet metal.
Be careful not to be injured by the sharp edges.

● Required items

- Small flat-head screwdriver
- Torque driver for flat-head screws

● Remove the display unit

- (1) Remove the panel protective sheet.
- (2) The display unit is secured with 4 thumb screws. Loosen the screws with a flat-head screwdriver.
- (3) Remove the displayunit from the body by lifting the thumb screws.

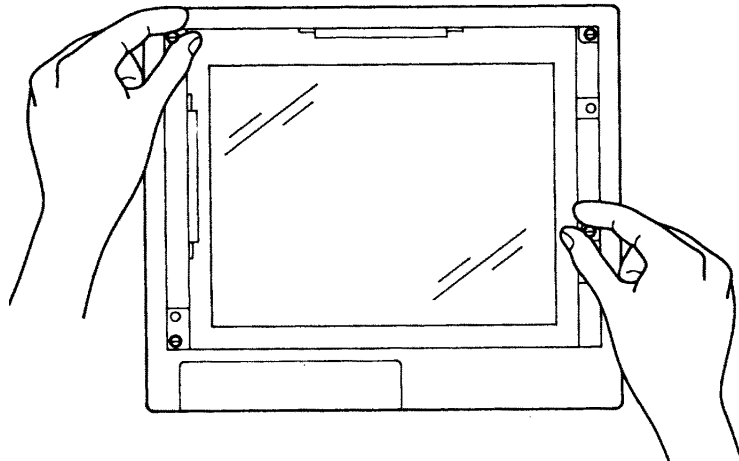

● Mounting the display unit

- (1) Pick up the mounting screws for display unit and insert them into the main body.
- (2) Tighten the screws with a flat-head torque driver with the torque of 0.4 to 0.5 N·m.

! Handling Precautions

- Do not tighten the screws with too much torque. Otherwise, the chassis may become deformed and the display unit cannot be installed properly.
- The touch switch surface can be very easily scratched. Once the smear with dirt/dust appears, it can not be removed. Avoid any sticking of dirt/dust.
- Protect the display unit from static, water, oil and dust, since it has a precision printed wired board.
Do not touch the leads on the printed wired board and the printed wired board surface.
- Do not place the display unit where dust and oil prevail. When the touch switch panel is placed with the face downward, make sure to place it on the soft surface having no dirt/dust.

■ Touch switch panel replacement

● Required items

- Panel protective sheet
- Flat-head screwdriver
- Phillips-head screwdriver


● Remove the touch switch panel procedure

- (1) Perform operation after the protective sheet and the display unit are taken off.
(Follow the instructions on page 6-2, ■ Replacing the panel protective sheet.)

! Handling Precautions

Be careful not to make the display unit, especially the touch switch area, stained and scratched.


- (2) Place the display unit on a flat surface with the rear side up.
Remove the One tail connector (ribbon cable connectors) from the PCB connector.

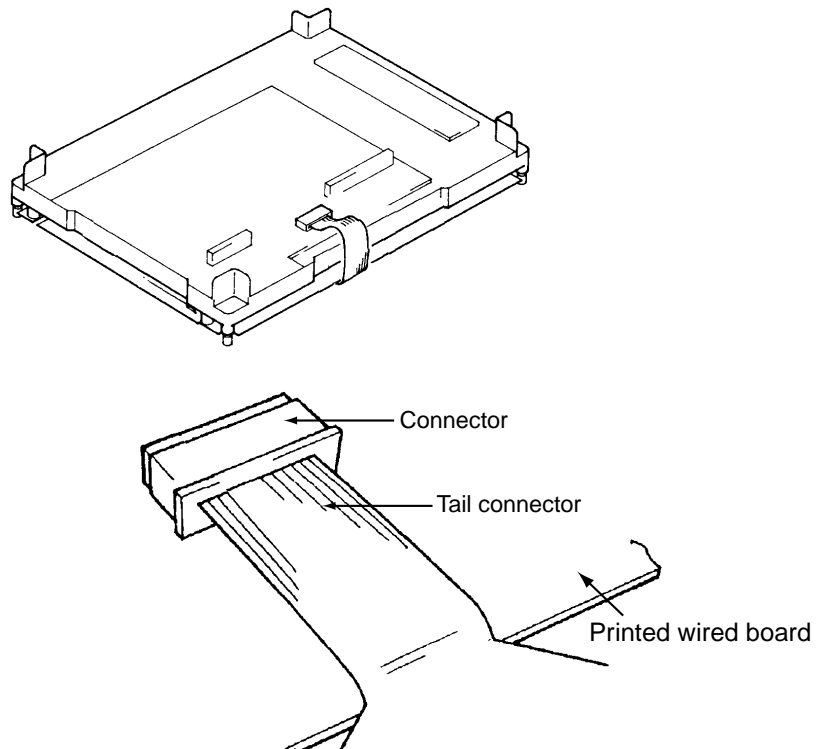

! Handling Precautions

- The touch switch is made of glass. Make sure not to drop it.
- The touch switch, surface of the display devices unit is very sensitive and dirt and oil cannot be removed. Be careful to not get it dirty.

- (3) Slide the connector housing towards the tail connector.

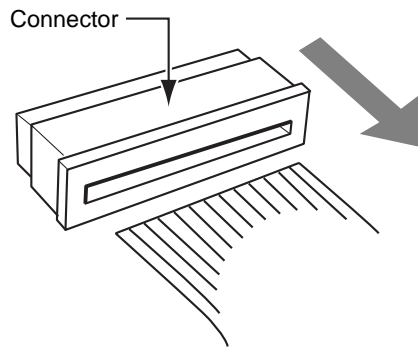


- (4) Slide and disconnect the tail connector.

! Handling Precautions

Do not touch the conductor on the front end of the tail connector to prevent poor contact.

- (5) Place the display unit on a flat surface with the front side up.

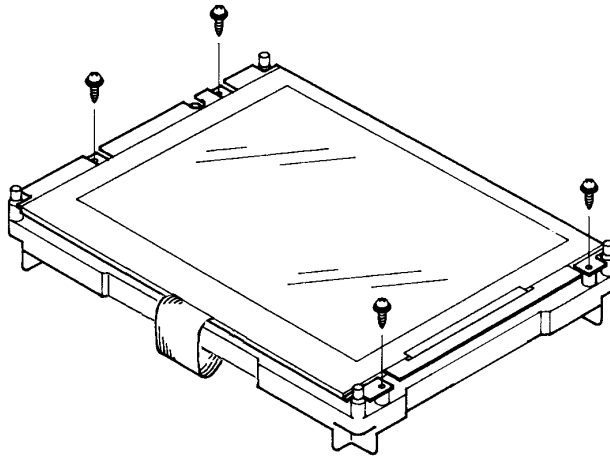


- (6) Remove the four touch switch panel securing screws using a phillips-head screwdriver. Remove the touch switch panel.

! Handling Precautions

Do not lose the removed screws.

● **Mounting the touch switch panel procedure**

- (1) Install the new touch switch panel and secure it with the four screws.
- (2) Place the display unit with the rear panel up.
- (3) Connect the three tail connectors.
Slide the tail connectors into the connector housings.

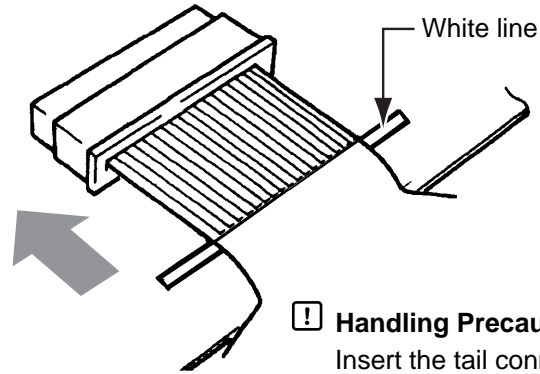

! Handling Precautions

Insert the tail connectors so far into the housing that the light purple and green line portion of the tail connectors is aligned with the white line on the board.

- (4) Slide the connector housings in the direction of the tail connectors to secure them.

■ Backlight replacement

! Handling Precautions

- The touch switch is made of glass. Make sure not to drop it.
- The touch switch surface can be very easily scratched. Once the smear with dirt/dust appears, it can not be removed. Avoid any sticking of dirt/dust.
- The surface of the LCD unit is very sensitive and the dirt and dust cannot be removed.
Be careful not to touch the surface, and protect them from dirt and dust.
- The panel protective sheet that is once removed has no adhesive power. Do not use it again, and replace with a new protective sheet.
- Make sure the panel protective sheet is properly attached as dirt on the side of the adhesive will lower the power of the adhesive and make it impossible to meet its specified drip-proof specifications.
- Protect the display unit from static, water, oil and dust, since it has a precision printed wired board.
Do not touch the leads on the printed wired board and the printed wired board surface.
- Do not place the display unit where dust and oil prevail. When the touch switch panel is placed with the face downward, make sure to place it on the soft surface having no dirt/dust.

● Required items

- New backlight
- New panel protective sheet
- Torque driver for flat-head screws
- Phillips-head screwdriver
- Small flat-head screwdriver

● Replacement procedure

(1) Remove the panel protective sheet.
(Follow the instructions on page 6-2, ■ Replacing the panel protective sheet.)


(2) Remove the display unit.
(Follow the instructions on page 6-3, ■ Replacing the display unit.)

! Handling Precautions


Be careful not to dirty or scratch the display unit, especially the touch switches.

(3) Remove the touch switch.
(Follow the instructions on page 6-5, ■ Touch switch panel replacement.)

- (4) Remove the touch switch and turn over the display unit.
Remove the three connectors as follows:

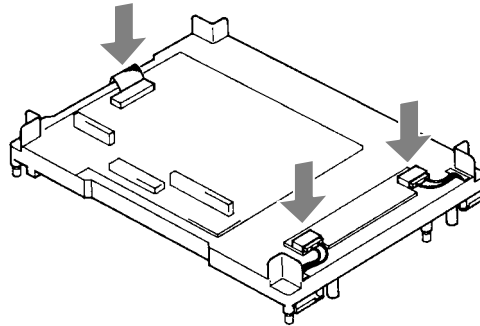


- (5) Turn over the display unit back to the previous condition and take off 4 fastening screws.

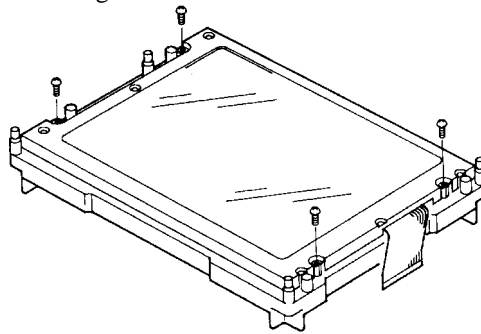


! Handling Precautions

Do not lose the removed screws.

- (6) Remove the LCD panel and turn it upside down.
(7) Remove the 2 screws that secure the backlight with a small screwdriver.

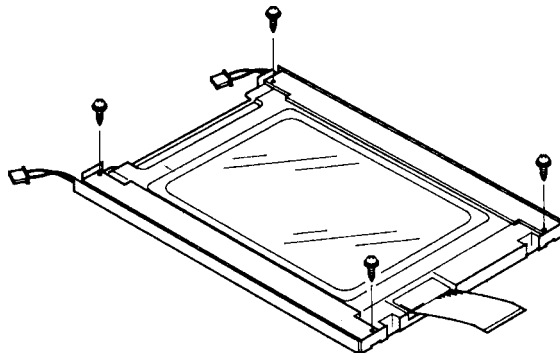



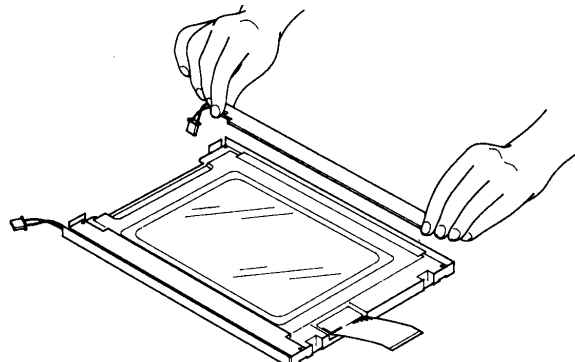

- (8) Remove two backlights from the top and bottom of the panel.



- (9) Install the new backlight and secure it with the 4 screws.
- (10) Place the display unit with the display side up and secure it with the 4 screws.
- (11) Turn over the display unit and insert the 3 connectors removed in Step (2) above. Be sure to lock the flexible board connector at both ends.
- (12) Place the display unit with the display side up and secure the touch switch panel with the 4 screws.
- (13) Install the touch switch panel.
Follow the instructions on page 6-5, ■ Touch switch panel replacement.
- (14) Install the display unit in the body.
Follow the instructions on page 6-3, ■ Replacing the display unit.
- (15) Attach the panel protective sheet.
Follow the instructions on page 6-2, ■ Replacing the panel protective sheet.

■ Battery replacement

CAUTION

-  Do not throw used batteries into fire or discard. If you discard them at your site, follow regulations and rules stipulated by your local self-governing body.
-  Do not short-circuit the batteries as they may over heat or catch fire, also do not expose them to water.
-  The display unit is made of sheet metal.
Be careful not to be injured by the sharp edges.
-  When replacing the battery, make sure to replace the battery within 10 minutes after the electrical charging of at least 30 minutes. Otherwise, the functions hereunder may return to the initialized data or may be lost if the replacement takes more than 10 minutes.
 - When time, user touch switch adjustment value and backlight candela value return to the initialized data, make sure to reset them.
 - The trend data disappears.
 - The recipe data changed in the EST becomes disabled.
If the “application upload” is made by the AP Editor, the change to memory in the EST is reflected.

Handling Precautions

- The touch switch surface can be very easily scratched. Once the smear with dirt/dust appears, it can not be removed. Avoid any sticking of dirt/dust.
- The panel protective sheet that is once removed has no adhesive power. Do not use it again, and replace with a new protective sheet.
- Make sure the panel protective sheet is properly attached as dirt on the side of the adhesive will lower the power of the adhesive and make it impossible to meet its specified drip-proof specifications.
- Protect the display unit from static, water, oil and dust, since it has a precision printed wired board.
Do not touch the leads on the printed wired board and the printed wired board surface.
- Do not place the display unit where dust and oil prevail. When the touch switch panel is placed with the face downward, make sure to place it on the soft surface having no dirt/dust.
- When dismantling the battery, make sure not to damage the battery holder and surrounding area. Carefully avoid any injury during the battery replacement.

● **Required items**

- New battery
- New panel protective sheet
- Flat-head torque driver
- Small flat-head screwdriver


● **Replacement procedure**

- (1) Remove the panel protective sheet.
(Follow the instructions on page 6-2, ■ Replacing the panel protective sheet.)
- (2) Remove the display unit.
(Follow the instructions on page 6-3, ■ Replacing the display unit.)


! **Handling Precautions**

Be careful not to make the display unit, especially the touch switch area, stained and scratched.


- (3) Place the display unit on a flat surface with the rear side up.

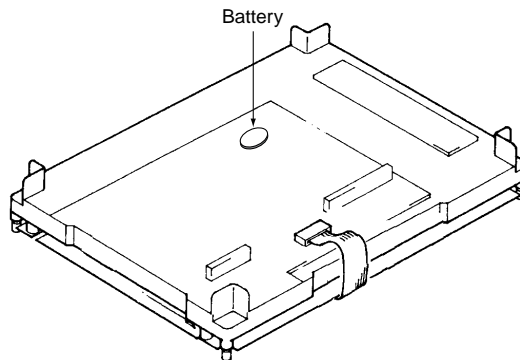


- (4) Lift the battery from battery holder.

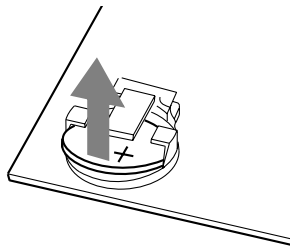

- (5) Pull the battery off from battery holder.

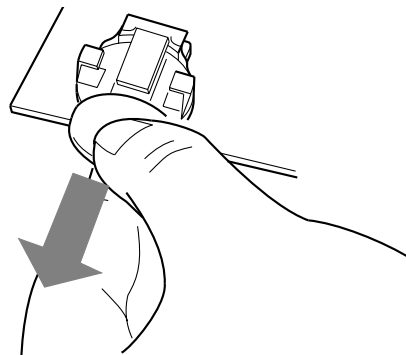

(6) Fit the new battery into the battery holder with the positive side (+) up.

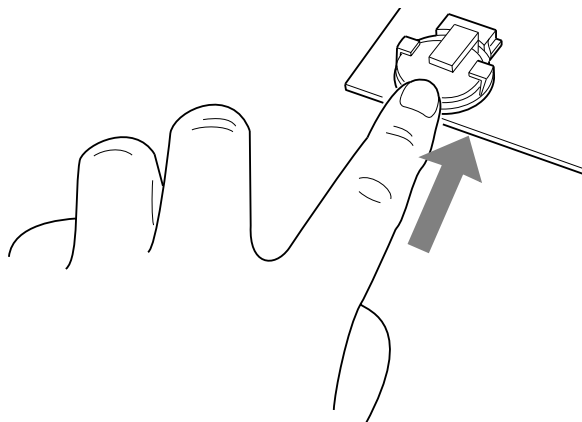

(7) Install the display unit.

(Follow the instructions on page 6-3, ■ Replacing the display unit.)

! Handling Precautions

Be careful not to make the display unit, especially the touch switch area, stained and scratched.

(8) Attach the new panel protective sheet, and remove the thin plastic film on the surface.

(Follow the instructions on page 6-2, ■ Replacing the panel protective sheet.)

6 - 2 Inspections

WARNING



Be sure to turn off the power before maintenance and inspections of the EST. Otherwise, electric shock hazard could occur.

This section describes inspections that should be performed regularly.

■ Notes on inspections

- Do not use organic solvents or alkali for cleaning.
- Tighten terminals and screws to specified torque.

■ Inspection procedures

● Condition of installation

Check points	Check	Correction
Metal fittings, power supply terminals, connector connections and connector securing screws	All screws must be properly tightened and all connectors and terminals properly connected.	Tighten or correct as necessary.
Ambient temperature and humidity Environmental conditions	Temperature and humidity must be within the prescribed range. There must be no corrosive gas, dust or condensation.	If the temperature is too high, install a fan to lower the temperature. Adjust environment to ensure proper ventilation.
Panel protective sheet	The display should be easy to view. The panel protective sheet must be properly attached. There must not be any dust on the panel protective sheet.	Wipe the panel protective sheet with a soft damp cloth or use a soft brush. If required, replace the panel protective sheet.
Power supply voltage	The power supply voltage must be within the following ranges AC power supply: 85 to 132Vac DC power supply: 21.6 to 26.4Vdc	Check the power supply, power voltage and wiring.
Battery life	The battery must be less than 5 years old. No battery alarms should have been generated.	Battery replacement.
LCD display	Display should not be dark It is correctly lighting	Replacement of backlight Consult a Yamatake salesman if no improvement is made after replacement.

Chapter 7. TROUBLESHOOTING

7 - 1 Error messages and Countermeasures

The error messages of the EST and the counter measures are as follows:

Message	Cause	Measure
CHx communications error	<ul style="list-style-type: none"> • The settings (node numbers, communication baud rate, communication format, etc.) of the application program and of the connected equipment do not match each other. • Incorrect connections, broken cables, noise. • Reading or Writing of such sorts that are prohibited in the connected equipment.* 	<ul style="list-style-type: none"> • Confirm node number, communication speed and communication format • Confirm wiring • Confirm addresses of mating devices
Too many smart objects used, Can NOT display correctly	Too many smart objects being used	Reduce the number of smart objects used. Press anywhere on the touch switches for more 5 seconds to clear the error display.
Display buffer memory full, Can NOT display correctly	Too many trend graphs and variable length character string data	Reduce the number of trend graphs or variable length character string data. Press anywhere on the touch switches for more 5 seconds to clear the error display.

* Unreadable or unwritable address, writing of value that exceeded the min. or the max. value

Handling Precautions

- In the following cases, check the "Application info." in the system menu.
 - Operation does not start, though it is in "Auto Run Mode".
 - Operation does not start after pushing the [Start application] button. If there is any incorrect application data, [Apli data not found.] is displayed. Then, download the application data again.
- If there is any system error during operation, the initial screen, which is normally shown only at the first startup, may appear. Should this happen, please contact us.
- There is a battery alarm indication on system screen. If the battery alarm indication is necessary, it can be displayed by the application program.
- The battery alarm is shown in the system screen. The display setting can be made with the application program.

7 - 2 Checks to be Performed in the Event of a Problem

Symptoms	Check points	Checks
The backlight does not go on.	Power supply	Is the correct voltage being supplied?
	Application data	Is the backlight set to OFF?
No data is displayed.	Download	1. Has the system been downloaded? 2. Has the application been downloaded? 3. Was the download correctly completed?
	Temperature	Is the ambient temperature too low?
	Power supply	Is the correct voltage being supplied?
Display is faded.	Panel protective sheet	Has the thin protective film on the panel protective sheet been taken off completely?
Download cannot be performed.	Cables	Are the cables connected to the correct communication ports on the PC?
EST and PLC communications not possible.	PLC	Are the node no., baud rate and checksum of the communication module correctly set?
	EST	Are the communications settings correct?
	Application data	Are the device settings of the smart objects, communications port and node no. settings correct?
Switches do not respond.	Damage	Are the touch switches damaged? *
	Application data	Are the device settings of the smart objects, communications port and node no. settings correct?
Communication is impossible by IrDA	Environment	Is the distance between the EST and the personal computer appropriate? (Proper distance: 40 to 100 cm) Is there any disturbing light coming in?
	PC	Is the IrDA effective? *
	Version	Is the version of the EST system screen coping with IrDA? *

* For more detailed information, please refer to the following manual:
EST-Z Series User's Manual Application Preparation, Manual No.CP-SP-1088E

Handling Precautions

- When the instrument is powered up after having been left in a cold location, the display will remain dark for about 10 minutes. When the instrument is used in a cold environment, the display change takes time and an after image remains. These are only characteristics of the LCD and not a malfunction.
- Visibility and color of LCD differ according to the view angle, this is not a malfunction.
- There may be some permanently lit/unlit pixels, this is not a fault.
- Interference fringes like a rainbow may appear on the touch switch surface, but this is not a malfunction. (This is called a Newton-ring, and appears according to the little change of the gaps between touch switches.)
- The areas around the perimeter of the screen may be whitish, but this is not a malfunction. (This is due to the backlight.)

Chapter 8. DISPOSAL

⚠ CAUTION

When you discard the EST, discard it as industrial waste, following regulations and rules stipulated by your local self-governing body.

Chapter9. SPECIFICATIONS

9 - 1 General Specifications

■ Electrical specifications

Items	Specifications	
Model No.	EST0555Z01 □ EX00 EST0555Z01 □ ES00 *	EST0555Z05 □ EX00 * EST0555Z05 □ ES00 *
Power supply voltage	85 to 132Vac 50/60Hz	24Vdc ±10%
Current	50VA or less	2A or less
Allowable transient power loss	20ms max.	–
Dielectric strength	1500Vac for 1min (Power supply - FG, 100Vac/power ON)	500Vac for 1min (Power supply - FG, 24Vdc/power ON)
	500Vac for 1min (Signal cables - power supply /FG)	
Insulation resistance	500Vdc, more than 10MΩ (Power supply - FG, signal cables - power supply /FG)	
Grounding	Less than 100Ω	

□ B:Black model / W:White model

* The memory card function will be added shortly and the 24Vdc power supply models of is to be sold in the near future.

■ Environmental specifications

Items	Specifications
Operating temperature range	0 to 50 °C
Storage temperature range	–20 to +60 °C
Operating humidity	30 to 85 %RH (non-condensing)
Storage humidity	30 to 85 %RH (non-condensing)
Operating atmosphere	No presence of corrosive gas
Vibration resistance	Conforms to JIS C0911, the equipment is exposed to 10 to 55Hz vibrations, 9.8m/s ² in X, Y and Z directions, single sweep: 6 minute., 2 hours in each direction
Impact resistance	Conforms to JIS C0912: 98m/s ² for 20ms or less
Noise resistance	AC power supply :1200V, DC power supply :1000V Using impulse noise simulator (50 to 1000ns)
Degree of protection	IP64 (dust-protected, water-proof)

■ Mechanical specifications

Items	Specifications	
External dimensions	250(H) X 295(W) X 98.5(D) [mm]	
Mass	Approx. 2.7kg	
Mounting structure	Vertical panel mounting	
Cooling	Natural convection	
Torque screws	Power, parallel output, CH2, rear cover	Recommended torque: 1.2N·m
	CH3, CH4	Recommended torque: 0.5N·m
Tightening of EST mounting bracket*	Turn screws an extra half to 1 turn when the EST is seated.	

* If the screws are tightened too strongly, the EST may be damaged.

9 - 2 Performance Specifications

Items	Specifications
Display device	Color TFT LCD 10.4
Display color	256 colors BMP(images)*1 / 64 colors(smart objects)
Effective display area	211 X 158
Display characters	16 X 16 pixels : 40 characters X 30 lines
Resolution	640 X 480
Service life of LCD	Approx. 50,000h *2
Service life of backlight	40,000h typ *3
Type of touch switches	Transparent resistor membrane (analogue)
Service life of touch switches	1 million times
Material of panel protective sheet	PET
Clock precision	±120s/month (Ta = 25°C)
Battery life	3 years (Ta = 25°C)
User memory	2M bytes (program) 512K bytes (back-up RAM)
Communication port	Infrared (IrDA) *4, RS-232C X 1ch, RS-485 X 1ch RS-485 half-duplex X 2ch
Others	2 digital outputs, buzzer

*1: 256 color display may flicker depending on the colors.


*2: The service life is estimated at (25°C, 65%) and is not a guaranteed value.

*3: The time until the brightness goes down to 50% at the normal temperature and humidity (25°C, 65%).

*4: The area in which communications are possible, is as per the following diagram:

However, it may change depending on the performance of communication mating between devices. Also, communication may not be feasible due to the effects of disturbance light such as reflected light.

Minimum half angle ±15°
Communication distance 40 to 100cm

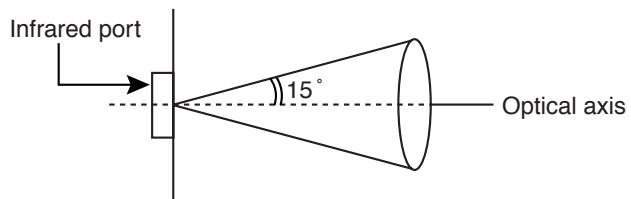

9 - 3 Interface Specifications

■ Interface specifications




Channel	Interface	Communication speed [kbps]	No.of units to connect	Transmission distance [m]	Notes
CH0	Infrared communication	4800 to 115200	1	1	Front (conform to IrDA1.0)
CH1	RS-232C based	600 to 115200	1	15	DSUB 9 pins (SD, RD, RS, CS)
CH2	RS-485 based (full/half duplex)	600 to 115200	31	1000	M4 terminal block
CH3	RS-485 based (half duplex)	600 to 38400	31	1000	M3 terminal block
CH4	RS-485 based (half duplex)	600 to 115200	31	1000	M3 terminal block

■ DC input/output interface specifications

Power supply voltage	Level H	Level L	Input/Output current
4.5 to 27.6Vdc	Leakage current max. 100 μ A	max. 0.5V	max. 10mA

9 - 4 External Dimensions

Unit : mm

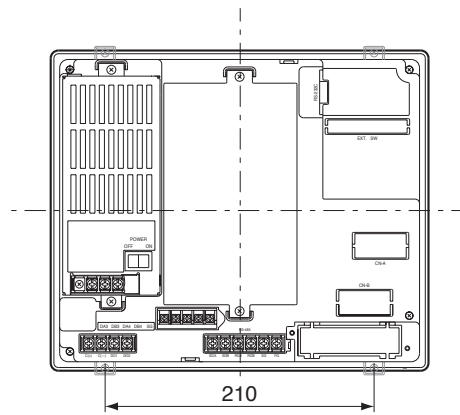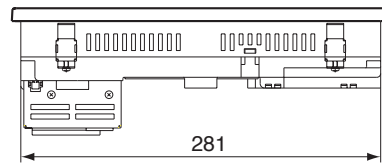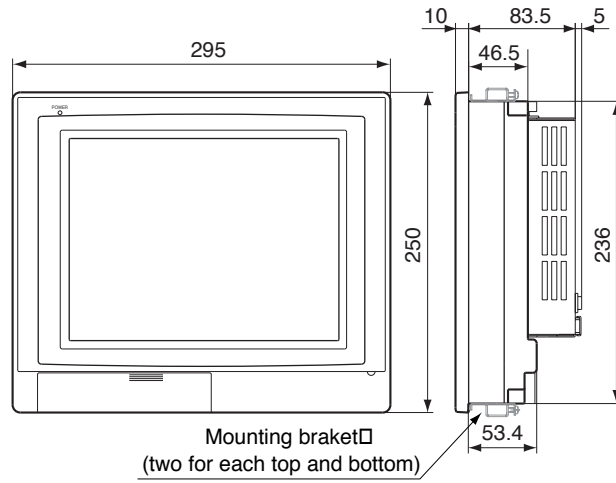

Index

-A-
Accessories 1-1
AP-Editor 1-1
Application info 4-14
Automatic run start 5-2

-B-
Backlight replacement 6-8
Battery replacement 6-11

-C-
Cable 1-1
Case packing 2-1
CH1 Signals 4-5
CH2 Signals 4-6
CH3,CH4 Signals 4-8 4-9
Clock setting 4-18
Communication conf. 4-16
Communication port 1-2
Configuration example 1-2
Connection point 4-2
Connection with full-duplex device 4-6
Connection with half-duplex device 4-7
Crimp type terminal lug 4-2

-D-
Display device 2-1
Display test 4-20
Display unit 6-3
Disposal 8-1
Door 2-1
Downloading 5-1
Downloading the system 4-11

-E-
Error messages 7-1
Error reset 4-19
External dimensions 9-4

-F-
Frame ground 4-4
Function of the buttons 4-12

-H-
Horizontal installation 3-2

-I-
Infrared communication port 2-1
Inspections 6-14
Installation environment 3-1

Installing the power supply unit 3-5
Interface specifications 9-3

-M-
Maintenance 6-1
Maintenance parts 1-1
Material 2-2
Memory card 4-19
Memory card slot 2-1
Memory switch conf. 4-15
Memory test 4-21
Menu items 4-12
Mode indicator lamp 2-1
Model Numbers 1-1
Mounting bracket 1-1, 3-3

-O-
Oblique installation 3-2
Optional parts 1-1
Optional start 5-2

-P-
Panel cu-tout dimensions 3-3
Panel protective sheet 1-1
Panel protective sheet 2-1, 6-1, 6-2
Parallel output Connection 4-10
Parallel output terminal 2-1
Power supply connection 4-4
Power supply terminals 2-1
Power supply unit 2-1, 3-4
Power switch 2-1

-R-
RS-485 terminal 2-1

-S-
Self-Diagnostic 4-20
System menu 4-12

-T-
Terminal cover 2-1
Terminating resistor 4-6, 4-7, 4-8, 4-9
Tighting torque 4-2
Touch switch adjustment 4-22
Touch switch panel 2-1
Touch switch panel replacement 6-5
Touch switch test 4-21

-V-
Version warning 4-13

Specifications are subject to change without notice.

YAMATAKE

Yamatake Corporation

Control Products Division

Sales contact: Yamatake Corporation,

IBD Sensing and Control Department

Totate International Building

2-12-19 Shibuya Shibuya-ku Tokyo 150-8316 Japan

Phone: 81-3-3486-2380

Fax: 81-3-3486-2300

This has been printed on recycled paper.

Printed in Japan.
1st Edition: Issued in Nov., 2001(C)