

## Software get red-y 5 Operating instructions



get red-y

File Extras ?

Connection Overview Adjustment Data logging Parameter

get red-y  
flow measuring & control software by vögtlin

Search devices:  
Choose serial interface and start search

Press F1 to open the included manual.

Used interface:  
COM4 ?

Start search Stop search

On	Addr	Serial no.	Type-Code	Gas	Reading	Setpoint	Unit	Temp.	Unit	Total	Unit
on-	247	131703	GSM-B5SA-BN00	Air 5	0,0	---	l/min	27,6		2270,12	l
on-	2	131966	GSC-B5SA-BB26	Air 5	0,0	0	l/min	25,7		505,39	l

Loaded:voeRedy.INI License:Dongled

# Operating software for the thermal mass flow meter and controller *red-y smart series*

# **Get red-y 5 software operating instructions**

Operating software for the thermal mass flow meter and controller  
*red-y for gasflow*



Version: **get\_redy\_E1\_2**

For the latest information on our products, see our website at [www.voegtlin.com](http://www.voegtlin.com)

© 2011 Vögtlin Instruments AG, Switzerland

## Copyright and Liability Disclaimer

All rights reserved. This publication or even just parts of it may not be reproduced without prior written permission of the publisher.

The contents of this instruction manual are intended exclusively for information purposes. Vögtlin Instruments AG assumes no responsibility or liability for any errors or inaccuracies in this publication.



This symbol alerts the user to important operating, maintenance and service information.

### Subject to change

Due to our policy of ongoing product development, we reserve the right to change the information in this manual without prior notice.

# Contents

<b>1. Introduction</b>	<b>5</b>
1.1 System requirements	5
1.2 What we supply	5
Software / Software modules	6
<b>2. Setting Up the Workstation and Software</b>	<b>7</b>
2.1. Installation	7
2.2 Setting up the RS485 interface	9
2.2.1 Driver software	9
2.3 Setting up the <i>get red-y</i> 5 software	10
<b>3. Functions</b>	<b>16</b>
3.1 General	16
3.2 Tabs	17
3.2.1 Connection Tab	17
3.2.2 Overview Tab	17
3.2.3 Adjustment tab	18
3.2.4 Parameters Tab	21
3.2.4.1 Alarm Settings	21
3.2.4.2 Measurement Range	23
3.2.4.3 Display filter	25
3.2.4.4 Analog signals	26
3.2.4.5 Tools	28
3.2.4.6 Backup	29
3.2.4.7 Profibus	31
3.2.4.8 Pressure controller	33
3.2.4.9 Copying Gas Records	39
3.2.5 Data Logger Tab	40
3.3 Menu	47
3.4 Licenses	47
3.5 License Dialog (License center)	48
<b>4. Instructions with concrete example</b>	<b>49</b>
Adjustment	49
<b>5. Appendix</b>	<b>57</b>
Abbreviations	57
<b>6. Change history</b>	<b>58</b>

# 1. Introduction

The *get red-y 5* software is a parametrizing and operating software for mass flow meters and mass flow controllers as well as for pressure controllers of the *red-y smart series* of *Vögtlin Instruments AG*.

Several devices can be addressed on one interface via a suitable communications connection (such as e.g. RS485).

Additional functions/modules can be activated via a licensing system (see Chapter 3.4 and 4.5). *get red-y 5* control elements will be highlighted in this document with square brackets.

## 1.1 System requirements

Operation of the *get red-y 5* software requires at least:

### Hardware:

- 800 MHz or faster processors
- 256 Megs RAM or more
- 25 Megs free hard drive space
- CD-ROM or DVD drive or an Internet connection for downloading
- Graphics card with 16 bit color resolution and a monitor with 800x600 resolution or higher

### Operating system:

- The software has been developed and tested for the Windows 2000/XP/Vista/Windows 7 operating systems.

### Interfaces:

- The software supports the RS232 and RS485 interfaces



The user-defined text size (DPI) and other elements on the screen must be set to 100% (default) so that the software is properly displayed. Other settings are not supported by the *get red-y 5* software.

## 1.2 What we supply

### Hardware accessories for connection to a PC (one device):

1 PDM-U USB-RS485 Adapter	Item No. 328-2169
1 AC adapter plug PSD	Item No. 328-2234

For additional accessories for operation with more than one device on a bus see „*Cable accessories for red-y smart series*“, datasheet 329-2014.

**Supplied Software:**

The software can be downloaded from the Internet:

<http://voegtlin.sharepointhosting.ch/DOCUMENTS/Forms/SoftwareRedy.aspx>

The software is also on each CD-Rom, which comes supplied with the devices.

Get red-y 5 has been divided into different access levels –Functions/Modules.

The *Basic* functions/modules from Table 1 are available to standard users. The additional functions can be activated via a *USB-Dongle* (available for fee).

Software / Software modules	Basic	Data logger module	Calibration module	Adjusting module
Display device information such as reading, temperature, valve voltage	●	●	●	●
Totalizer	●	●	●	●
Specify setpoint & adjust control speed	●	●	●	●
Assign device name	●	●	●	●
Switch units of measurement	●	●	●	●
Visualize & adjust PID parameters / Graphic tool	●	●	●	●
Operating state monitoring	●	●	●	●
Zoom-Function <i>(Enlarging screen display of momentary flow rate for all connected instruments)</i>	●	●	●	●
Switch analog signals	●	●	●	●
Reset totalizer	●	●	●	●
Save & restore device data	●	●	●	●
Update device firmware <i>(Only with day password)</i>	●	●	●	●
Registertool <i>(Only with day password)</i>	●	●	●	●
Adjust display filter		●	●	●
Log measurement data		●		
CSV export of logged measurement data		●		
Define process profiles		●		
Set full scale of measurement range			●	●
Set dynamic range			●	●
Verify calibration			●	●
Manual adjustment				●
Automatic adjustment <i>(Requires a red-y smart reference device)</i>				●
Copy gas data sets				●

Table 1: The get red-y software is divided into Functions/Modules, which offer a variety of possibilities

## 2. Setting Up the Workstation and Software

The following components must be available for startup:

- Computer
- Communications cable *PDM-U USB-RS485 Adapter*
- 24V power supply
- Instruments or Controllers *smart 3, smart 4*

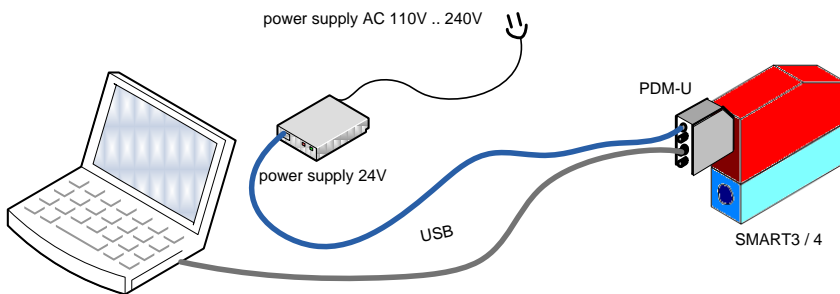


Figure 1: Structure of the workstation

### 2.1. Installation

Using *get-red-y* requires a one-time installation of the software on your PC.

The *setup.exe*-file is located in the Program directory.

setup.exe


01.11.2010 14:15

Figure 2: Directory structure in the *get red-y 5* Directory


#### 2.1.1 Running Installation

Please exit all opened programs before you begin installing.


1. Double-clicking on *setup.exe* starts the installation process. The installation start-up process allows you to define the language. The User manual will be installed in the language you select. The language of the software can be changed during operation. Select the language and then press the [OK] button to run the installation process.

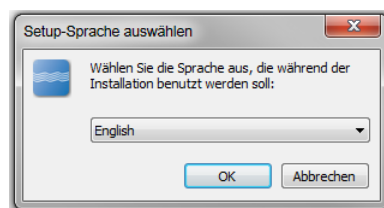


2. The Welcome screen appears. Click [Continue].

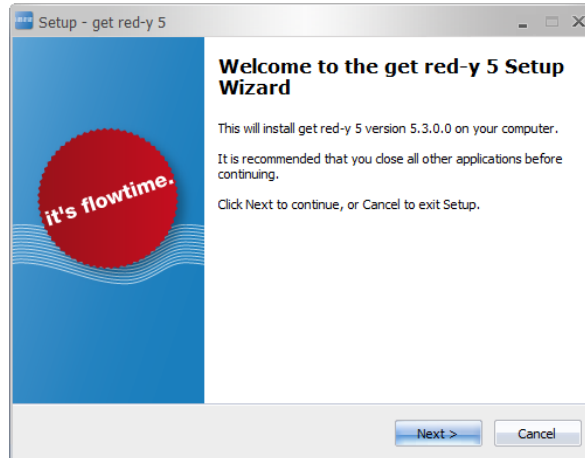

3. The License Agreement appears. After carefully reading the agreement, choose „I accept the agreement“ and click the [Continue] button.
4. The menu for the Target folder appears. To choose a different *Target path*, click the [Browse] button to define your target folder.

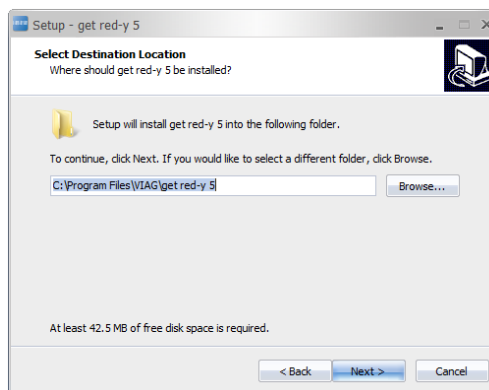

5. Click [Continue]. The *Select Start Menu folder* menu appears. Setup will create the program shortcut in the Start Menu folder of Windows unless you have not changed the path. This folder has links to the User manual, to the get red-y 5 software, for uninstalling the software and a link to the website of *Vögtlin Instruments AG*. You will find detailed information about our products here.

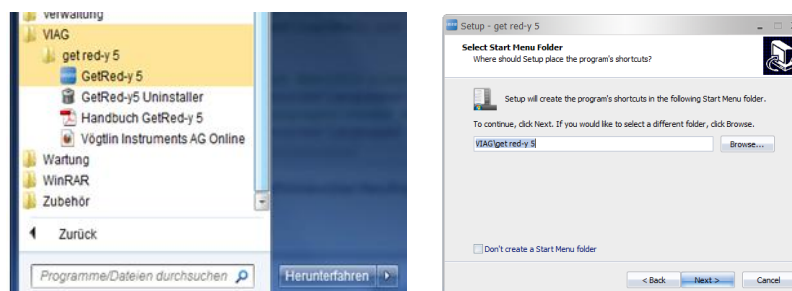

6. Click [Continue]. The *Select Additional Tasks dialog box* appears. Here you can create desktop shortcuts to *get red-y 5* and register file extensions.
7. Click [Continue]. The *Perform Installation dialog box* appears. This dialog box displays all the steps to be performed during installation. Click [Back] if you want to change the settings in the previous dialog boxes.
8. Click [Install] to perform the installation. Once the installation is complete the [Exit] dialog box appears. Press [Finish]. The *get red-y 5* files have been successfully installed.

## 2.1.2 Contents of the Installation directory

Directory	Content
/lookup	Files for adjustment of the devices. Please do not edit
Bedienungsanleitung getRed-y_de.pdf	User manual for <i>get red-y 5</i>
EULA_DE.rtf	License agreements
Readme_de.rtf	User instructions for <i>get red-y 5</i>
unins000.exe	Uninstall file. Double-click to begin uninstalling
voeRedy.exe	Executable file. <i>get red-y 5 Software</i>
voeRedy.INI	Software settings and device settings are stored in this file. Please do not edit

Table 2: Contents of the Installation directory

## 2.2 Setting up the RS485 interface

A connection to the device can be made via an USB – RS485 adapter.

Vögtlin Instruments AG offers an adapter to the *smart* devices which is geared to the requirements.

A female connector on the D-Sub plug is used to feed the 24V supply voltage.

### 2.2.1 Driver software



Before the USB connector can be connected to the computer the driver software for the RS485 product must be installed. In the case of Windows 7 the driver will be automatically installed if an Internet connection exists. The *Vögtlin Instruments AG* installation CD contains one driver. The user must make certain that the driver is compatible with the operating system. You can find the driver software for the PDM-U USB-RS485 adapter on the *Vögtlin Instruments* website under <http://voegtlin.sharepointhosting.ch/DOCUMENTS/PDM-U.zip>


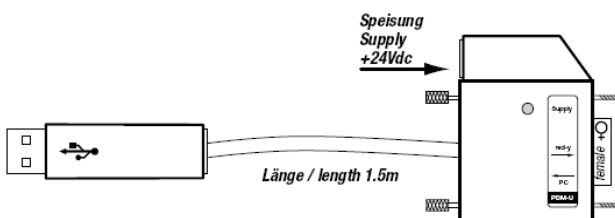


Figure 3: PDM-U USB-RS485 Adapter

## 2.3 Setting up the *get red-y 5* software

### 2.3.1 Starting the software

Double-click the Desktop icon or the program shortcut in the Start menu folder starts *get red-y 5*. The *get red-y 5* software has many functions activated for standard users (Basic) activated (see Table 1 on Page 6)

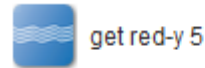

### 2.3.2 USB-Dongle

If you purchased one more licenses, plug your personal *Dongle* (key) into a free USB slot. This activates the optional functionalities / modules in *get red-y 5*.



Figure 4: Dongle for activating optional functionalities/modules

### 2.3.3 Setting the port

Use the selection list (1<sup>st</sup> port) above in the center select the COM port . Figure 5 shows an example with the port set to COM 4.

Devices List

Status Dongle

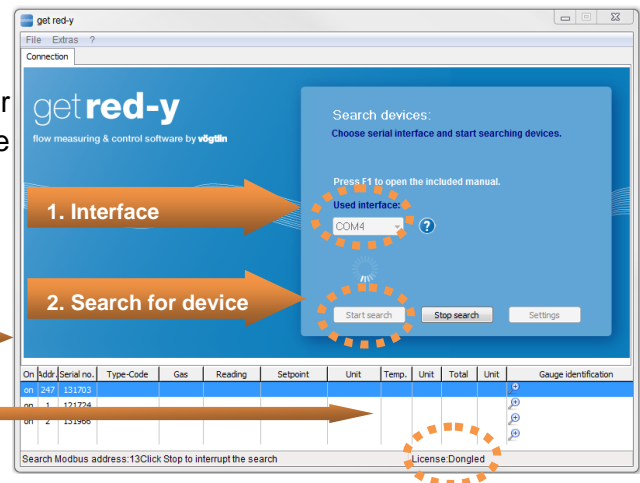


Figure 5: Setting the port

The software has been activated by a *USB-Dongle*. For more information see Chapters 3.4 and 3.5.

### 2.3.4 COM-Port active?

To determine which COM-port in your configuration is active, use the Windows **Device Manager**. You can open the Device Manager either from the Start menu or by clicking the blue question mark in *get red-y 5*.

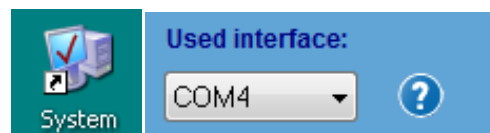


Figure 6: Open the Windows Device Manager via the Control Panel or by clicking the blue question mark in *get red-y 5*

Remove the PDM-U USB-RS485 Adapter in your current configuration. This updates the active COM ports in the Device Manager. The COM port which is deleted in the list is the port which you must enter in the connection parameters. Connect the USB-RS485 adapter again at the same place.

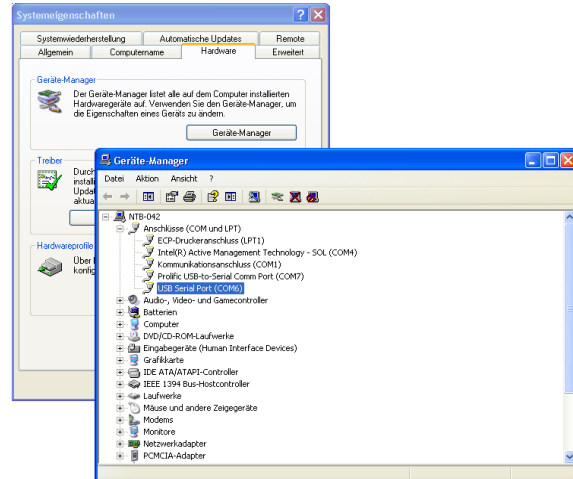


Figure 7: Device Manager for the recognition of the correct COM port

Settings for the port can be made in the Configuration dialog box. To open this dialog, press the [Settings] button in *get red-y 5*.

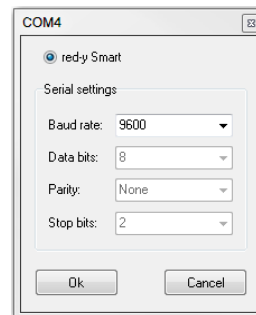


Figure 8: Dialog box for setting the baud rate



**Note:** It is recommended that you do not change the factory setting of 9600 Baud. Please keep in mind that changing the baud rate can have negative effects on the communication between the device and the software. Changes during communication with the device are not permitted. The baud rate in Device and in *get red-y 5* must be set identically.

### 2.3.5 Searching for Devices

After clicking the [Start Search] button the program searches for all the devices and enters those it finds in the Device list. The search goes through all 247 modbus addresses in ascending order.

The search can be ended as soon as all the devices on the bus have been found. Click the **Stop Search** –button to end the search.

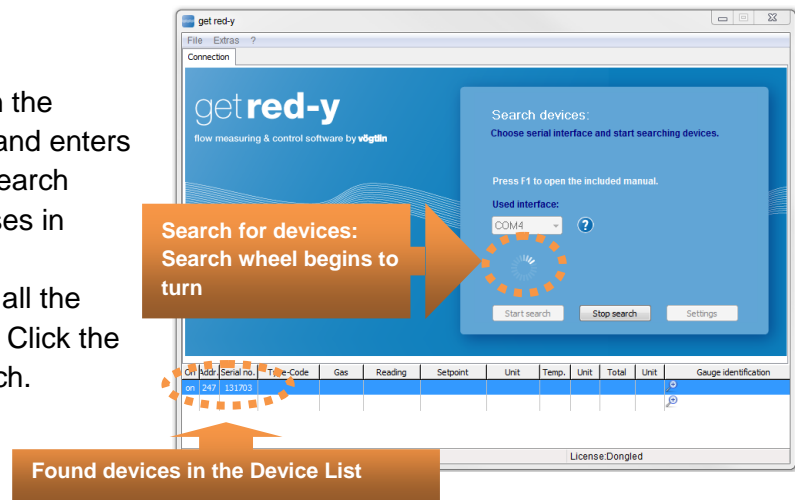


Figure 9: Starting the search for connected devices

By means of *Modbus RTU* one master (e.g. PC or SPS) and several slaves (e.g. field bus devices, MFC/MFM) can communicate via a common communications channel (e.g. RS485). Please note that more than one device cannot have the same address. At the time of delivery all the devices are set to modbus address 247 (Factory setting).

Please connect one device after another and assign the addresses in the correct order.


You can find more information about modbus protocol here: <http://www.modbus.org/>



### 2.3.6 Changing Modbus Address

Select the device to be set to another address from the Device List. Use the right mouse button to open the Context menu for changing the modbus address. Click the [Change Modbus Address] button.

The following dialog box appears.

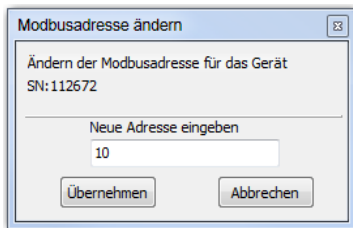

You can assign addresses between 1 and 247. Make sure the addresses are not double assigned. If the addresses are double assigned the data exchange between *get red-y 5* and the devices will be incorrect.

Click the [Accept] button to set the new address.

**!** *Note: Not all functions/modules in the Context menu are available to the standard user (Register tool, Add to Reference list).*

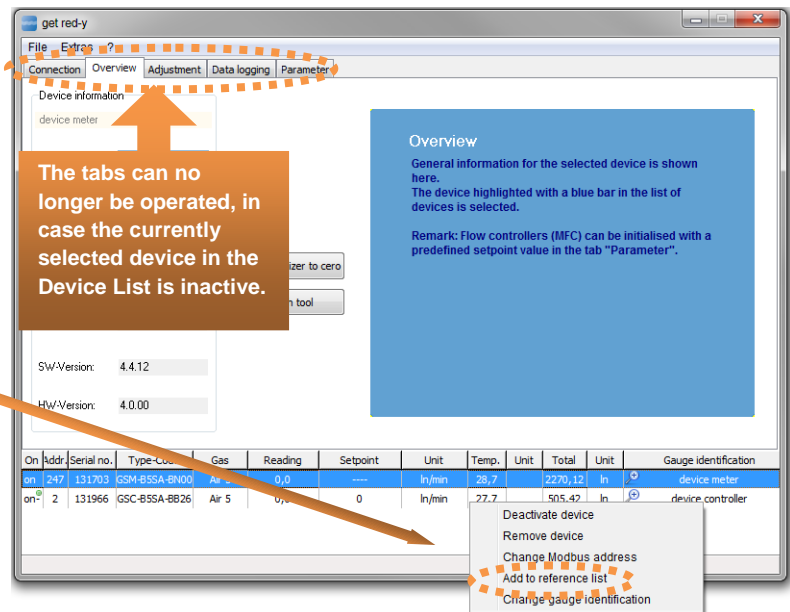


Figure 10: Context menu for the currently selected device

Context menu via right mouse

### 2.3.7 Activating Device

If there are many devices on the same bus it can be advisable to disable the devices which are not currently required (**Off state**). As a result the communication rates of the remaining devices on the bus will increase.

Click the right mouse button within the Device List to display the Context menu in Figure 10. If the device is active (**On state**), you can disable the device by clicking the [Disable Device] button.

Click the Remove Device button to remove a device from Device List. This device will be completely removed from *get red-y 5*. As soon as a connected device is no longer communicating, a message will be generated in about 6 seconds: „ *The Device is not in communication with the red-y 5 software*“. The device will automatically be set to the **off** state.

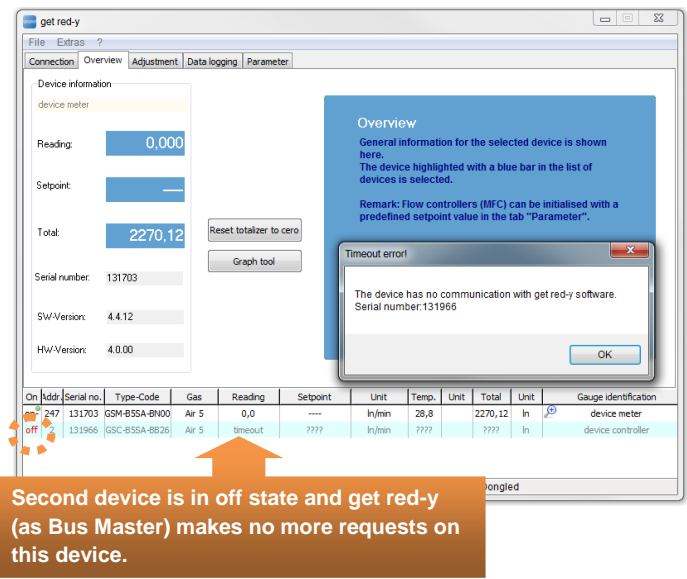


Figure 11: Second device in the Device List is not released (marked light blue in the **off** state). The tabs of this device can no longer be selected, since no information for this device is being loaded via Modbus.

### 2.3.7 Changing Measuring point ID

Select the device from the Device List for which the Measuring point ID is to be changed. The Measuring point ID can be entered as clear text with a maximum of 50 characters. It has no function in the device and serves only informational purposes for the user of the device.

Use the right mouse button to open the Context menu for changing the measuring point ID. Click the [Change Measuring point ID] button. The following dialog box appears in

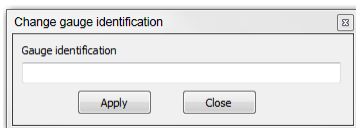


Figure 13. Enter the desired name for the measuring point. Click the [Accept] button to accept the Measuring point ID in the device and display it in the Device List.

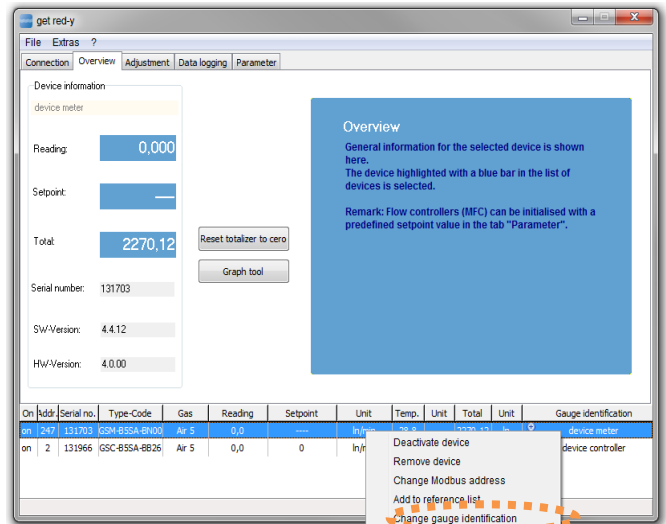


Figure 12: Changing Measuring point ID

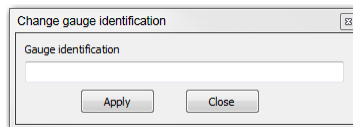


Figure 13: Dialog for changing the Measuring point ID

### 2.3.8 Zoom window

Clicking the Magnifying Glass icon in the Device List opens the Zoom window for the corresponding device. This window displays the actual value of the device in any font size. To make changes in the process, you can also view the actual value changes from a greater distance (see Figure 15). When the window size is changed the font size will be adapted. Four actions can be set for a controller. In Figure 15 you see the Zoom window for a controller with the name „Measuring point 2“.

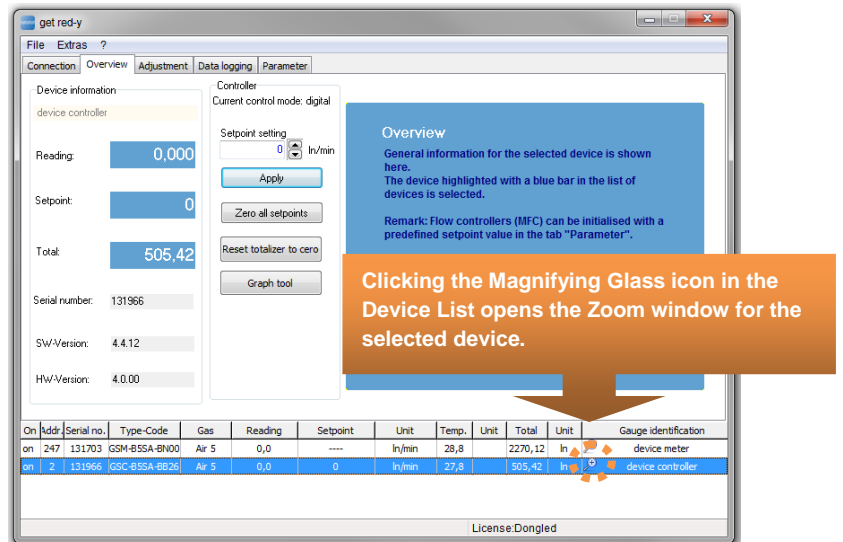


Figure 14: Opening the Zoom window by clicking the Magnifying Glass icon

You can enter a [Low Limit] and a [High Limit]. If you fall below the low limit, the purple bar at the bottom or on the top as in the window for „Measuring point 1“ will indicate this. In addition a [Set point deviation %] can be entered, i.e. the set point and the actual value are compared. In case the deviation is greater than the percentage set point deviation you have entered, this will be indicated by red with a red lower or upper bar.

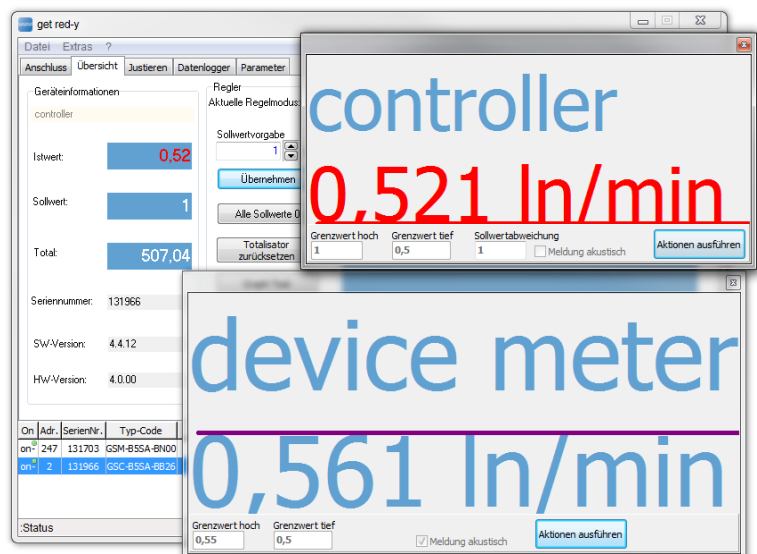


Figure 15: Zoom window for both connected devices

The actions are activated by selecting the [Execute Actions] button or become deactivated by selecting the [Do Not Execute Actions] button.

#### Set-Actual value change:

If the actual value deviates from the set point by 10%, the [Actual value] field in Figure 15 appears in red font. With this the adjustment time is displayed.

## 3. Functions

### 3.1 General

The *get red-y* user interface has 5 „logical subdivisions“ with which it is possible to interact and in which important information can be viewed and changed.

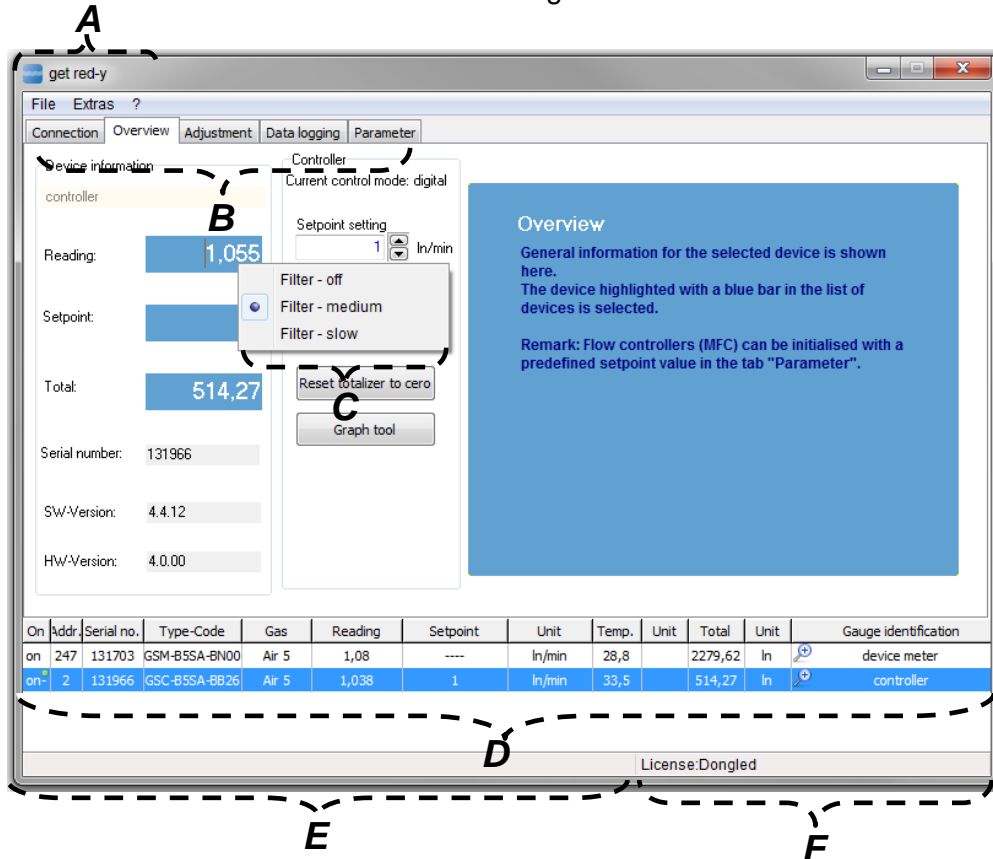





Figure 16: Logical structure of *get red-y* 5 for subdividing the functionalities

- A. Menu:** Basic functions such as Change Language, End Program, Open Manual and Start important Help tools (Register tool, Reference Device list) can be performed in the menu.
- B. Tabs:** Device specific functionalities are subdivided with the tabs and displayed in logical groups.
- C. Popup Menus:** Some places have Popup menus for quick and easy startup of functionalities. You can specify a filter which relates to the software display in the [Actual value] field.
- D. Device List:** The activated device is highlighted with a blue bar. All tabs now relate to this active device. The small green dot  in the Device List indicates the device for which data are being read. The small red  warning icon indicates an alarm state in the device. You can inspect the alarm in the [Parameters] tab. Click the small red  warning icon and you will automatically be taken to a view with which you can inspect the alarm state of the device.
- E. Left Status Bar:** Displays the actions which are being performed by the user or by *get red-y* 5.
- F. Right Status Bar:** Displays the license and the activated option.

## 3.2 Tabs

With Tabs you can select the different Function Ranges/Functionalities. The [Connection] and [Overview] tabs are always available. The remaining tabs are displayed according to the activated functions/modules (*Dongle*).

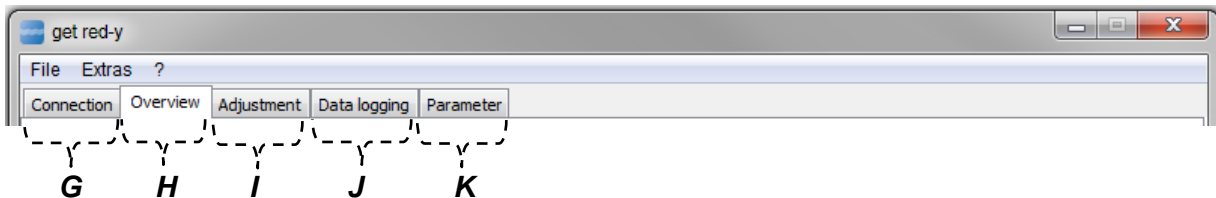


Figure 17: Logical subdivision of the Tabs

- G. Connection-Tab (available by default):** Setting communications parameters and independent search of devices.
- H. Overview-Tab (default):** Tab which displays the main information (Actual-, Set point, Totalizer, SW- and HW-Version) of the currently selected device in the Device List.
- I. Adjustment-Tab (optional):** Adjustment of the devices; see Chapter 3.2.3 and 4.1. (optional)
- J. Data Logger-Tab (optional):** Offers versatile display options and export functionalities in order to graphically represent and save information (e.g. set, and actual value) of devices.
- K. Parameter-Tab (optional):** Tab with which the parameterization of the currently selected device and visual representation of the alarm states of the device are made possible.

### 3.2.1 Connection Tab

This tab contains the parameters required for communication with the device. The first time the software starts up it searches for devices. When the software is started again it first attempts to load the same structure as before. If the software does not find the last connected topology the [Start Search] button must be pressed again in order to find the connected devices. If a device is found, the program automatically switches to the [Overview] tab.

### 3.2.2 Overview Tab

The most important operating parameters of the currently selected device are displayed. (blue highlighted device in the Device List).

For a device with Controller function (MFC, with valve) in Figure 18 left the set point can be entered. With the [Accept] button or with the [Return] button a new set point is communicated to the device.

There is no set point for devices without Controller function (MFM, without valve) in Figure 18 right.

With the [All Set points 0] button all MFCs in the Device List receive the new set point 0. For MFCs and MFMs the [Reset Totalizer] button resets the Totalizer to 0. The new value is then displayed in the Device List in the [Total] column. With the [Graph Tool] button the quality of the control parameter setting for an MFC can be graphically viewed and the parameters can be changed. The progression of the actual value can be viewed for an MFM.

This button always increases or reduces the last digit by one.

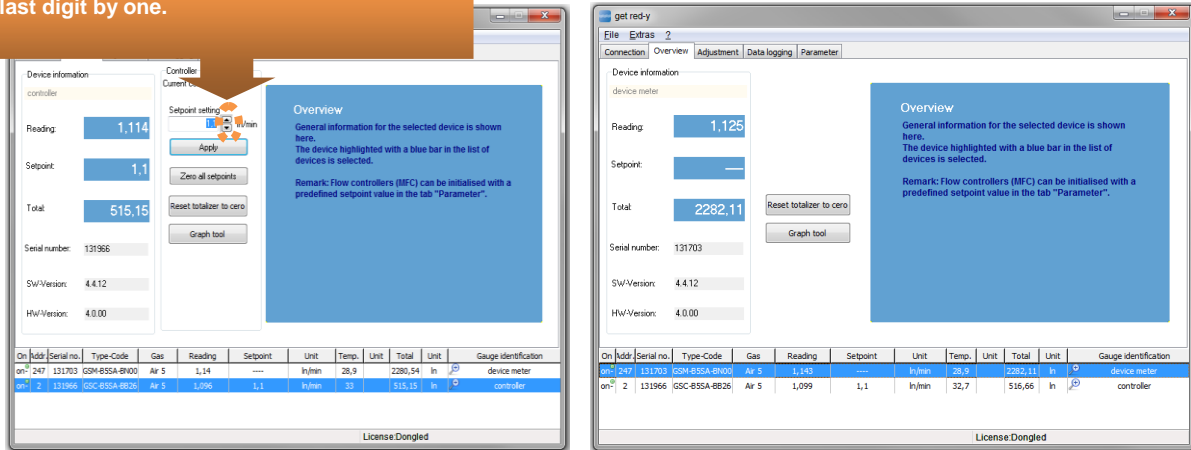


Figure 18: Device view with Controller function (MFC) left and without Controller function (MFM) right.

### 3.2.3 Adjustment tab

**!** Note: This Function/Module is only possible with a valid license.

The Adjustment tab is a tool for adjusting red-y for gas flow devices (smart 3 & smart 4). In the process in a first step the measured values of the device under test and of a reference device are entered in a list (Calibration). After that a correction is calculated (Transfer function), which is saved to the device. In principle an adjustment for each device is identical in structure. Here only the basic functions will be explained. You will find step by step instructions in Chapter 4.1 Adjustment.

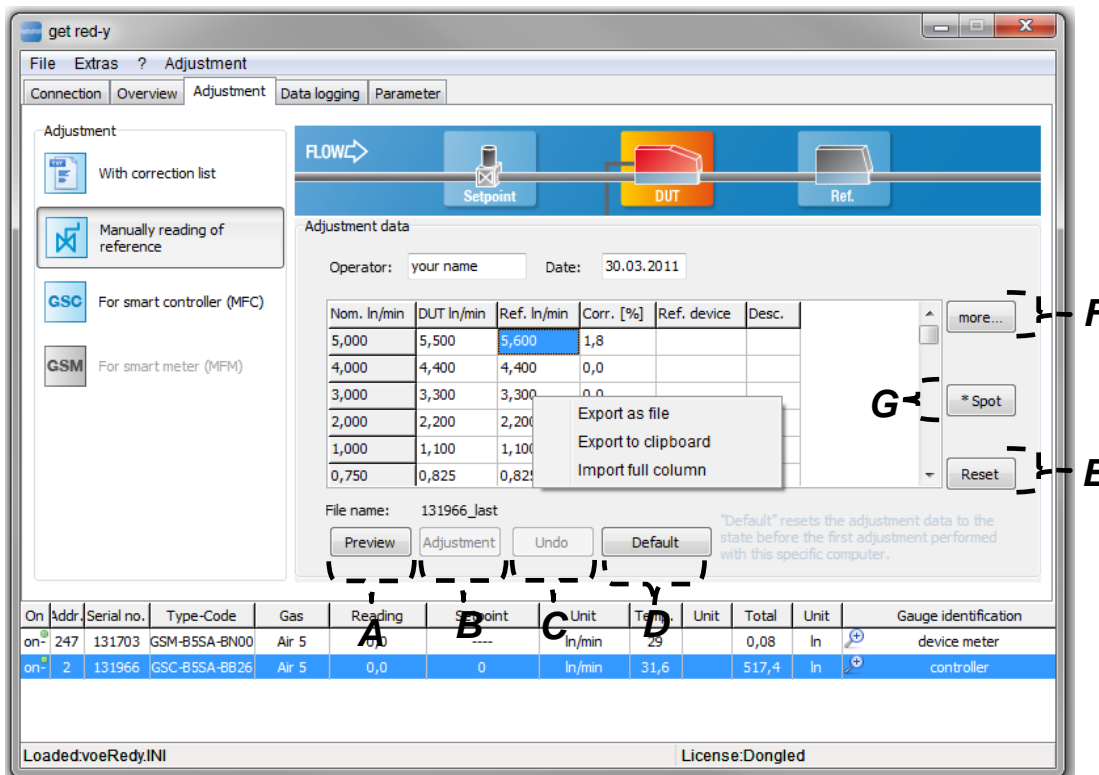


Figure 19: View in Adjustment mode of a smart 4

- A. Preview:** In Preview you can do a preliminary check on an adjustment with the specified measured values. No changes will be made to the device. A new window opens, in which the correction curve is graphically displayed. This function is the main function of the calibration module.
- B. Adjustment:** After the preview has been displayed you can activate the **Adjustment** tab. The active record of the device will be adjusted in accordance with the corrected values in the table.



**Warning:** This function changes the device parameters!  
Vögtlin Instruments AG assumes no liability for the adjusted flow curve and its consequences.

- C. Undo:** Each time an adjustment is performed a backup copy is saved on your PC. Use the Undo function to reset the device to the state of the last adjustment operation.
- D. Default Setting:** When a preview is performed for the first time, the parameters are saved and stored in a file as the Default Setting. You can return to these settings at any time by clicking [Default Setting].
- E. Reset:** The measured values are reset in the table to the default values.
- F. More:** Clicking the [More] button opens a new window on the right margin. In this window you can configure the columns displayed in the table. You can show or hide columns and fill the columns with fixed presettings.
- G. \* Spot:** A measuring spot is calibrated. In the process during the automatic adjustment 20 measurements are performed and entered into the table.(see Chapter 4.1).

## Menu items

When you change to the [Adjustment] tab the menu is automatically expanded by the [Adjustment] item. Three additional functions are available here.

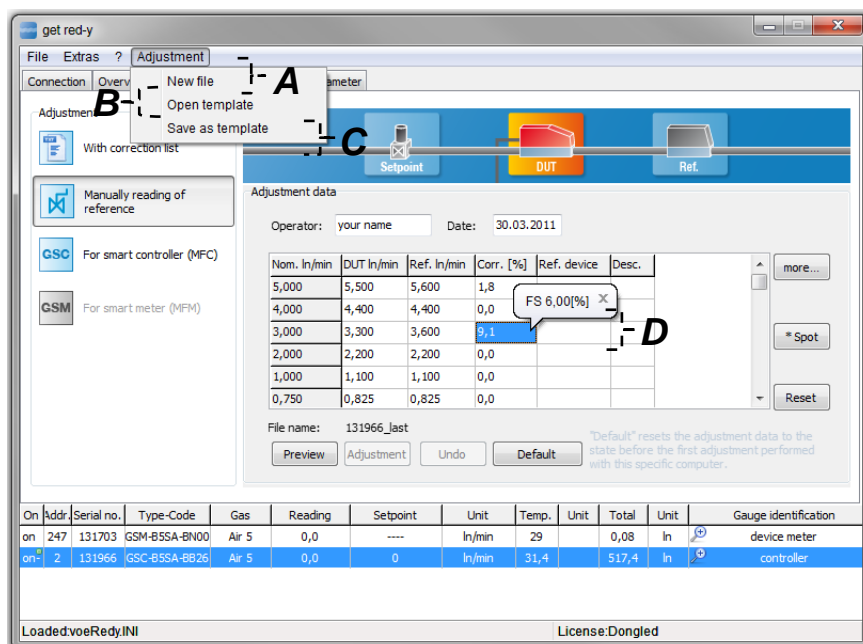


Figure 20: Displays the menu items in the Adjustment tab

- A. New File:** The standard template with 10 measuring spots in the calibration list is loaded.
- B. Open Template:** A template is loaded and the values of the template are entered in the table.
- C. Save as Template:** A template can be saved for additional adjustment operations
- D. From End Value:** The values in the [Cor. [%] ] column in the Table in Figure 20 represent the measurement value errors in percentages. When you select a row the end value errors are also given in percentages.

### Popup in the Calibration list (Table)

The screenshot shows the 'get red-y' software interface. The 'Adjustment' window is active, displaying a table of adjustment data. A context menu is open over the table, showing three options: 'Export as file' (labeled A), 'Export to clipboard' (labeled B), and 'Import full column' (labeled C). The table has columns: Nom. In/min, DUT In/min, Ref. In/min, Corr. [%], Ref. device, and Desc. The 'DUT In/min' column is selected.

Nom. In/min	DUT In/min	Ref. In/min	Corr. [%]	Ref. device	Desc.
5,000	5,500	5,600	1,8		
4,000	4,400				
3,000	3,300				
2,000	2,200				
1,000	1,100	1,100	0,0		
0,750	0,825	0,825	0,0		

File name: 131966\_last

Buttons: Preview, Adjustment, Undo, Default

Default resets the adjustment data to the state before the first adjustment performed with this specific computer.

On	Addr.	Serial no.	Type-Code	Gas	Reading	Setpoint	Unit	Temp.	Unit	Total	Unit	Gauge identification
on	247	131703	GSM-B5SA-BN00	Air 5	0,0	----	l/min	29		0,08	ln	device meter
on	2	131966	GSC-B5SA-BB26	Air 5	0,0	0	l/min	31,1		517,4	ln	controller

Loaded:voeRedy.INI License:Dongled


Figure 21: The Popup menu is activated with the right mouse button

- A. Export as File:** You can export the measured values to a file
- B. Export to Clipboard:** You can export the input measured values to the clipboard and import them with [CTRL+V] to Excel (or the editor of your choice).
- C. Import Whole Column:** Data from the clipboard are imported to the selected column.



Note: In the process all data of the selected column will be overwritten from the first line.




### 3.2.4 Parameters Tab

 *Note: Not all functions/modules are available to the standard user.*

The Parameters tab is divided into 9 different pages:

**Measurement range; Display filter; Analog Signals; Alarm Settings; Extra; Backup; Profibus; Pressure controller; Copy Gas Records.**


The page **Alarm Setting, Analog Signals; Measurement range; Backup** is available by default. The other pages require a *Dongle* with a license for parameter activation or special controller settings.

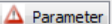If there is an alarm for the currently selected device, the user will be notified by the red Warning icon in the Parameters tab   and by the red bell  Alarm settings in the **Alarm Settings** page view.

#### 3.2.4.1 Alarm Settings

The alarm functions are divided into 5 groups. Groups **B+D** appear only when an instrument with backflow detection or backflow measurement is connected.

Click the [Reset All Alarms] tab to reset all active alarms.

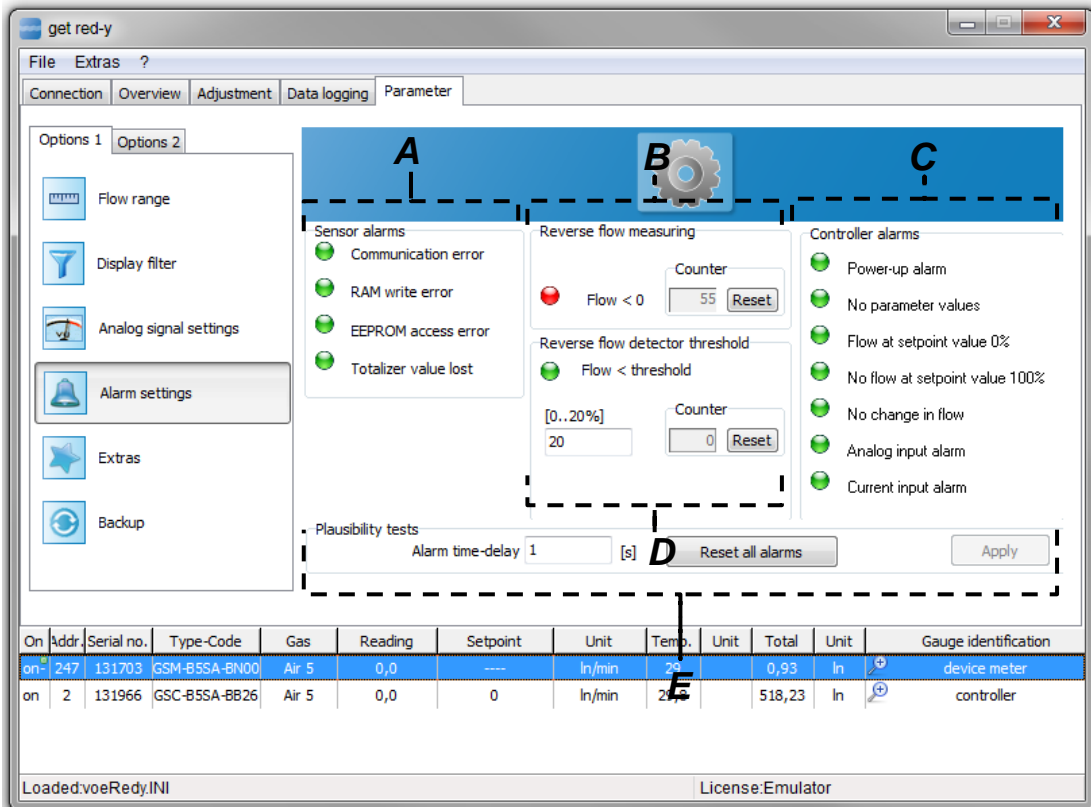

On	Addr	Serial no.	Type-Code	Gas	Reading	Setpoint	Unit	Temp.	Unit	Total	Unit	Gauge identification
on	247	131703	GSM-B5SA-BN00	Air 5	0,0	---	l/min	29		0,93	l	device meter
on	2	131966	GSC-B5SA-BB26	Air 5	0,0	0	l/min	24		518,23	l	controller


Figure 22: Alarm page with active alarm „Communications error“

The alarms in the 5 groups have the following meanings:

**A. Sensor-Alarms:** *The alarms relate to the sensor*


- a. **Communication error:** *A communications error between the sensor and the electronics has been detected. The measured values are probably incorrect.*
- b. **RAM-Write error:** *A write error has occurred in the RAM of the device. Selected RAM memory locations were unintentionally overwritten or the contents can no longer be read.*
- c. **EEPROM Access error:** *Alarm for Access error to EEPROM memory. EEPROM could not be read or written. The correct function of the device can no longer be guaranteed.*
- d. **Totalizer value lost:** *The Totalizer value has been lost. The correctness of the Totalizer cannot be guaranteed. The EEPROM cell for storing the Totalizer values has reached its maximum number of possible writings and is no longer working reliably. In this case, each time the device is switched on a Totalizer value of zero is assumed. Totalizer values are no longer being saved in the EEPROM. In case alarms a. through d. are displayed, we recommend sending the device to your Sales Partner.*

**B. Backflow measurement:**

*A backflow is indicated by a red LED . The output signal for backflow measurement is as follows: 4-12 mA = Backflow; 12-20 mA = Forward flow.*

**C. Controller-Alarms:**

- a. **Power-Up Alarm:** *The supply voltage to the device has been interrupted.*
- b. **No Parameter Values:** *No parameters were found.*
- c. **Flow at Control Value 0%:** *Despite a control value of 0% (Valve completely closed electrically) a flow greater than zero was measured. This can be an indication of a valve that is no longer sealing tight, an internal leak or a zero point offset. This alarm is only active in the case of a flow controller.*
- d. **No Flow at Control Value 100%:** *Despite a control value of 100% (Valve completely open electrically) no flow was measured. This alarm is only active in the case of a flow controller. When the valve overload protection is switched on an alarm will only be set once. After the acknowledgement of the alarm it will no longer appear until you power on again.*
- e. **No Flow Change:** *The control value for the valve was lowered or enlarged, but the measured flow does not change. This alarm is only active in the case of a flow controller.*
- f. **Analog Input Alarm:** *The analog set point is outside the permitted range (21.6mA, or 10.8V)*
- g. **Current Input Alarm:** *The current at the analog input is too high. It will be switched to the voltage input for 4 seconds in order to protect the circuit. This will be repeated until the current lies within the valid range.*

**D. Backflow detector-Limit:** *Backflow monitoring can be set in a range of 0-20% of the measurement range-end value. Enter this value in the editing box with the designation [0..20%]. After that the [Accept] button appears. Click this box in order to save the change. In case the negative flow exceeds the set limit an alarm is activated, which is indicated with a red LED . An instrument with an output signal of 4-20 mA generates a signal of 2 mA when the limit is exceeded. This function only possible with one instrument.*

**E. Plausibility check:** *Here you can set the delay time after which an active alarm should be displayed. This delay time only applies for the following alarms: **No Flow at Control Value 100%; Flow at Control Value 0% and No Flow Change.** To use this plausibility check for*

the alarms, enter a value in seconds and confirm your input with Return. After that the [Accept] button appears. *Press this button to save the change.*

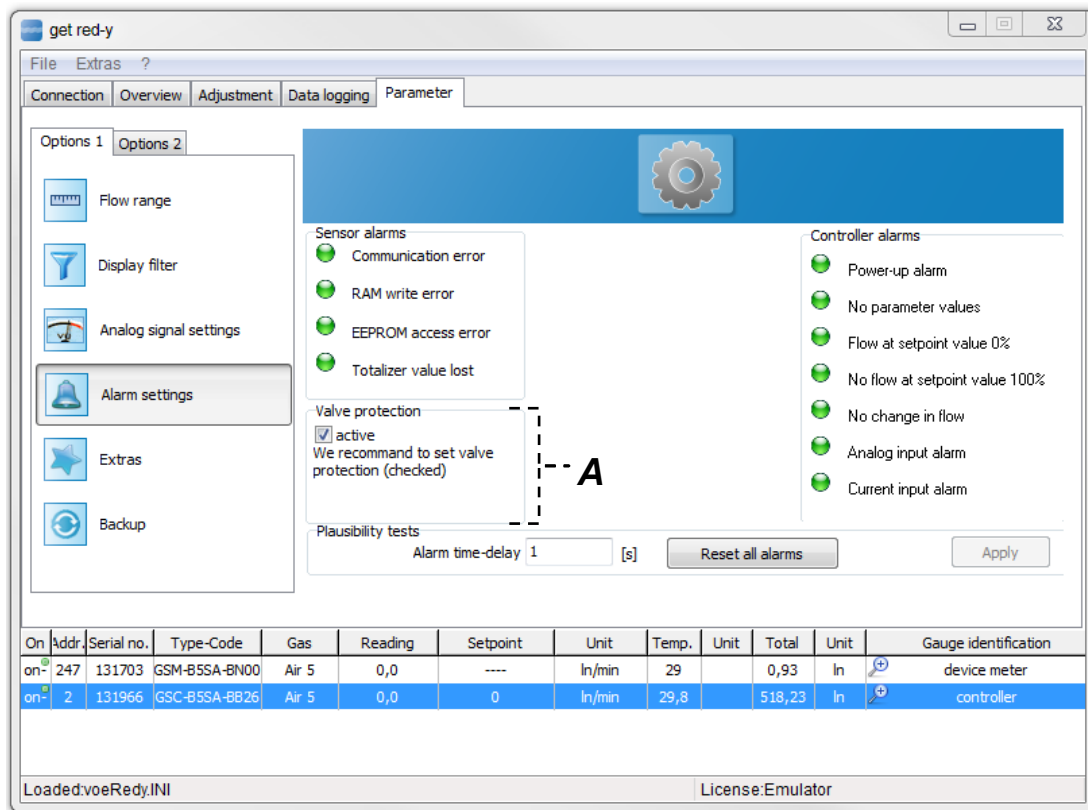



Figure 23: Alarm page for switched on valve overload protection

- A. Valve overload protection:** *If you activate this field the control valve will be protected from overload. In the case of an interruption of the gas supply the control valve goes over to a continuous control mode, which becomes audible via a „clicking“ ca. every second. This spares the control valve so that it won't have a massive „overshoots“ when the gas supply is activated again. This protection is activated upon delivery. We recommend leaving this function switched on*

### 3.2.4.2 Measurement Range

 *Note: This Function/Module is only possible with a valid license.*

On the Measurement Range page the gas type can be converted by default, provided the instrument has been calibrated with additional gases. In addition the flow unit can be adapted.

The *Measurement Range* has the following functions:

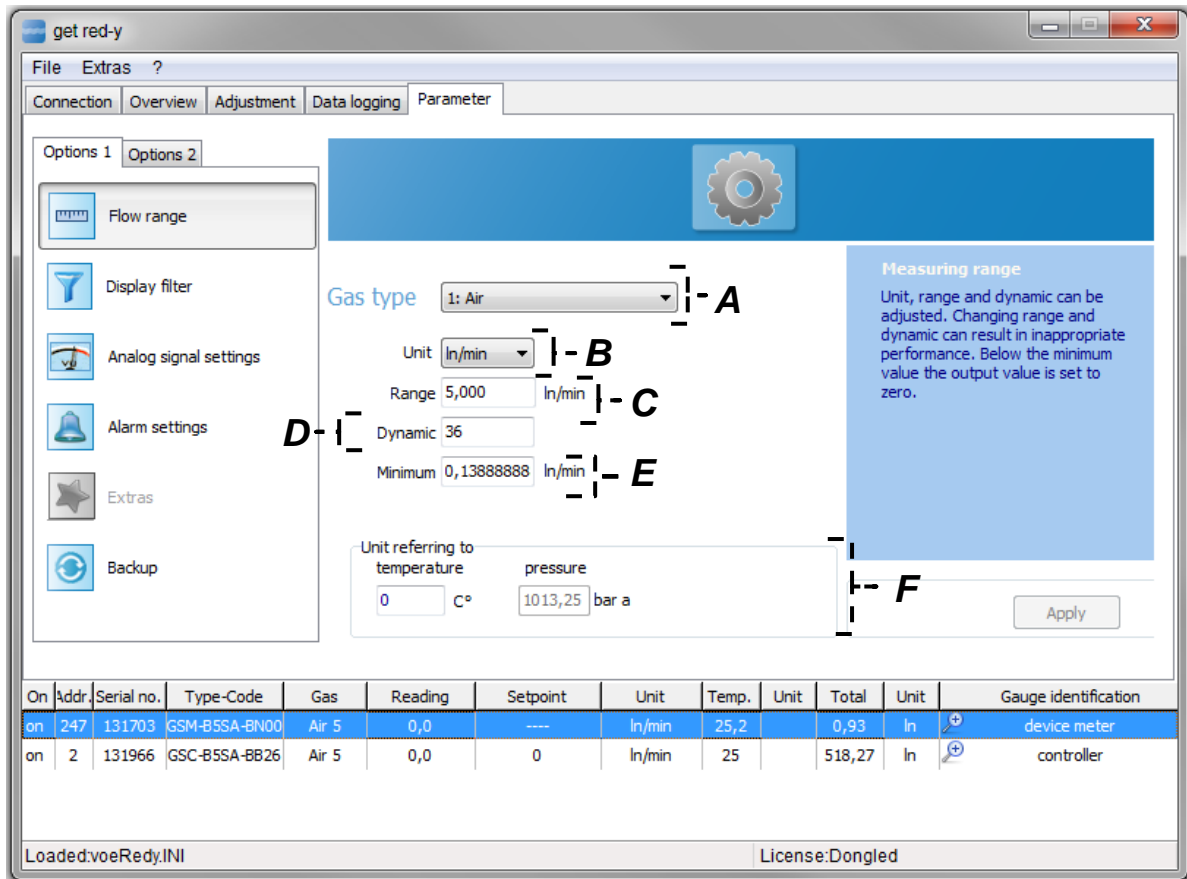


Figure 24: Measurement Range page for setting the current gas type and other parameters

The parameters have the following meaning:


- A. Gas type:** Provided the device has been designed for several gas types, you can convert the gas type. Select the appropriate gas type and click the [Accept] button. The control parameters for the control valve and any other operating conditions are stored in each Gas Record.
- B. Unit:** The unit for the flow measurement can be converted. Please note the corresponding reference temperature of the units.
- C. Range:** The measurement ranges end value can be changed within certain limits. You require the appropriate access rights to do this.
- D. Dynamics:** The measurement range is limited below by the dynamics. The smallest measurement value is defined by the following relationship equation:

$$\text{Minimum} = \frac{\text{Range}}{\text{Dynamics}}$$

You require the appropriate access rights to do this. Please consult your sales partner.


- E. Minimum:** Displays the smallest measurement value. This value is automatically adapted when the dynamic range is reprogrammed. (Item D).
- F. Unit related to:** In case the unit is converted in B, the physical reference quantities of this unit are included in the display.

### 3.2.4.3 Display filter

 *Note: This Function/Module is only possible with a valid license.*

The *Display filter* page sets the measurement value and display filter. In the case of flow controllers the step response can be analyzed. In the case of a change of the position of the slider the set filter behavior is directly transferred to the device.

The Display filter page can be divided into 3 logical groups –**A,B,C**.

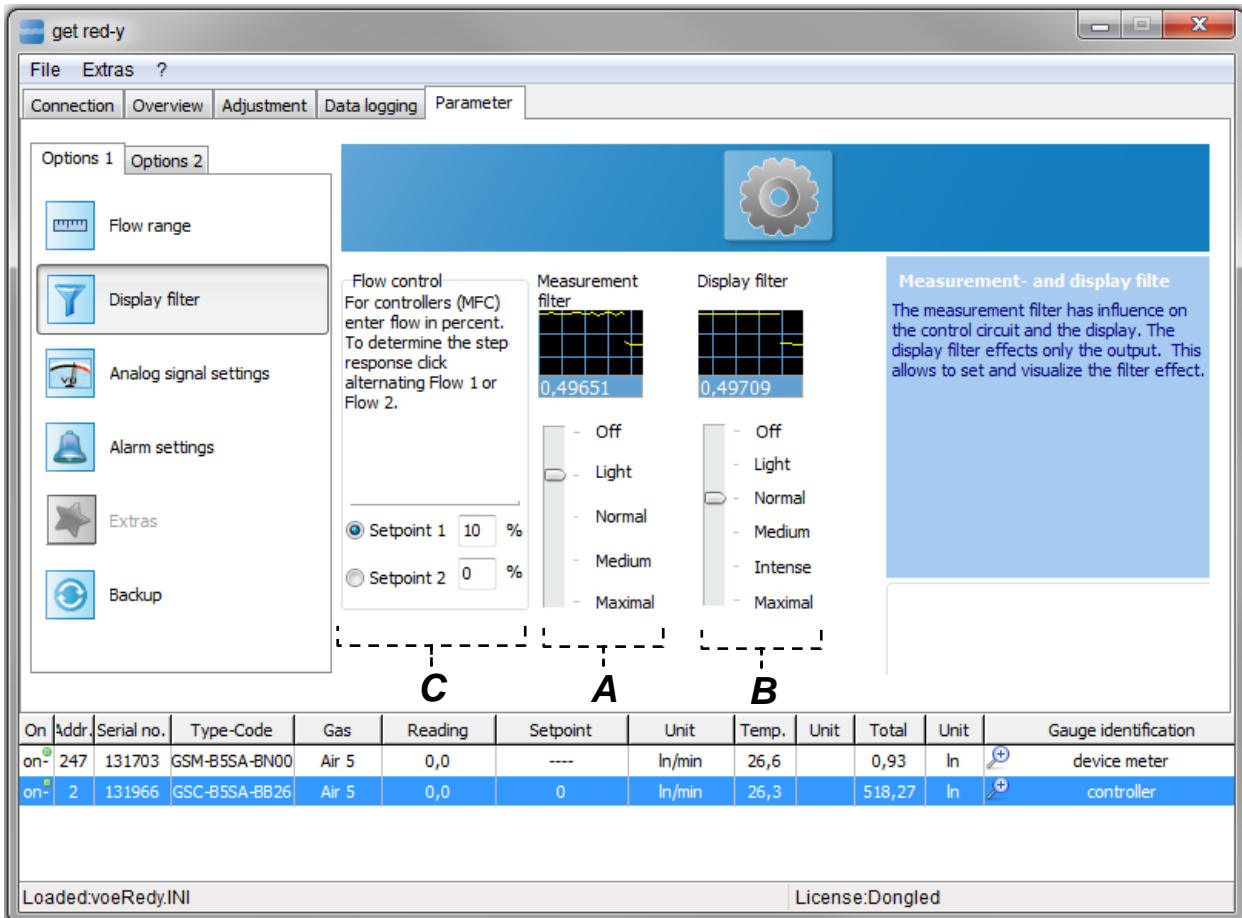

On	Addr.	Serial no.	Type-Code	Gas	Reading	Setpoint	Unit	Temp.	Unit	Total	Unit	Gauge identification
on	247	131703	GSM-B5SA-BN00	Air 5	0,0	---	l/min	26,6		0,93	l	device meter
on	2	131966	GSC-B5SA-BB26	Air 5	0,0	0	l/min	26,3		518,27	l	controller

Figure 25: The Display filter page for setting the measurement value and display filters

- A. Measurement value filter:** The values of the measurement value filter are the input parameters for the PID-Control circuit (MFC) and in addition are the input parameters for the display filter. In the case of the measurement value filter it is a rolling mean filter with special dynamic behavior for optimum control.
- B. Display filter:** The measured values of the device are filtered through the display filter. The filtered (damped) values are only used for the analog output and digital actual value display.
- C. Flow control:** Changes to the measurement value filter have a direct effect on the control behavior. With the step response you can analyze how a change in the measurement value filter effects the control circuit. To do this enter the percentage values in the input boxes at Set point 1 or Set point 2 in Figure 25. (In % of the end value) After entering the set point presettings, you can change between Set point 1 and 2.

**!** Note: The PID-Control parameters are set with a specified measurement value filter. In the case of a change in the measurement value filter the PID-Parameters for this new measurement value filter should be checked.

### 3.2.4.4 Analog signals

The analog set point and output signals can be reprogrammed on site. Please keep in mind that a converted device should be correspondingly labeled. Vögtlin Instruments AG assumes no liability for damages which occur as a result of changing the signals.

You can see the view for a flow controller in Figure 26.  
This page can be divided into 5 logical groups – **A,B,C,D,E**.

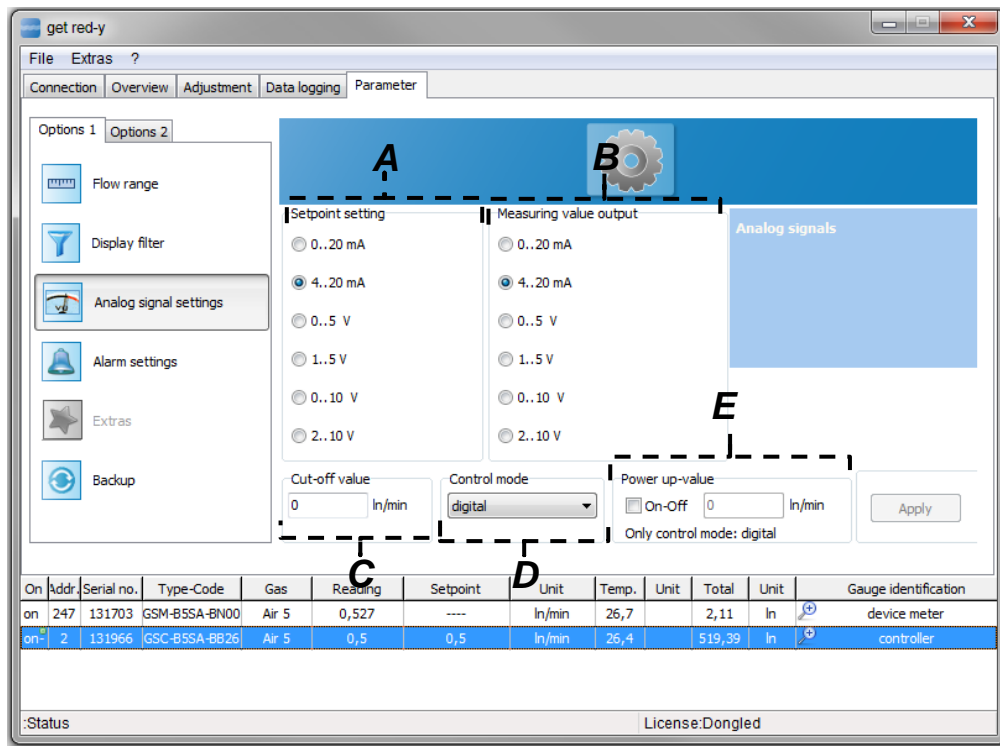


Figure 26: For the setting of analog signals and control mode for a flow controller

- A. Set point presetting:** The analog input (current or voltage) is used for set point presetting. Select a signal format which reflects your technical circumstances. The analog input is always transformed (linear interpolated). This happens regardless of whether the controller gets the set point as analog or digital. Depending on the setting the unit is [mA] or [V].
- B. Measurement value output:** Represents the actual value of the analog output signal (Current mA or Voltage V)
- C. Zero suppression:** The measured flow can be limited with this setting. If the measurement value is lower than the value set here, the instrument displays zero.
- D. Control mode:** Here you can set the behavior of the controller. 6 different states can be set.

- a. **automatic:** Switching over the set point presetting source takes place automatically. Basically the analog input (current or voltage) is used for set point presetting. If a digital set point occurs (via ModBus, ProfiBus) the flow controller will assume this value. This corresponds to the default setting
  - b. **digital:** The set point will be assumed exclusively via a digital port (ModBus, ProfiBus).
  - c. **analog:** The set point will be assumed exclusively from the analog input.
  - d. **manual:** Deactivates the control function. Sets the control signal for the valve to the value which is preset in the Control Variable Control Valve tab (0x000a..0x000b).
  - e. **Set point 0%:** Sets the set point digital to 0% of the end value.
  - f. **Set point 100%:** Sets the set point digital to 100% of the end value.
  - g. **Valve 0%:** Deactivates set point presetting and control function. Sets the control signal for the control valve to 0% (Valve closed).
  - h. **Valve 100%:** Deactivates set point presetting and control function. Sets the control signal for the control valve to 100% (Valve completely open).
- E. Start up Set point:** This setting only makes sense if the same set point is to be used over a longer period of time. Once the device is supplied with 24 V it automatically goes to this previously set point. A digital or analog set point presetting is then omitted. This setting is only possible in the digital control mode.

Figure 27 shows the Analog Signals page for an instrument.  
This page can be divided into 2 logical groups – **A,B**.

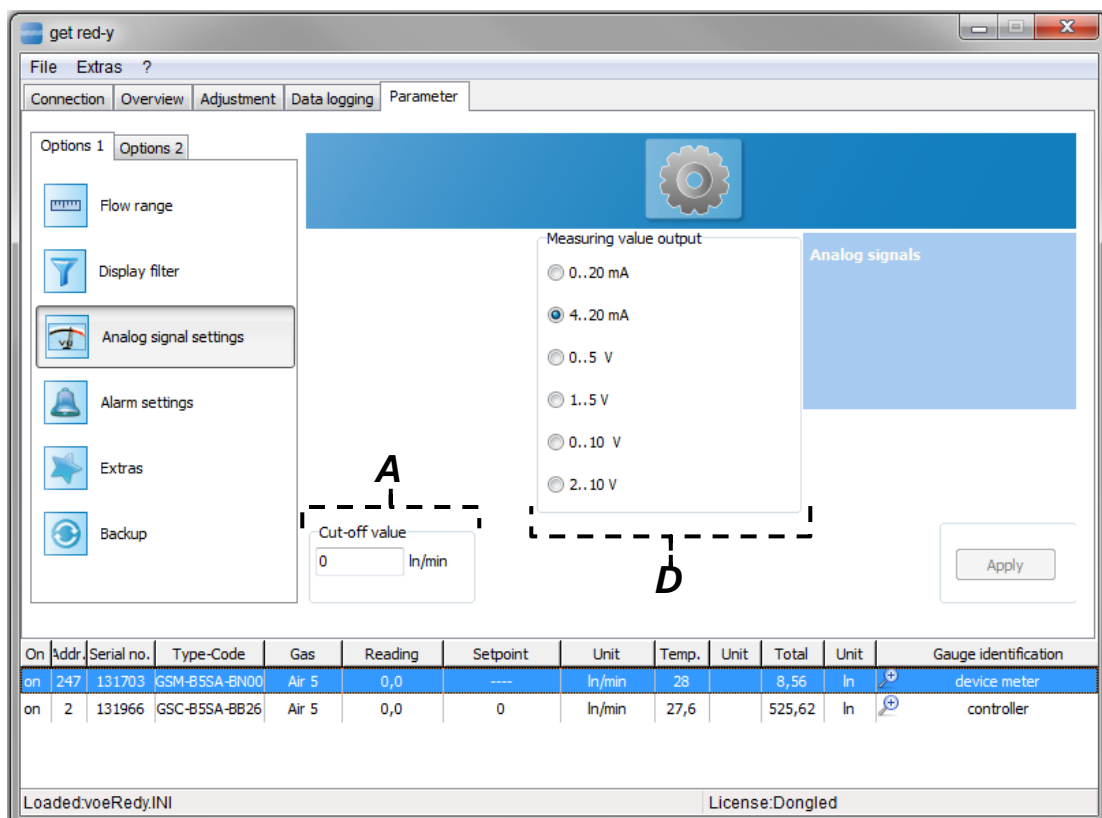



Figure 27: Page for the setting of analog signaling formats and control modes for an instrument

- A. Zero suppression:** The behavior is identical to the description of the controller
- B. Measurement value output:** The behavior is identical to the description of the controller

### 3.2.4.5 Tools

 **Note:** Not all functions/modules are available to the standard user.

The *Tools* page is used to set important device functions and names. Changed settings are saved by clicking the [Accept] button.

The Display filter page can be divided into 3 logical groups –**A,B,C**.

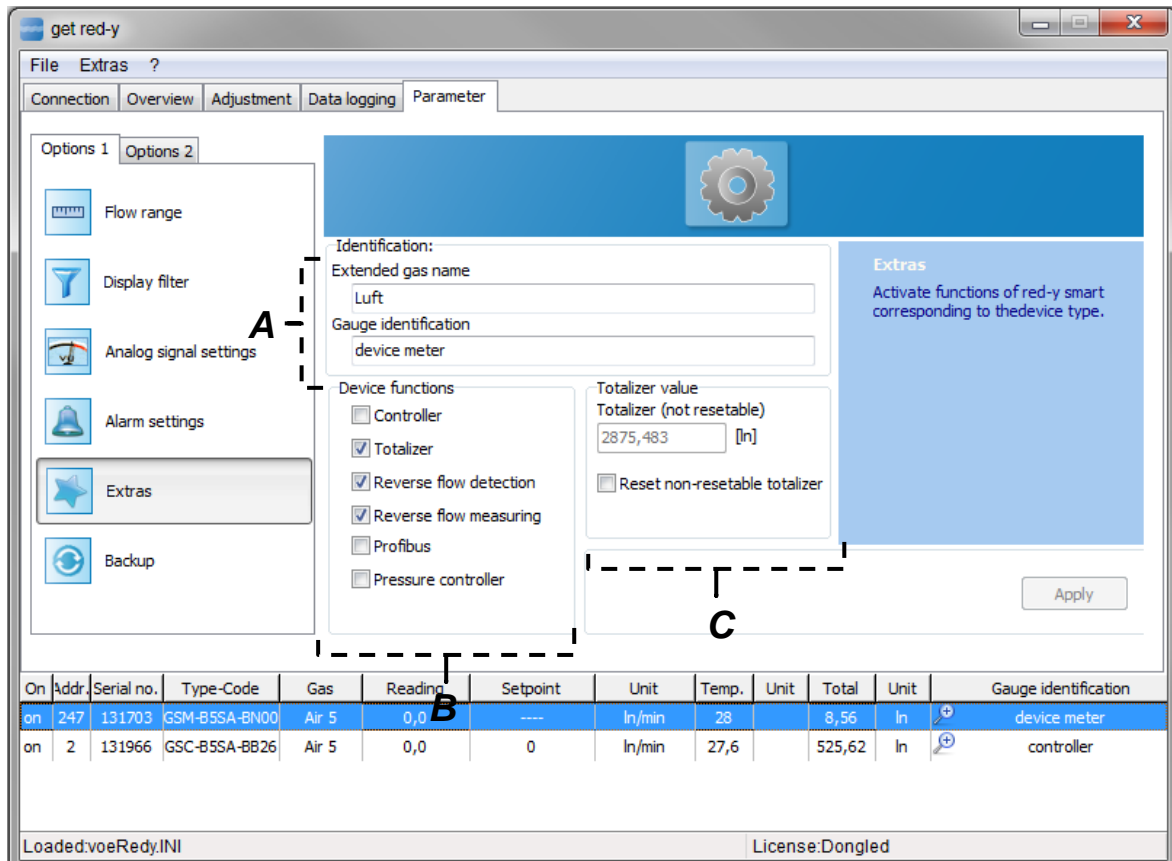


Figure 28: Setting important device functions and names

**A. Designation:** Here you can enter the long Gas Name and the Measuring point ID.


- a. **Measuring point ID:** The Measurement Location Name can be entered as clear text with a maximum of 50 characters. It has no function in the device and serves only informational purposes for the user of the device.
- b. **Long Gas Name:** The Long Gas Name input box is available in the background once for each gas and can be entered as clear text with a maximum of 50 characters. It has no function in the device and serves only informational purposes for the user of the device.

**B. Device Functions:** Here you define the device function.


- a. **Controller:** If the Controller field is active, automatically all fields required for a flow controller are activated. (e.g. Control mode, Set point signals etc.)
- b. **Totalizer:** If the Totalizer field is activated, the measured values will be added up. We distinguish between two Totalizers. One is resettable and the other one is non-resettable. The resettable Totalizer appears in the Device List and can be reset to

zero there. The non resettable Totalizer serves as an „Operating hours meter „ and is indispensable for measuring consumption.


- c. **Negative Flow Detection:** If this field is activated the limit for alarming is considered. You can set this limit on the Alarms page. Please note the description under „Alarms“.
- d. **Negative Flow Measurement:** If this field is activated the instrument also measures a backflow. Please note the description under „Alarms“.
- e. **Profibus:** If the device is equipped with a Profibus board the profibus communication can be enabled or disabled.
- f. **Pressure controller:** A flow controller can also be activated as a pressure controller. This option applies for devices with serial numbers > 100'000. Please get in touch with your Sales Partner.

 *Note: Changes in these tabs require detailed knowledge and understanding. Incorrect settings can impair the function.*

- c. **Totalizer:** Here you can view the non-resettable Totalizer value. See Description **B.b**.

 *Note: The meter reading of the Totalizer is saved in the EEPROM every 10 minutes.*

### 3.2.4.6 Backup

 *Note: The Backup page is only available with a valid license.*

The *Backup* page lets you create backup copies. You can save the most important device parameters of devices here. Before making changes to a device, we recommend that you first create a backup copy. You can return to the original device setting at any time with the backup copy. The file is saved in a readable file format with the .vprm file extension. This file can be viewed with the editor of your choice and can be compared with other backup copies.

The Backup page can be divided into 5 logical groups –**A,B,C,D,E**.

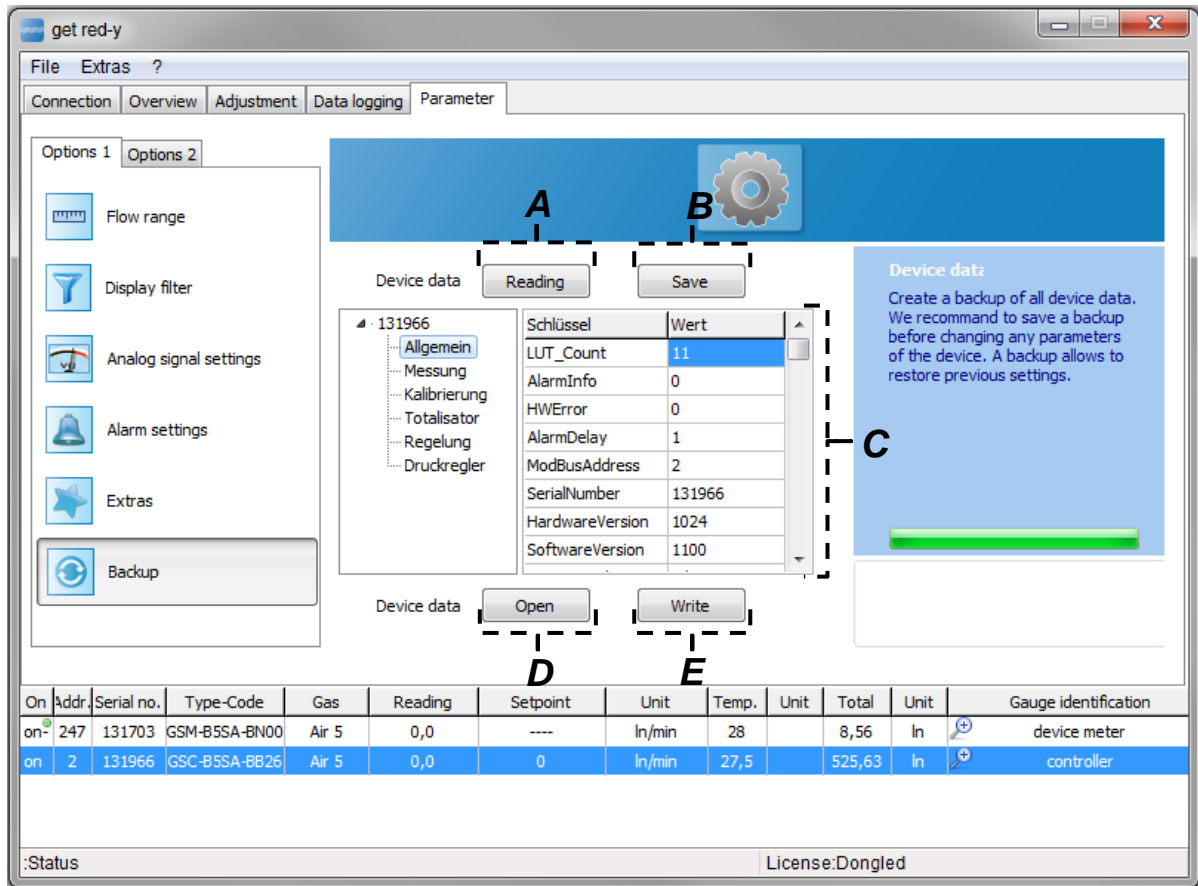



Figure 29: The Backup page lets you create backup copies and compare device configurations

- A. Read:** By clicking the [Read] button, the device parameters of the device are read out and displayed. This operation can take a few minutes.
- B. Save:** The device parameters can be saved to a file with the .vprm extension by clicking the [Save] button. This file format in clear text can be compared with other versions.
- C. Device parameters:** The current read device parameter status is displayed and can be viewed in logically contiguous parameters.
- D. Open:** Clicking this button allows you to read device parameter states. These are displayed in C.
- E. Write:** Clicking this button allows you to write the previously read device parameter status to the device. This operation takes a few minutes.

**⚠ Note:** Setting incorrect parameters can impede the function of the device. Vögtlin Instruments AG assumes no liability for this!  
Please restart the software and the device after this operation.

### 3.2.4.7 Profibus

 *Note: The Profibus page is only active when an appropriate interface is available.*

The *Profibus* page and pressure controllers are located in Options 2 of the Parameters tab, since they are bound to special device configurations.

The *Profibus* page is used to set the Profibus parameters.

The devices of the *red-y smart series* support cyclical (DP-V0) and acyclical (DP-V1) communication. In the case of cyclical communication the information is exchanged in a defined message cycle between the master and the slaves. For complex field bus devices cyclical communication is often no longer sufficient. For this reason acyclical communication DP-V1 was introduced. This type of communication takes place parallel to cyclical communication. It is often used in order to change acyclical parameters in the field bus device. In other respects the acyclical parameters serve the purpose of making free access possible to random parameters, changing cyclical communication during the process and transferring data of variable length.

The telegraph structure is modular, i.e. it is divided into slots/indexes.

This is identical to what is found in slot-oriented, programmable logical controllers. A suitable analogy is the addressing of letters, in this analogy the street corresponds to the slot (plug-in module addressing) and the index corresponds to the house number (e.g. the output or input of the plug-in module or the addressed record). The Master sends an empty pack with the street and house number. The recipient accepts this packet and fills it with data of variable length and gives it back to the mail carrier with the same index/slot.

For more information about Profibus go to this webpage: <http://www.profibus.com/>

The *Profibus* page can be divided into 2 logical groups –**A,B**.  
Click the [Accept] button to transfer the settings to the device.

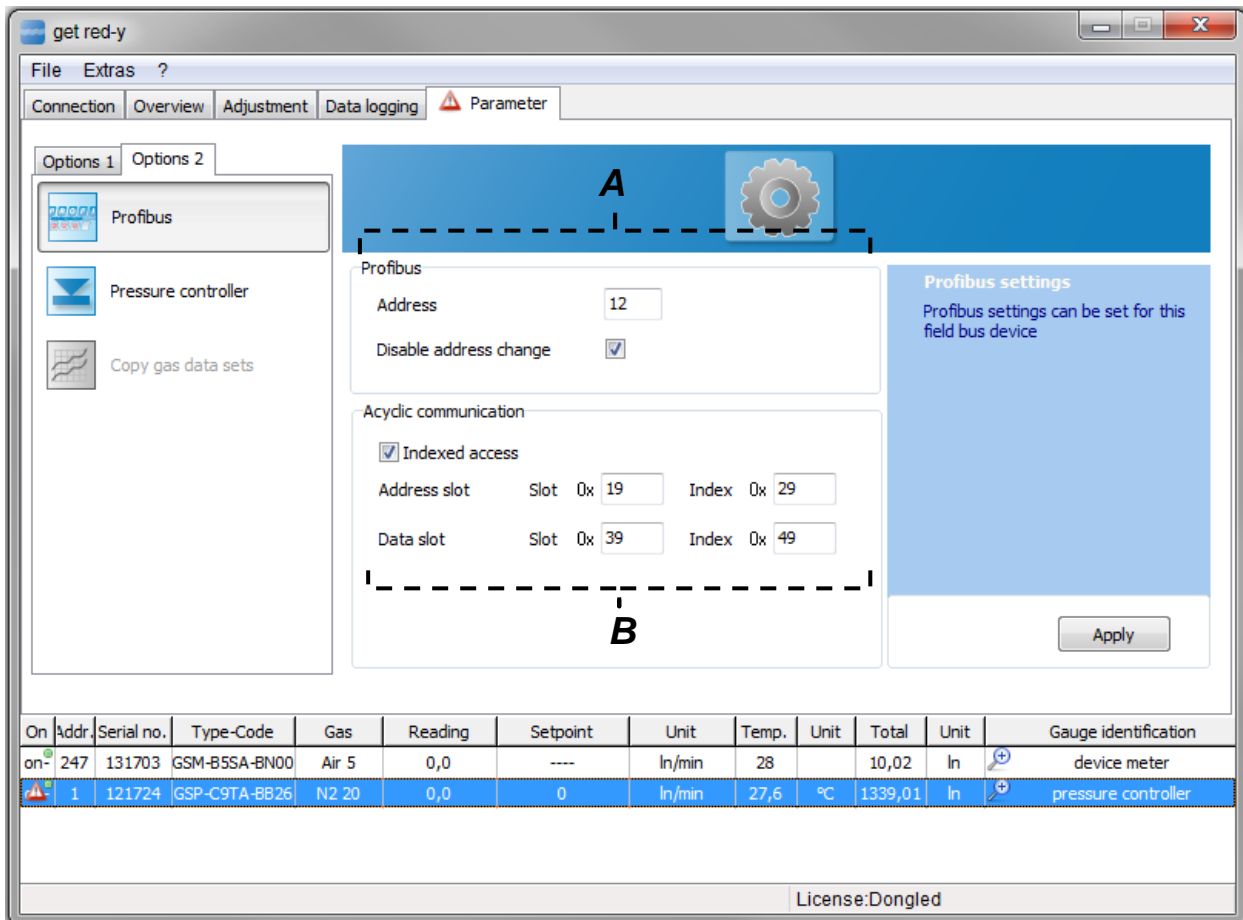



Figure 30: The Profibus page is used to set the Profibus parameters

**A. Profibus:** Input the Profibus address. Valid Profibus addresses in the system operation range between 1 and 125. By default our devices come supplied with the factory setting - address 126 -. Enter a valid address in the input box. If you do not wish to allow further address changes for the device, you can enable the [Block Address Change] check box.


**!** Note: The blocking of the Profibus address change does not go into effect until you restart the computer

**B. Acyclical Communication:** If the [Indexed Access] check box is enabled, you can define the address and data slot here. The slot can be in the range  $0x00 \dots 0xFF$ , the index in range  $0x00 \dots 0xFE$ . Click the [Accept] button to save your settings.

### 3.2.4.8 Pressure controller

 *Note: This page is only active if a pressure controller is connected.*

The *Pressure controllers* page allows you to set the parameters of a pressure controller. The *Pressure controllers* page can be divided into 5 logical groups – **A,B,C,D,E**. Clicking the [Accept] button saves your settings to the device.

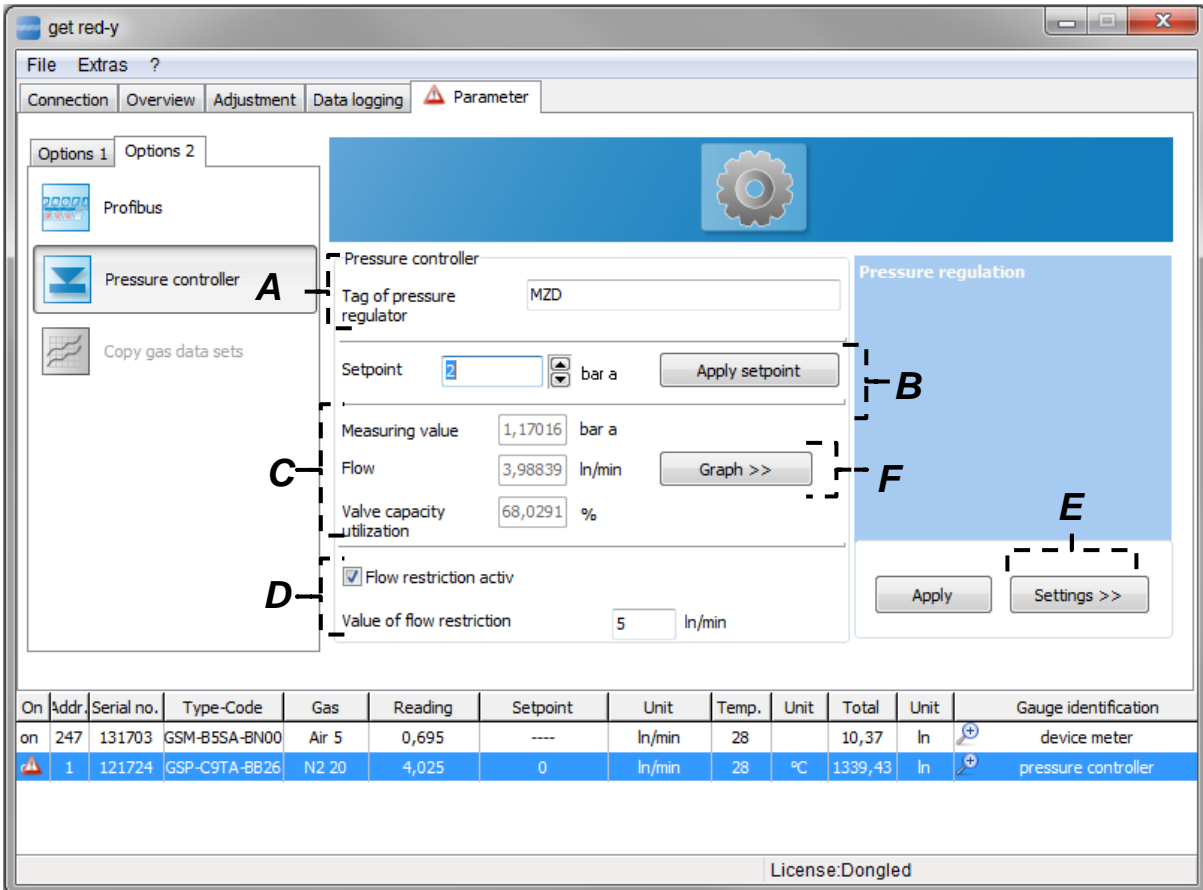

On	Addr.	Serial no.	Type-Code	Gas	Reading	Setpoint	Unit	Temp.	Unit	Total	Unit	Gauge identification
on	247	131703	GSM-B5SA-BN00	Air 5	0,695	----	l/min	28		10,37	l	device meter
	1	121724	GSP-C9TA-BB26	N2 20	4,025	0	l/min	28	°C	1339,43	l	pressure controller

Figure 31.: The Profibus page is used to set the Profibus parameters

- A. Measuring point ID:** Enter the Measuring point ID in the input box. (max. 50 characters)
- B. Set point:** Enter the pressure set points here. Click the [Accept Set point] button to transfer the set point to the pressure controller.  
In Item C you can look at the settling time of the set point change.
- C. Display Pressure, Flow and Valve Load:** The actual values are displayed here. In the case of an optimally set pressure control the actual values of the flow and of the valve voltage move in a specified range. It is easier for the first settings and for startup if you switch to Graph mode. Click the [Graph] button.
- D. Flow Limiting:** With flow limit you can influence the overshoot behavior and the speed of the pressure increase. This limit also makes sense when a master/slave function is combined. Thus there is a guarantee that the measuring part cannot exceed its maximum end value. In the case of applications that tolerate an overshoot the flow limit can be disabled.

- E. Settings:** You can set the most important parameters for pressure regulation here. Clicking the [Settings>>] button to go to a new window (See Figure 32, [Pressure control setting]).
- F. Graph >>:** Clicking this button opens a window that allows you to set the PID-Parameter records for the pressure controller.

**⚠ Note:** Changes to these enhanced parameters can cause malfunctions of the pressure controller. Note down the factory settings so that you can return to the original values at any time.

## Pressure control setting window

Click the [Accept] button to save your settings on the device. This window can be divided into 4 logical groups –**A,B,C,D**.

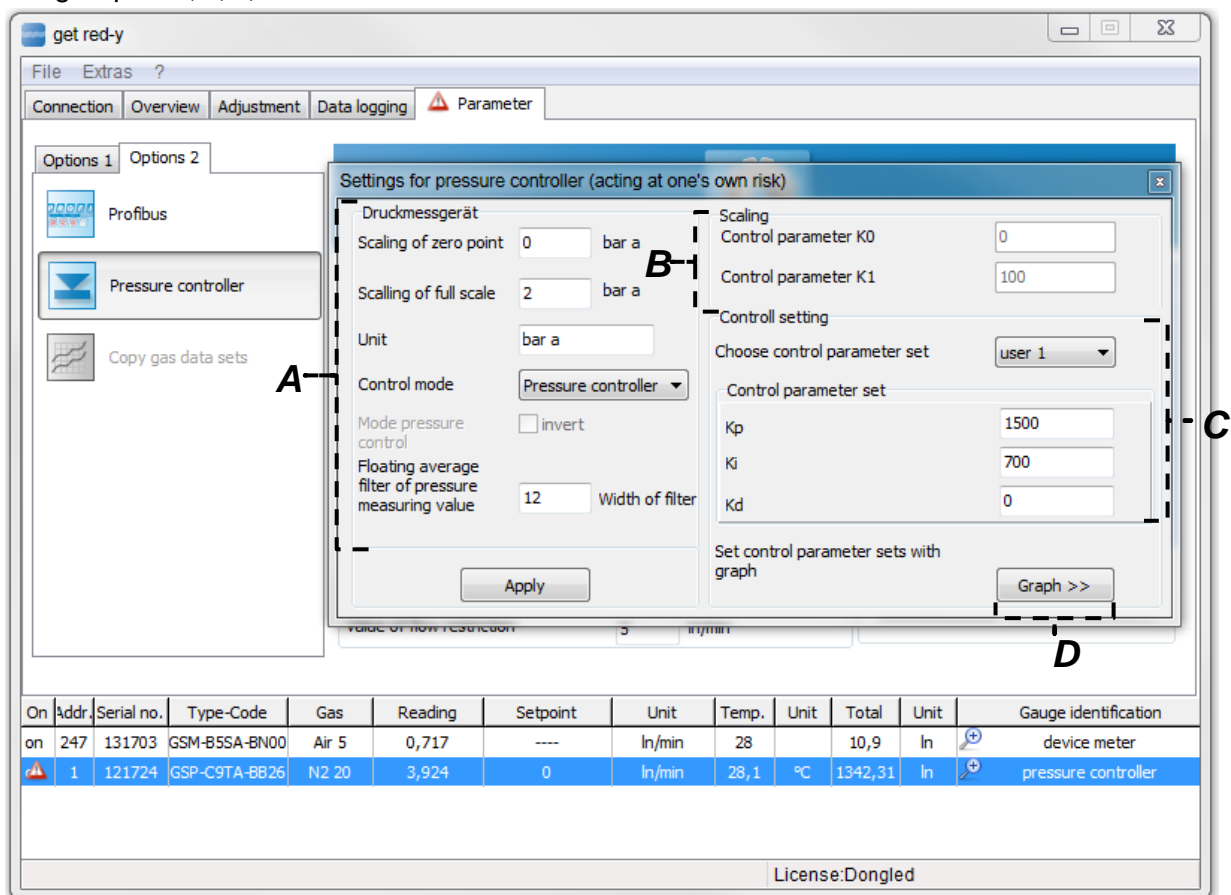


Figure 32: Enhanced settings for control parameter records

- A. Pressure measurement device:** You can define the basic settings of the connected pressure controller here.
- Scaling Zero point:** This corresponds to the zero point of the pressure transmitter.
  - Scaling End value:** This corresponds to the end value of the pressure transmitter.
  - Pressure unit:** The unit of pressure can be entered in clear text. This specification has no effect on the function of the device and is purely for informational purposes.

- d. **Control mode:** Setting for the control function of the pressure controller. Here you can specify whether it is a (post)pressure controller or initial pressure controller. In the case of the initial pressure controller the pressure is regulated after the process (before the control valve). If the actual value is greater than the set point, the valve is opened (provided the direction of flow is 'Normal').  
In the case of the (post)pressure controller the pressure is regulated before the process (after the valve). If the actual value is greater than the set point, the valve is closed (provided the direction of flow is 'Normal').
- e. **Running Mean Filter for Pressure Measured Value:** This setting is used to attenuate the actual value of the pressure transmitter. In the input box you can set a value between 0 – 25. This value stands for the number of the measured value which is used for the running mean.
- B. Scaling:** These two factors can only be read.
- C. Control setting:** The pressure controller consists of a total of 5 complete control parameter records. Three of these records are preset by the manufacturer and cannot be changed. Two additional records (User 1 and User 2) can be changed by the user. Click the [Accept] button to accept the new PID-Parameters.
- D. Graph >>:** Clicking this button opens a window that allows you to set the PID-Parameter records for the pressure controller.

## Pressure controller window

Select the [Graph >>] button to display the window in Figure 33. On the left side you can click on predefined set point jumps. By repeating the same set point jumps you can follow the change to the PID-Parameters. The I parameter has the strongest influence on the overshoots. Based on experience it ranges between 5 and 50.

In summary the following behaviors can be named for the PID-Parameters:

P-Part	I-Part	D-Part
Generates a control variable proportionate to the control deviation	Eliminates control deviations	Makes control circuit faster and improves the stability of the control circuit
Fast reaction to control deviation, fast correction	Delayed reaction to control deviations	
Never regulates completely off	Tends to overshooting and worsens the stability behavior of the control circuit	

Table 3: Behaviors of the PID-Parameters

You can find more information in the user manual for the *red-y smart series*.

Due to a very high sampling rate of approximately 100ms high resolution data displays can be realized in different data views with export options.

The form can be divided into 5 logical groups –A,B,C,D,E.

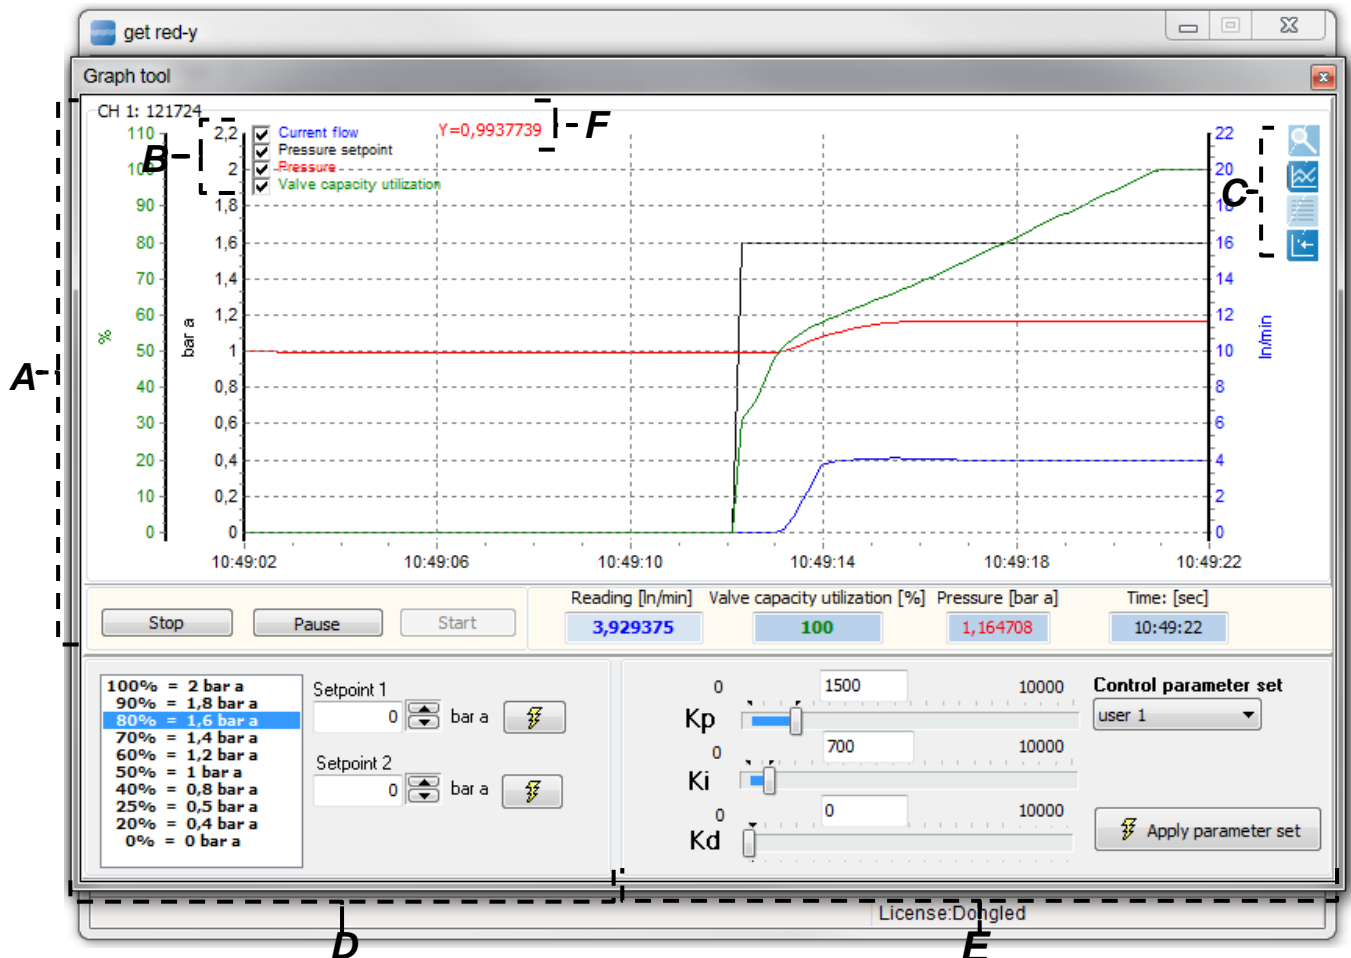







Figure 33: Graphic representation of the measured value signals for determining the control parameter records in progressive temporal representation of the diagram

- A. Displaying the measured values:** The most important signals for the setting of the control parameters are represented in chronological sequence. It is very easy to achieve an optimization of the control characteristics with this. With the [Stop] button you can interrupt data recording. To begin display again with the [Start] button, the old measured values will not be saved and a new data recording begins. Click the [Pause] button to stop recording, click the [Pause] button again to continue recording. Right clicking the mouse button within the diagram allows you to copy the CSV format to the clipboard or save the diagram as an image. The CSV-Format can be easily copied to Excel with [CTRL+C]. This function is available only with special rights.
- B. Hide/Show Signals:** Select the check box to show or hide the individual signals.

**C. Switching the data views:** The measurement data can be displayed in different ways and with this analyzed at different levels. Click the following buttons to display the data in different views.

-  The data is displayed as a graph (see Figure 33 and Figure 34).
-  The data is represented in tabular form (see Figure 35).
-  The data is represented in a separate window (see Figure 35 right). This is quite helpful if you have a second monitor or if you wish to show the data in one window as a table and in the other window as a diagram
-  The measurement data is represented in progressive chronological sequence (see Figure 33, i.e. only a specified chronological section within the diagram is shown).
-  Click the button in Item **d** to switch the image of the button and the measurement data is displayed in chronologically compressed form (see Figure 34), i.e. all data of the measurement value recording is shown in one diagram.

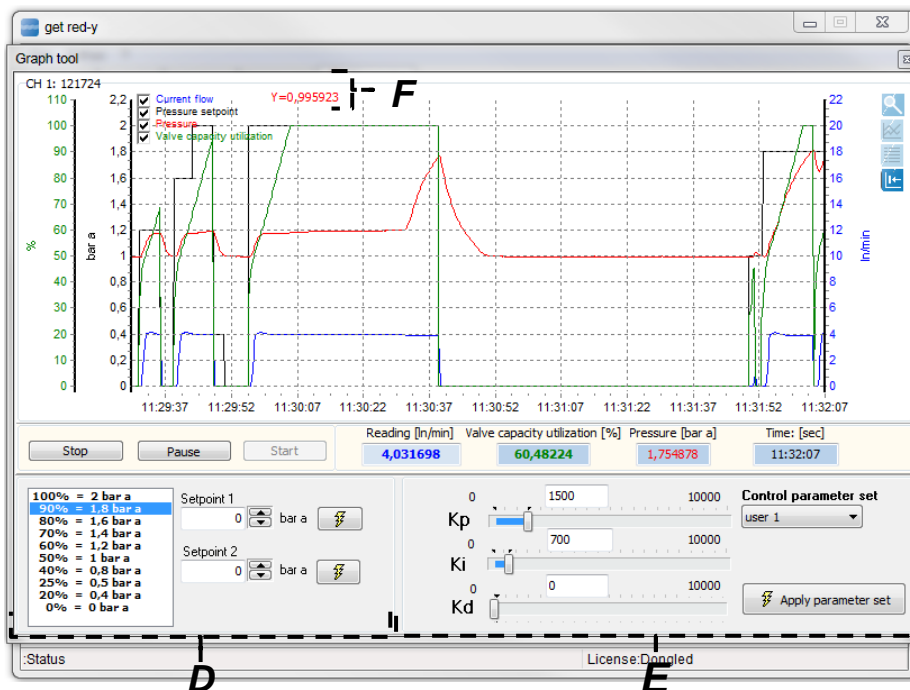


Figure 34: Graphic representation of the measurement value signals for providing the control parameter records in chronologically compressed form

- Set point presetting:** You can select fixed preset set point jumps here. With 2 freely selectable set point jumps the step response can be analyzed.
- Setting the control parameter records:** See page 33 / Control setting. For more information see red-y smart user manual
- View Data Values:** If your mouse is directly over a measured value of a graph, the Y-value of this measured value will be given.

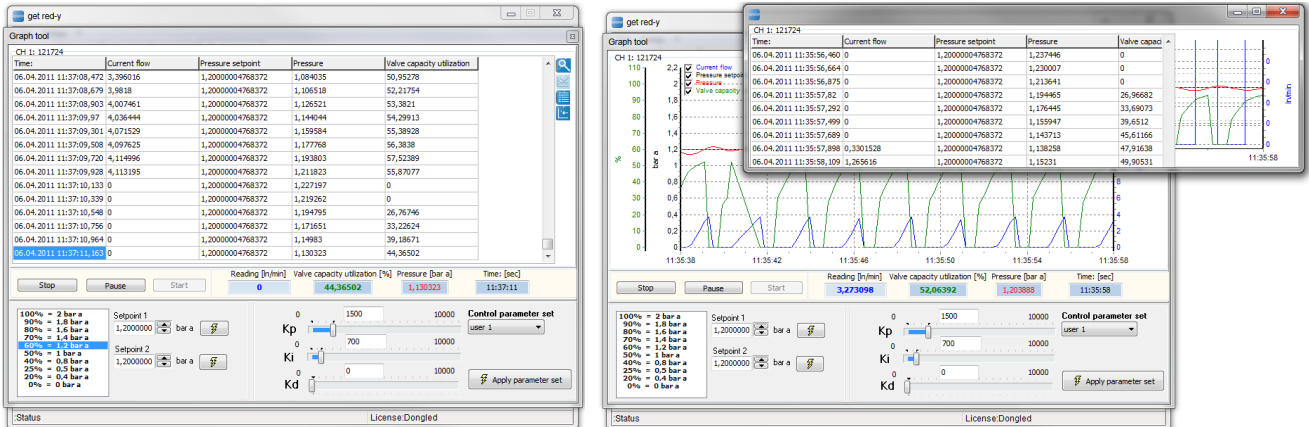


Figure 35: Representation of the measured values in tabular form (left) and representation of the data in separate windows (right).


## Scrolling in the diagram

You can *scroll* in the diagram, i.e. you can view all of the data. We recommend selecting the [Stop] or [Pause] button in case chronological progressive display was selected. To scroll in the diagram press the right mouse button and hold the mouse button down. Drag the mouse in the direction in which you wish to scroll. When you release the mouse button the diagram remains in the new position.

## Zooming in the diagram

You can *zoom* in the diagram, i.e. sections in the diagram will be shown enlarged or reduced. To zoom press the left mouse button on the upper border of the range which you wish to zoom. Hold down the mouse button and drag the zoom area which you wish to look at by dragging to the bottom left until a rectangle has appeared which corresponds to your zoom area. To remove the zoom area press the left mouse button anywhere in the diagram and hold the mouse button. You have to move to the upper left with the pressed mouse button and then release the mouse button in order to remove the zoom.

### 3.2 .4.9 Copying Gas Records

 **Note:** This Function/Module is only possible with a valid license.

The *Copying Gas Records* page is used to copy gas records. By default every device has ten data fields available for gas records. You can copy a gas record that has already been calibrated for the non-calibrated gas records.

This function is only required in conjunction with adjustment.

This page can be divided into 3 logical groups –A,B,C.

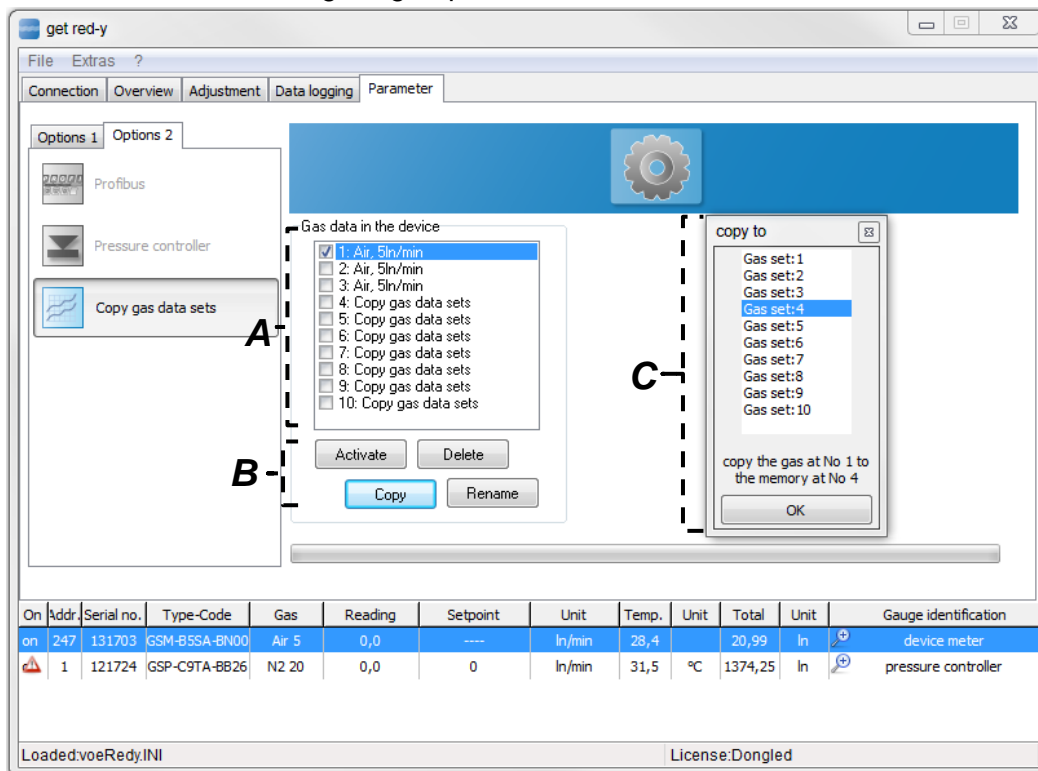


Figure 36: The Copying Gas Records page. In this example the gas record at position 1 is copied to position 4.


- A. Select Gas Record:** Use the check box to select the active gas record. This selects the new gas for the current measurement.
- B. Button:** Use the [Delete] button to delete the selected gas record.

 **Note:** If the calibrated gas records are deleted, the device can no longer perform any measurements

With [Rename] you can assign a name to the gas record which will be displayed in the Device List. Choosing the [Copy] button copies a gas record to a new gas data position. It appears the dialog in C.

- C. Copy to:** The current selected gas record in A is copied to the current gas position in the dialog in C. Once copying is complete, the copy of the gas record is in the position which you previously specified in the dialog box in C.

### 3.2.5 Data Logger Tab

 **Note:** The Data Logger tab is only available with a valid license.

With the Data Logger function measured value signals of the devices of the *red-y smart series* can be analyzed and saved at a selectable time interval. This data can be represented in tabular or graphic form.

The Data Logger tab can be divided into 2 logical groups –**A**,**B**.


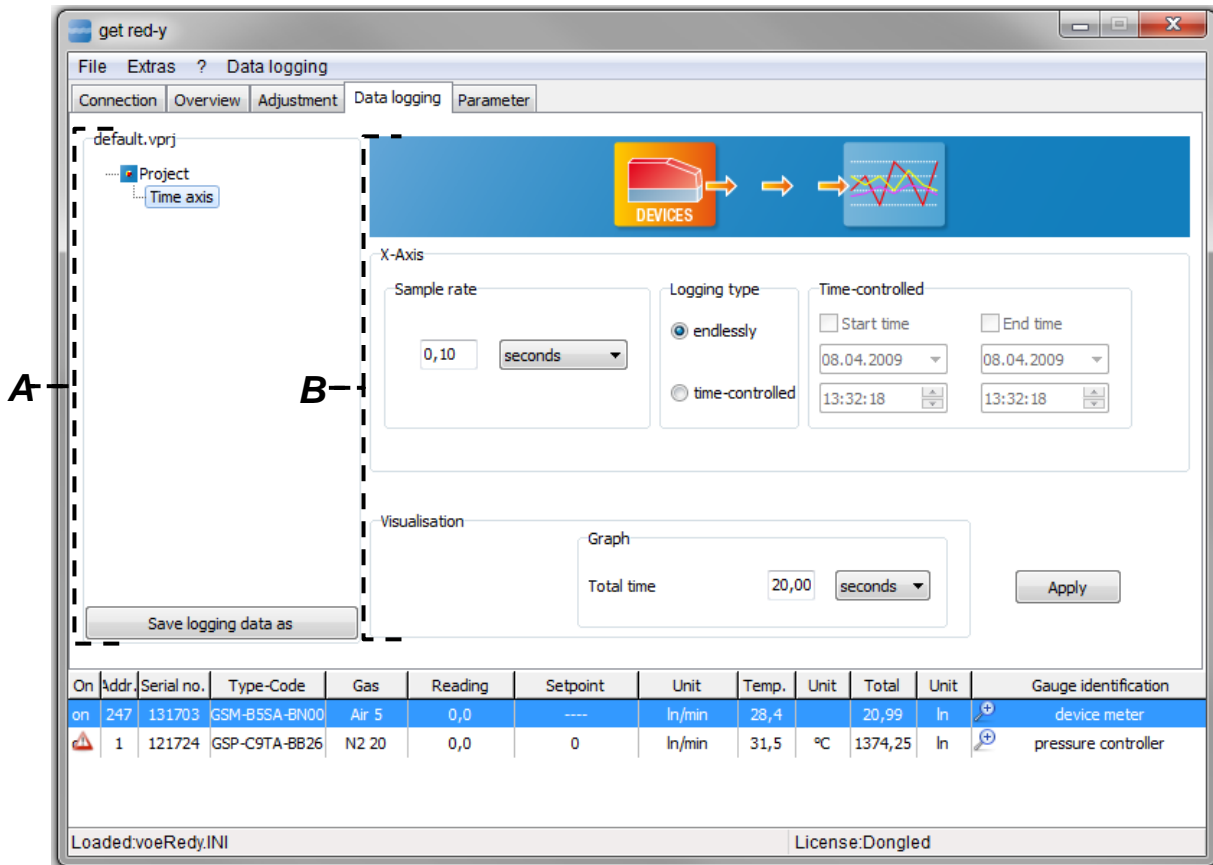


Figure 37: Representation of the Data Logger tab

**A. Projection tree of the Data Loggers:** The Projection tree is the central administrative center for the Data Logger. You can set new channels (Instruments or controllers), signals and the time behavior. With most nodes you can use the right mouse button to open a dialog box in order to execute different functions (see Figure 38). Use the [Save Data as] button to save the settings of the Projection tree.

## B. Setting the time behavior:

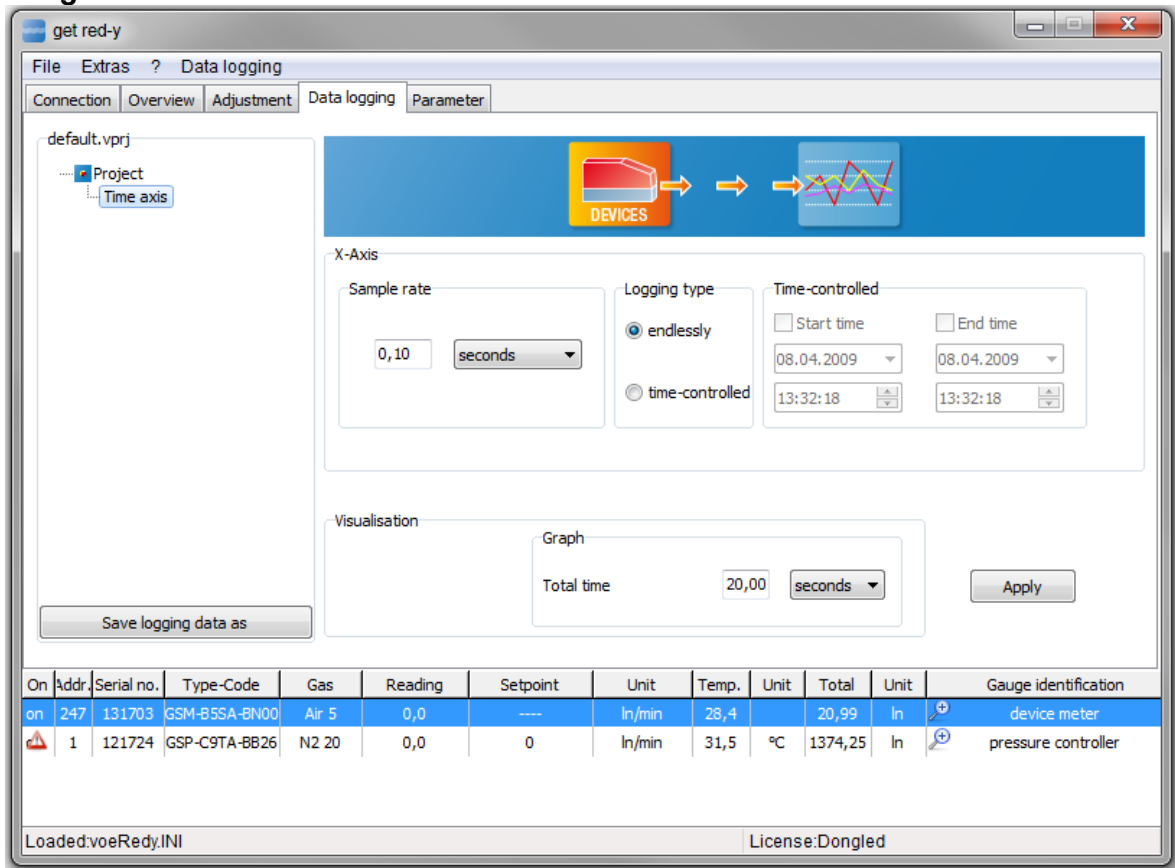

In

Figure 37 the time axis node was selected, with this the B page for time control of the Data Logger appears. You can set the sampling rate (time interval). The fastest sampling rate is 100 ms. In other respects you can define whether the Data Logger should record infinitely or in time-controlled manner.

To define a new channel click the time axis node in the Projection tree. Clicking the right mouse button opens a new window [New Channel]  
(See Figure 38)

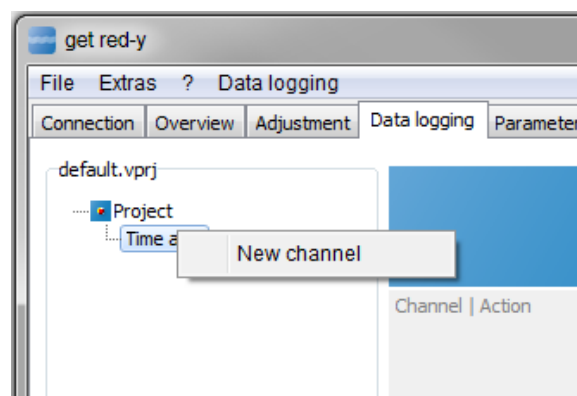


Figure 38: Behaviors of the PID-Parameters. Right-clicking the time axis node opens the [New Channel] dialog box with which a device is registered for recording in the Data Logger.

In Figure 39 all devices located on the bus are listed. One device corresponds to a recording channel (channel). You can add several signals to each channel.

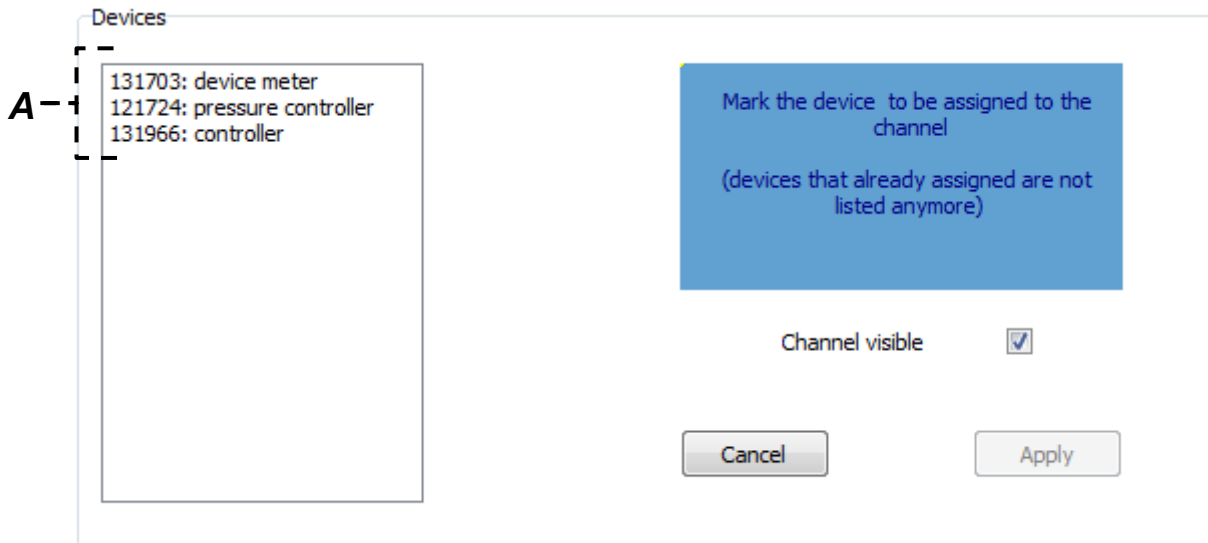


Figure 39: You can register the channels (devices) in the Data Logger which are to be recorded

- A. Available Channels:** All the available devices (Channels) are listed here. Double-click the serial number or click the [Accept] button to display a new window as shown in Figure 40.

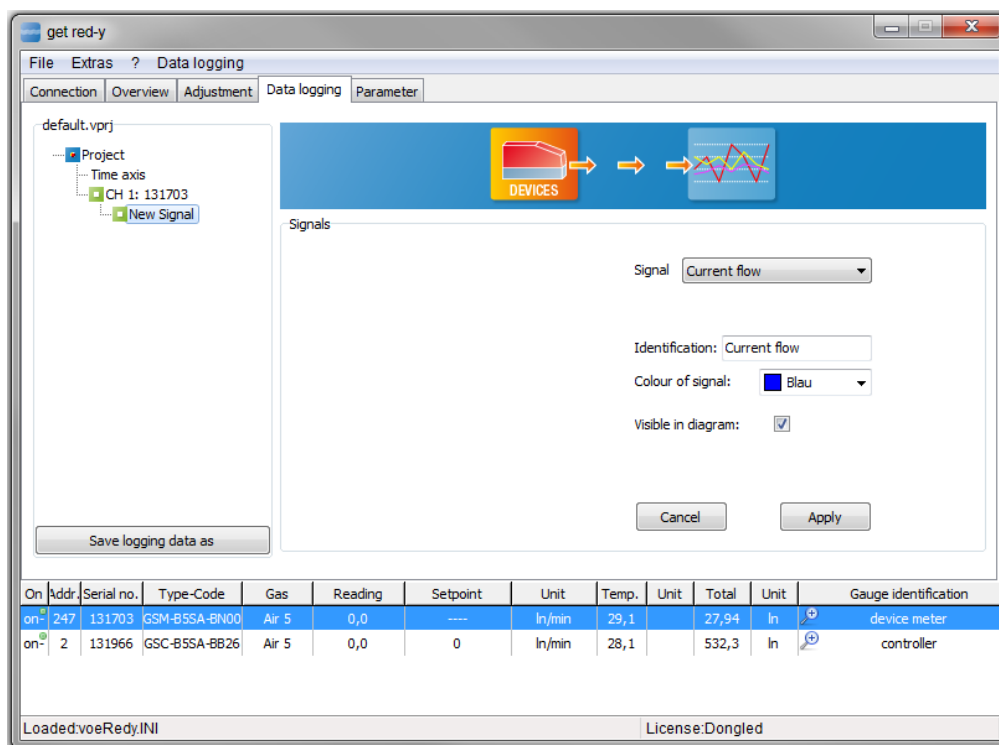


Figure 40: Signals can be added to Channel 131966

Now the device with serial number 131966 is registered in the Data Logger. You still need to assign the recording signals.

The following signals can be recorded/assigned:

The following signals are available for a Controller (Flow or Pressure controller):

- *Actual value Flow*
- *Set point Flow*
- *Temperature*
- *Totalizer*
- *Valve load*
- *(Actual value Pressure)*
- *(Set point Pressure)*

The following signals are available for an instrument:

- *Actual value Flow*
- *Totalizer*
- *Temperature*

Color and visibility can be assigned for every individual signal. Choose the [Accept] button to register the signals for the channel.

In other respects the Data Logger gives the opportunity to automatically control the set point. This makes possible a time-controlled sequence.

This functionality is referred to as *ScriptWalker*.

The automatic sequence control for the *ScriptWalker* is entered in the form of what is called a script. This script has a couple of clear commands:

#### Commands of the Process Profile Function (ScriptWalker):

- **Step:** Here a step range is specified in a percentage, i.e. the set point is set.
- **Wait:** Number of seconds the script will pause.
- **Ramp:** This is a ramp function in percentage

This page can be divided into 3 logical groups –**A,B,C**.

The screenshot shows the 'get red-y' software interface. The main window has tabs for 'Connection', 'Overview', 'Adjustment', 'Data logging', and 'Parameter'. The 'Data logging' tab is active. On the left, a project tree shows 'Project' with 'Time axis' and two channels: 'CH 1: 131966' (with 'Current flow', 'Flow setpoint', and 'Valve capacity utilizati') and 'CH 2: 131703' (with 'Current flow' and 'Temperature'). The 'Flow setpoint' signal is selected. The central area shows the 'ScriptWalker' configuration with a table of steps and a 'Calculate diagram' button. Below the table is a bar chart (B) showing the time behavior of the set point. To the right, there are settings for the signal, including 'Signal: Flow setpoint', 'Identification: Flow setpoint', 'Colour of signal: Grün', and 'Visible in diagram: [checked]'. An 'Apply' button (C) is at the bottom right. At the bottom of the window, a table displays device data.

On	Addr.	Serial no.	Type-Code	Gas	Reading	Setpoint	Unit	Temp.	Unit	Total	Unit	Gauge identification
on-	247	131703	GSM-B5SA-BN00	Air 5	0,0	---	l/min	28,5		20,99	l	device meter
on-	2	131966	GSC-B5SA-BB26	Air 5	0,0	0	l/min	26		525,63	l	controller

Figure 41: ScriptWalker for the automatic sequence of the set point presettings.

- A. SkriptWalker:** Here you can enter the scripts for the automatic sequence control for set point presetting. Clicking the [Calculate Diagram] button displays a diagram in **B** which displays the time behavior of the set point presetting.
- B. Graphic representation of a Script:** Displaying the sequence of the script. The Y-axis of the diagram is set point presetting and the X-axis is the time dimension of the diagram.
- C. Accept:** Click the [Accept] button to display the page of the measured value acceptance. (See Figure 41)

This page can be divided into 6 logical groups –A,B,C,D,E, F.

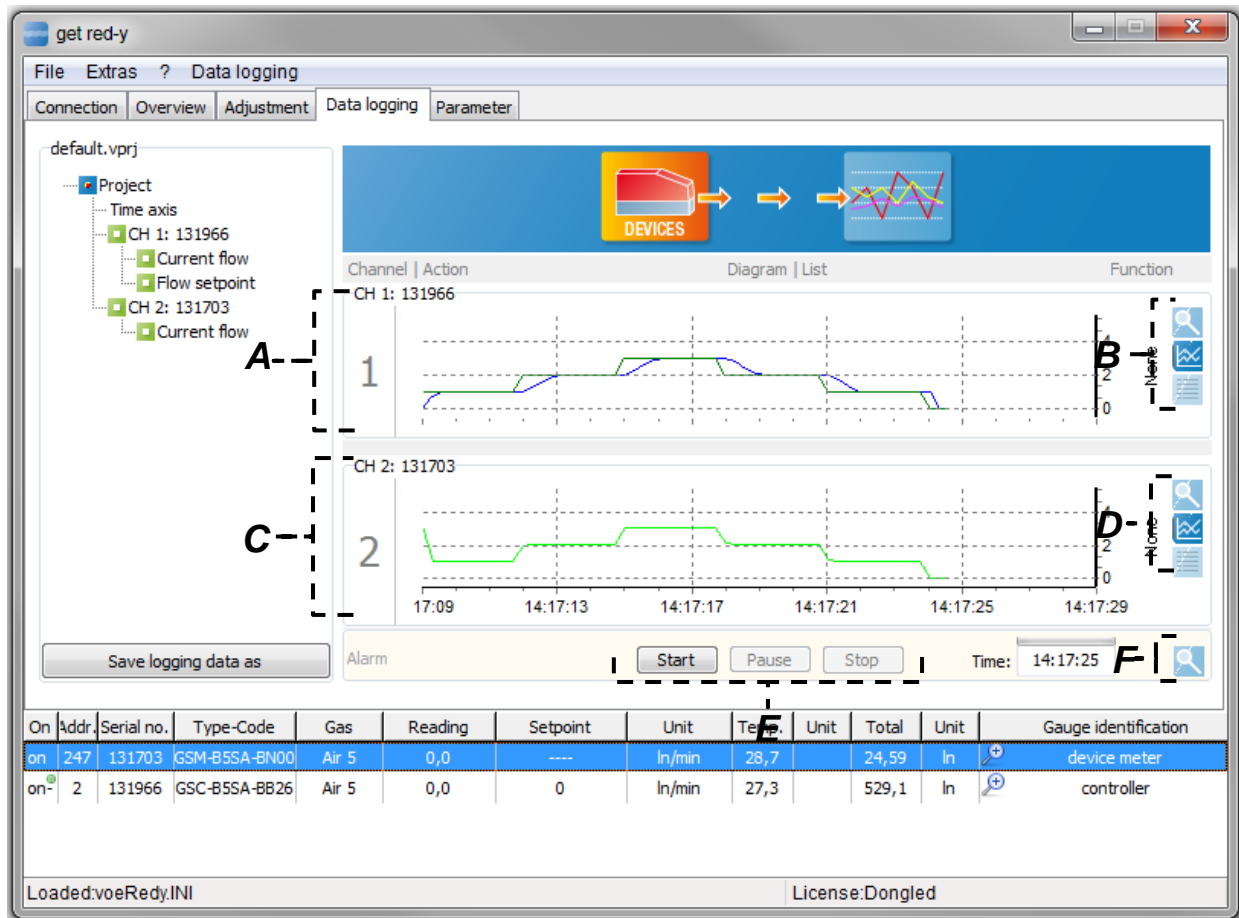





Figure 42: Representation of the registered signals (actual value flow, set point flow) of both channels (devices).

- A. Channel 1:** Here the sequence of the Scriptwalker is graphically represented. In Figure 42 you see the sequence of the script. You see the set points (green) which are chronologically controlled by the script and the actual value (blue). Right mouse clicking within the diagram allows you to copy the measurement data to the clipboard. The data from the clipboard can be copied to Excel with [CTRL+C].
- B. Selection of data view of Channel 1:** You can select 3 different data views.
-  The data of this channel is displayed in a separate window (See Figure 43).
  -  The data is displayed as a graph (See Figure 42).
  -  The data is represented in tabular form (see Figure 43).
- C. Channel 2:** Similar to Item A
- D. Selection of data view of Channel 2:** Similar to Item B
- E. Control of the Data Logger:** Choose the [Start] button to start the Data Logger. You can interrupt the Data Logger with the [Pause] button and pressing the same button again continues the Data Logger without loss of data. Use the [Stop] and [Start] buttons to begin a new recording of the measurement data.

**F. All Channels in one Window:** When you select the magnifying glass button a new window opens which displays all registered channels and signals. You can change data views within this window.

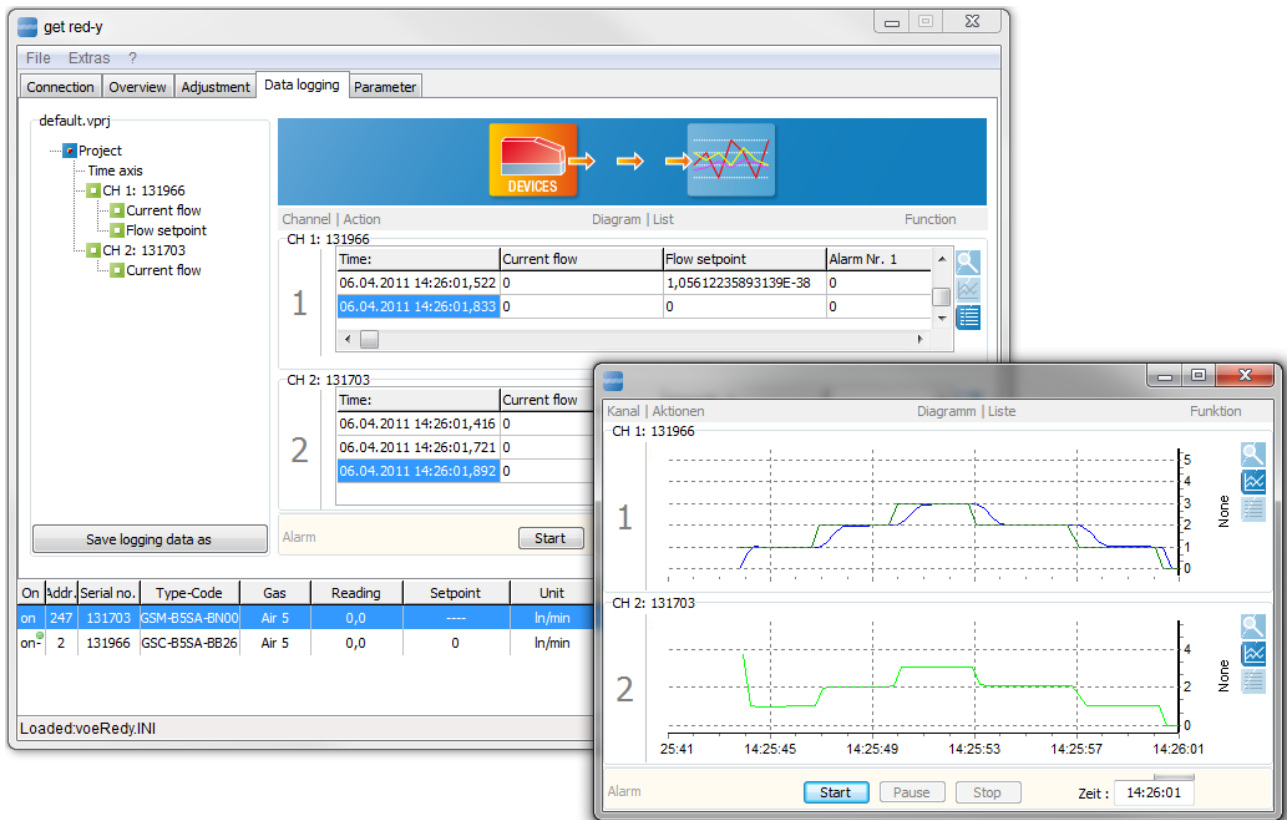


Figure 43: Representation of the measured values in tabular and graphic form

If you opened a separate window for the Data Logger you can change to the Overview tab of a controller as shown in Figure 44 and preset the set point jumps yourself.

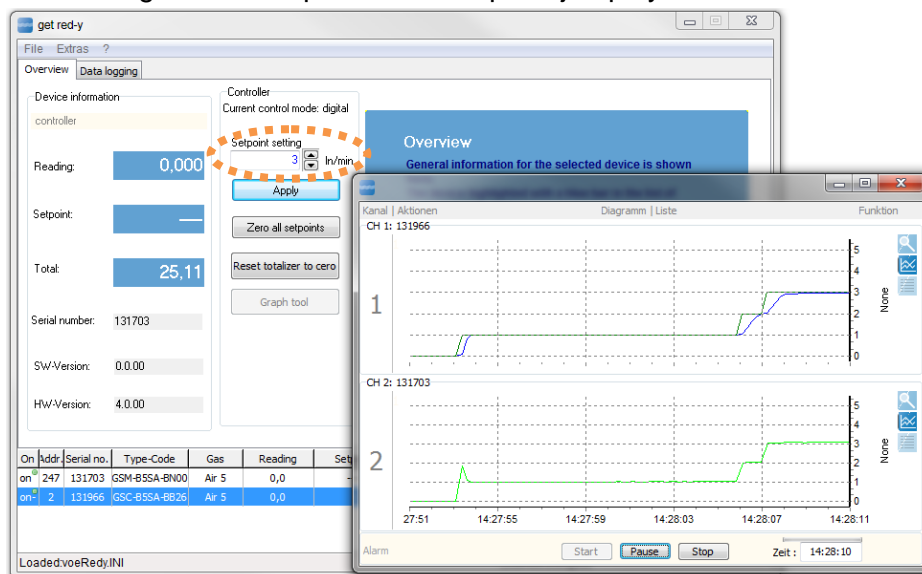


Figure 44: Representation of the measured values in tabular and graphic form

### 3.3 Menu

Basic functions like Select Language, End Program, Open User Manual and Start Important Help tools (Register tool, Reference Device list) can be performed in the menu.

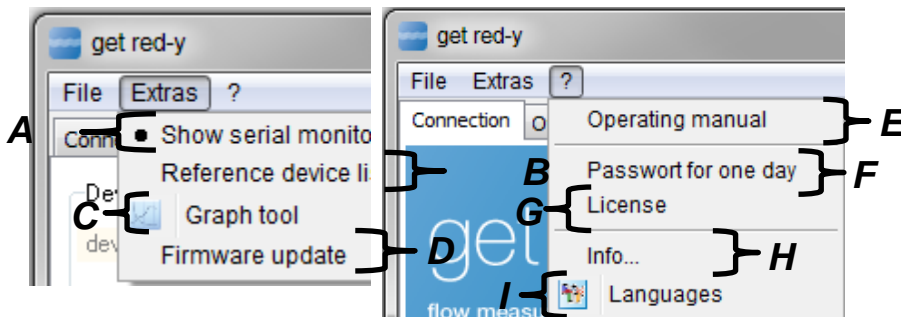


Figure 45: The individual menu items of get red-y 5 are displayed

- A. Interface Monitor:** This option is not available to standard users
- B. Reference Device list:** The reference devices are allocated here (Required exclusively for adjustment and is not available to standard users, see Chapter 4.1).
- C. Graph Tool:** This form is quite similar to the Graph Tool for the pressure regulation and does not require a detailed explanation here.
- D. Firmware update:** A firmware update is only necessary in exceptional cases and can only be activated with a day password.
- E. User manual:** Opens the user manual for get red-y. The user manual can also be opened by pressing [F1].
- F. Day password:** Special settings or adaptations require access to a specified tab. A day password is required for this. Please consult your sales partner.
- G. License:** See Chapter 3.4 and 3.5
- H. Info...:** You can get information here about the installed version of get red-y 5
- I. Languages:** Here you can change the language.

### 3.4 Licenses

The Get red-y 5 software makes access and operation of instruments of the red-y smart series of Vögtlin Instruments AG possible without a license. With optional licenses the functionality can be expanded:



**Note:** The Data Logger, Calibration and Adjustment modules are subject to fees. Your Sales Partner will inform you about the framework conditions of these modules.

### 3.5 License Dialog (License center)

#### Serial number

Number of your *Dongle*. If the software is being operated without a *Dongle*, the number will be 000000000-000000000.

#### Activation code

The manufacturer can use this code to determine your license configuration.

#### Modules

The activated modules

#### upgrade request form

Generates text you can attach to an e-mail for ordering additional licenses.

#### License File

Loads a license file. This file will be generated for you upon request and sent to you by e-mail. When you load this file additional modules will be activated in your *Dongle*.

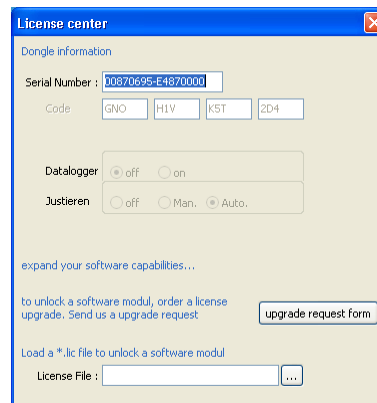


Figure 46: License dialog

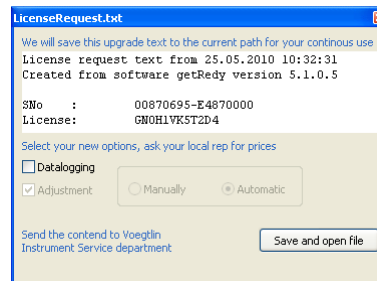


Figure 47: License dialog for calling new functionalities/modules

## 4. Instructions with concrete example

### Adjustment

With the adjustment software you can compare (calibrate) devices of the red-y smart series with a reference and make necessary adjustments.

**!** *Note: The precision, reliability and traceability of the lies solely within the responsibility of the user. The manufacturer cannot be held responsible for the precision of the measurement means or for the correctness of the adjustment as well as its consequences.*

For the adjustment you will require the following:

- Reference device with high accuracy
- Device under test DUT
- Get red-y 5 software
- Suitable communications cable (i.e. PDM-U)
- Stable 24V power supply
- Stable operating conditions with reference to the pureness/homogeneity of the calibration gas; temperature; pressure; humidity and other parameters which could influence the adjustment.

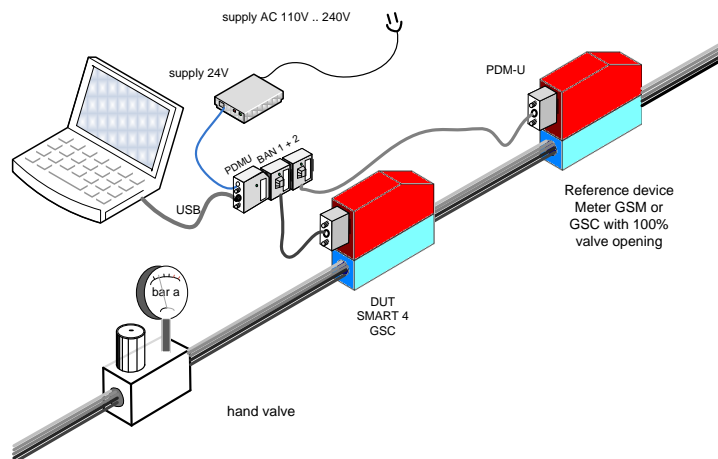


Figure 48: Typical structure for adjustment of the device

## Adjustment Tab

Clicking the Adjustment tab displays the different adjustment options. Please define the appropriate configuration (Automation degree) before you begin making adjustments. The corresponding configuration will be graphically displayed in Figure 49.

The screenshot shows the 'get red-y' software interface. The main window is titled 'Adjustment' and contains a table of adjustment data. The table has the following columns: 'Nom. In/min', 'DUT In/min', 'Ref. In/min', 'Corr. [%]', 'Ref. device', and 'Desc.'. The data rows are as follows:

Nom. In/min	DUT In/min	Ref. In/min	Corr. [%]	Ref. device	Desc.
5,000	5,000	5,000	0,0	120653	
4,000	4,000	4,000	0,0	120653	
3,000	3,000	3,000	0,0	120653	
2,000	2,000	2,000	0,0	120653	
1,000	1,000	1,000	0,0	120653	
0,750	0,750	0,750	0,0	120653	

Below the table, there is a 'File name:' field with the value '131703\_1est' and buttons for 'Preview', 'Adjustment', 'Undo', and 'Default'. A note at the bottom right states: 'Default resets the adjustment data to the state before the first adjustment performed with this specific computer.'

At the bottom of the window, there is a table with the following columns: 'On', 'Addr', 'Serial no.', 'Type-Code', 'Gas', 'Reading', 'Setpoint', 'Unit', 'Temp.', 'Unit', 'Total', 'Unit', 'Gauge identification'. The data rows are as follows:

On	Addr	Serial no.	Type-Code	Gas	Reading	Setpoint	Unit	Temp.	Unit	Total	Unit	Gauge identification
on	247	131703	GSM-BSSA-BN00	Air 5	0,0	---	l/min	28,9		26,3	l	9 device meter
on	2	131966	GSC-BSSA-BB26	Air 5	0,0	0	l/min	28		530,75	l	controller

The status bar at the bottom shows 'Loaded:voeRedy.INI' and 'License:Dongled'.

Figure 49: Adjustment tab with the five selection items on the left side and the corresponding contents page right for the selection item **With Correction list**

## Reference Device List

The Tools menu contains the Reference Device List. Before you can make adjustments, all the provided reference devices must be entered in this list. You can also have the devices from the Device List entered in the Reference Device List. To do this, select the device you wish to have defined as a reference in the Device List. Press the right mouse button and in the Pop up window which appears select the [Add to Reference List] button. This device will then be added to the Reference List.

During the adjustment operation it is possible to switch to a different Reference Device. In the case of the automatic adjustment however you can only use one Reference Device per adjustment operation.

In the Calibration list you can identify the appropriate reference for each measuring point.

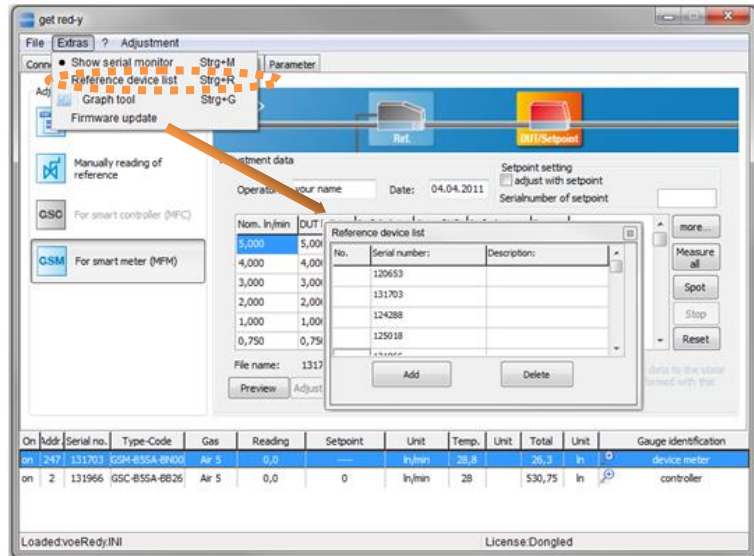


Figure 50: Entering of a reference device into the list of reference devices

## Manual Calibration

### Calibration List

You can expand the list with fields like Temperature, Pressure etc. by clicking the [more].

Corresponding to the device the Set Column is initialized with the measurement range.

With the right mouse button on the Set Column the Popup menu opens for display between [Absolute] and [Percent] of the end value.

Press the [SHIFT+DELETE] buttons to delete measuring points or choose [INSERT] to add them. The value of a newly inserted measuring point must lie within the preceding and following table row.

The default setting of the software is 10 support points.

With a suitable control valve the gas flow is set to the desired set point.

The actual value of the *DUT* (device under test) is automatically entered into the list by pressing the [Spot] button. The actual value of the reference is manually entered in the „Ref.“ column.

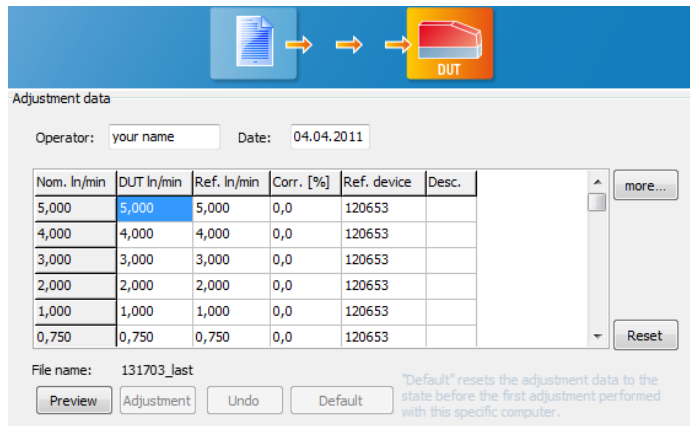


Figure 51: Calibration List is the foundation of the adjustment process

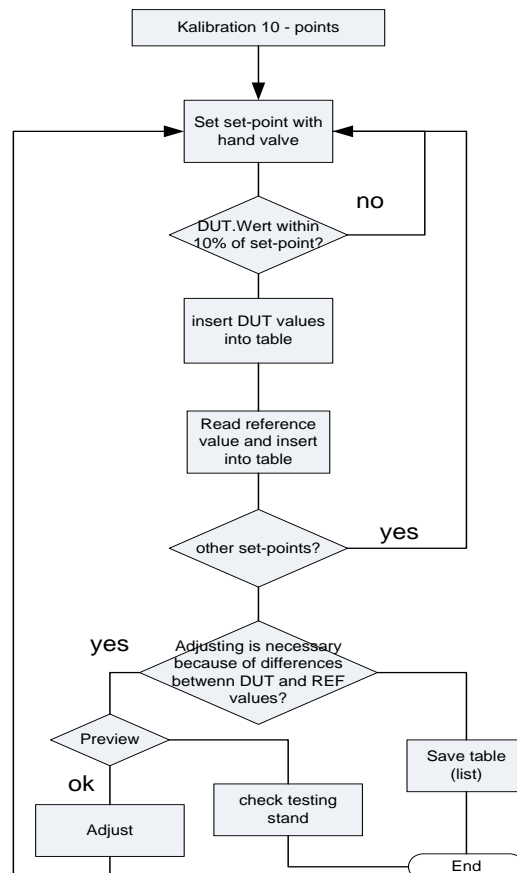


Figure 52: Flow chart of the individual steps of the adjustment process

In practice it has proven successful to start with the greatest measuring point. This makes sense above all in the case of a gas type change, since as a result the previously used gas will be rinsed from the device more rapidly.

With values that should not be changed the value of the DUT is equated with the reference.

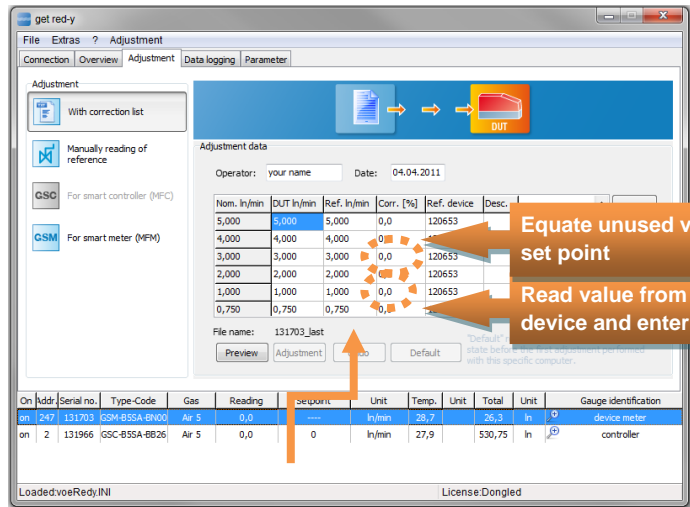


Figure 53: Entry of the measurement data in the Calibration list

### Preview

After the list is complete, click [Preview] to display the deviation graphically.



*Note: In the Preview the data are not yet overwritten. The transfer function of the device is read and displayed!*


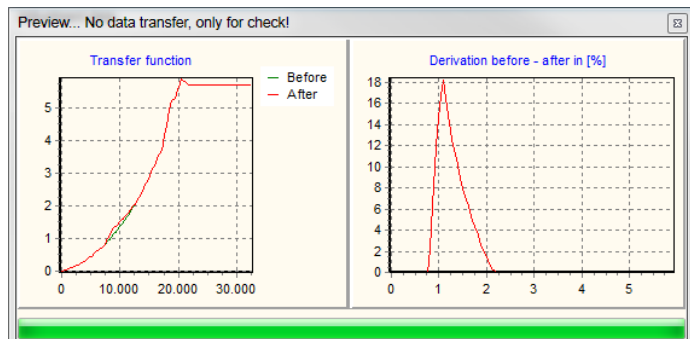


Figure 54: Correction curve, which results from the data of the Calibration list and the transfer curve of the device

After the Preview the [Adjustment] and [Undo] buttons are enabled.

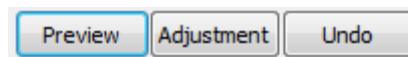

## Adjustment

After clicking [Adjustment] the is graphically represented once more and then saved in the device.

The transfer takes a few seconds. The green progress bar will increase to 100% and then return in the direction of 0%.

After successful transfer the following message appears: Adjustment „Data successfully transferred to the device“.

Now the new adjustment applies, the measured value will be displayed with the corresponding modification.

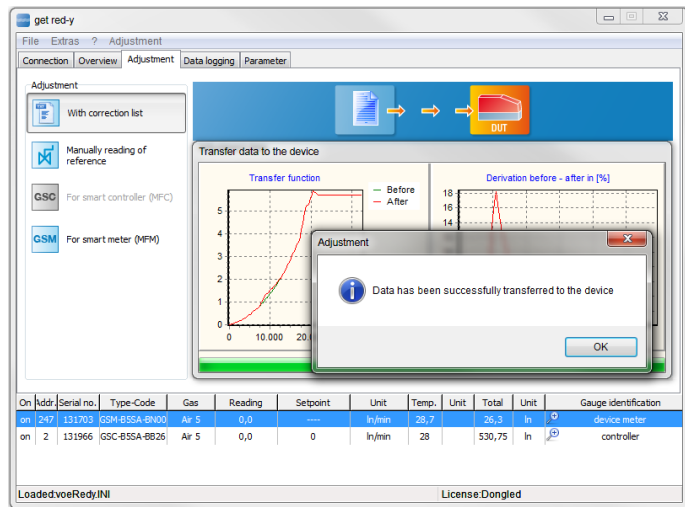


Figure 55: Successful adjustment, i.e. the newly calculated curve has been copied to the device

## Undo

To undo the new adjustment, click the **Undo** button to restore the previous state.

## Autocalibration

With Autocalibrate a higher degree of automation is achieved by networking of the device under test *DUT* and the *Reference*.

There is no readout of the measured values or manual entry. This automation makes possible the averaging of measured values. A measuring point is averaged from 20 measurements.

Currently only reference devices of Vögtlin *Instruments AG* (*smart 3* & *smart 4*) can be connected in one bus.

Reference devices of other manufacturers are not supported in the present version.

**Structure**

DUT: *smart 4* GSC is used as a controller  
 Reference: *smart 4* GSM

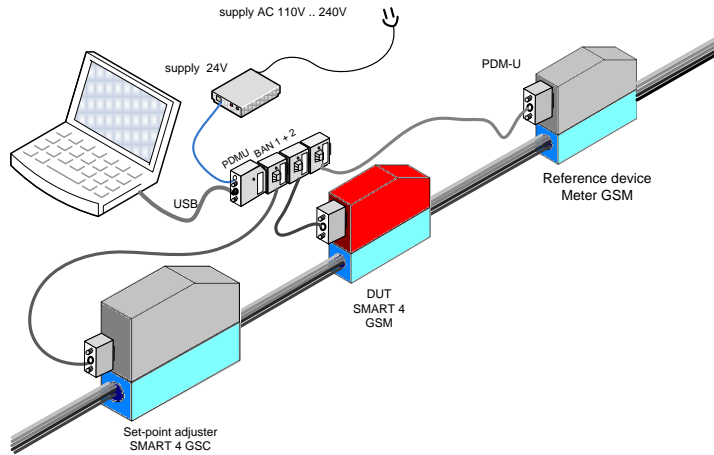


Figure 56: Typical structure of the adjustment

**Adjustment Tab**

Clicking the Adjustment tab opens the window as shown in Figure 57.

**Automation**

Condition for automatic adjustment:  
 Option 2, **For Gas Controllers MFC** must be enabled.

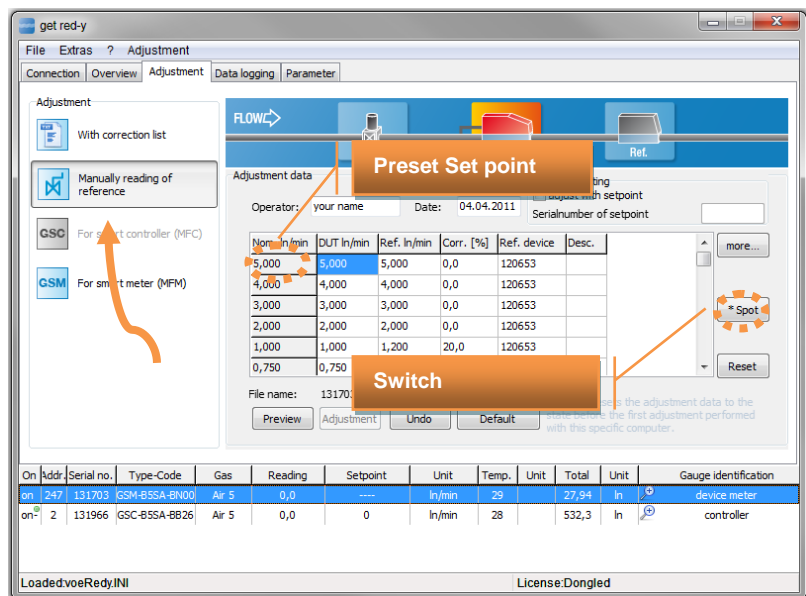


Figure 57: Adjustment tab

**Buttons**

**More:** You can make adjustments to the list display. For the automatic adjustment in the **Ref. Instr.** field the correct serial number of the reference device must be given. Enter the serial numbers of the reference devices in the **Tools/Reference Device List** menu.

**Spot:** A spot measurement will be performed only on the measuring point marked in blue in Figure 57

**Measure All:** Beginning from the blue marked position all following measuring points will be automatically calibrated.

**Reset:** A running measurement can be cancelled. All numerical values of the preceding measurements remain in the list.

### Step by step

- Define the values of the support points. The default is 10 measuring points, which can be changed. However, recommend accepting the default.
- For each support point (measuring point) the corresponding reference device must be allocated. To do this define the serial number of the reference device under **more...**
- With **Spot**, a single support point can be measured.
- **Measure All** runs through the entire list.
- When all the measuring points have been measured, click the **Preview** button.  
(See Description Preview on Page 50)

### Exporting Measurement

If you wish to make the measurement results available also outside of the Get red-y 5 software, you can use the Export function.

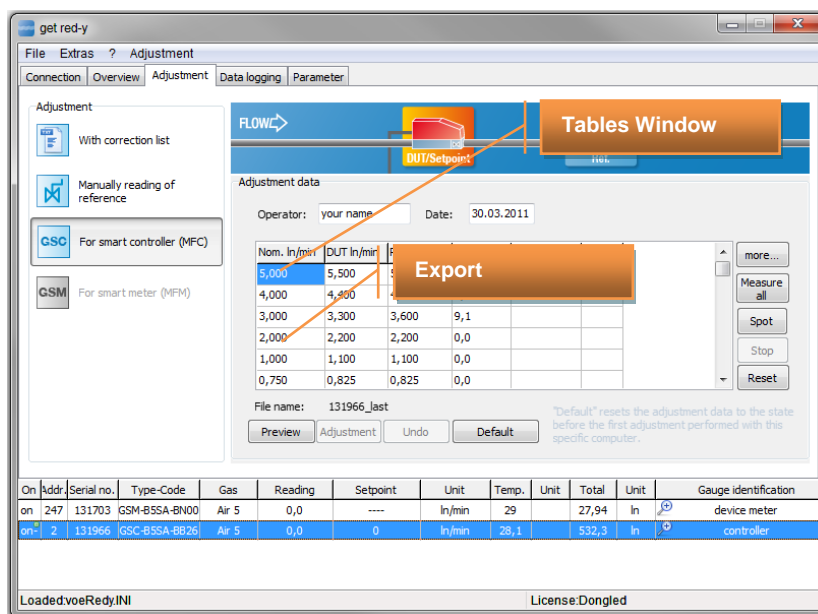


Figure 58: Exporting the measurement data

Click the right mouse button to select the export format. Currently two options are possible:

#### Export as Text File:

With this option a File dialog box appears with which an existing file or a new file is selected. Click **save** to save the measurement results to the file.

#### Export to Clipboard:

The measurement results are copied to the clipboard, and can then be used in any program, e.g. in Excel or in a word processing program.

## 5. Appendix

### Abbreviations

<b>GSC</b>	red-y smart controller, Mass flow controller for gases
<b>GSM</b>	red-y smart meter Mass flow meter for gases
<b>MFC</b>	Mass Flow Controller for gases
<b>MFM</b>	Mass flow meter for gases
<b>red-y smart series / smart</b>	Mass flow meter and controller from Vögtlin Instruments AG
<b>red-y compact series / compact</b>	Mass flow meter from Vögtlin Instruments AG with local display
<b>smart 3</b>	MFC/MFM red-y smart of the third generation (up to SN 109999)
<b>smart 4</b>	MFC/MFM red-y smart of the fourth generation (beginning with SN 110000)
<b>VIAG</b>	Vögtlin Instruments AG
<b>DUT</b>	Device Under Test
<b>GUI</b>	Graphical User Interface
<b>Calibrate:</b>	Compare measured values between Device under test and reference
<b>Adjustment:</b>	Synchronizing or matching of a device under test to the reference
<b>Verify:</b>	Checking a device under tests in comparison to the reference after the adjustment

## 6. Change history

Date	Version	Replaces	Author	Note
08.07.2010	get_red-y_D1_0 Draft	Predecessor	MHU	Adaptation to a new layout
08.11.2010	get_red-y_D1_1	Predecessor	SPR	Revision of contents and extensions
15.02.2011	get_red-y_D1_2	Predecessor	SPR	All extensions Data Logger, Parameter, Graph for Pressure controller and controller, Autoadjustment, Day password and others are included in the documentation
07.03.2011	get_red-y_D1_2	Predecessor	SPR/JER	All extensions Scriptwalker, adjustment with set point default, changes in the software, Zoom window and others are included in the documentation
29.03.2011	get_red-y_D1_2	Predecessor	SPR/FWA	Proofreading FWA + Release PM