


INSTALLATION (Piping [1])

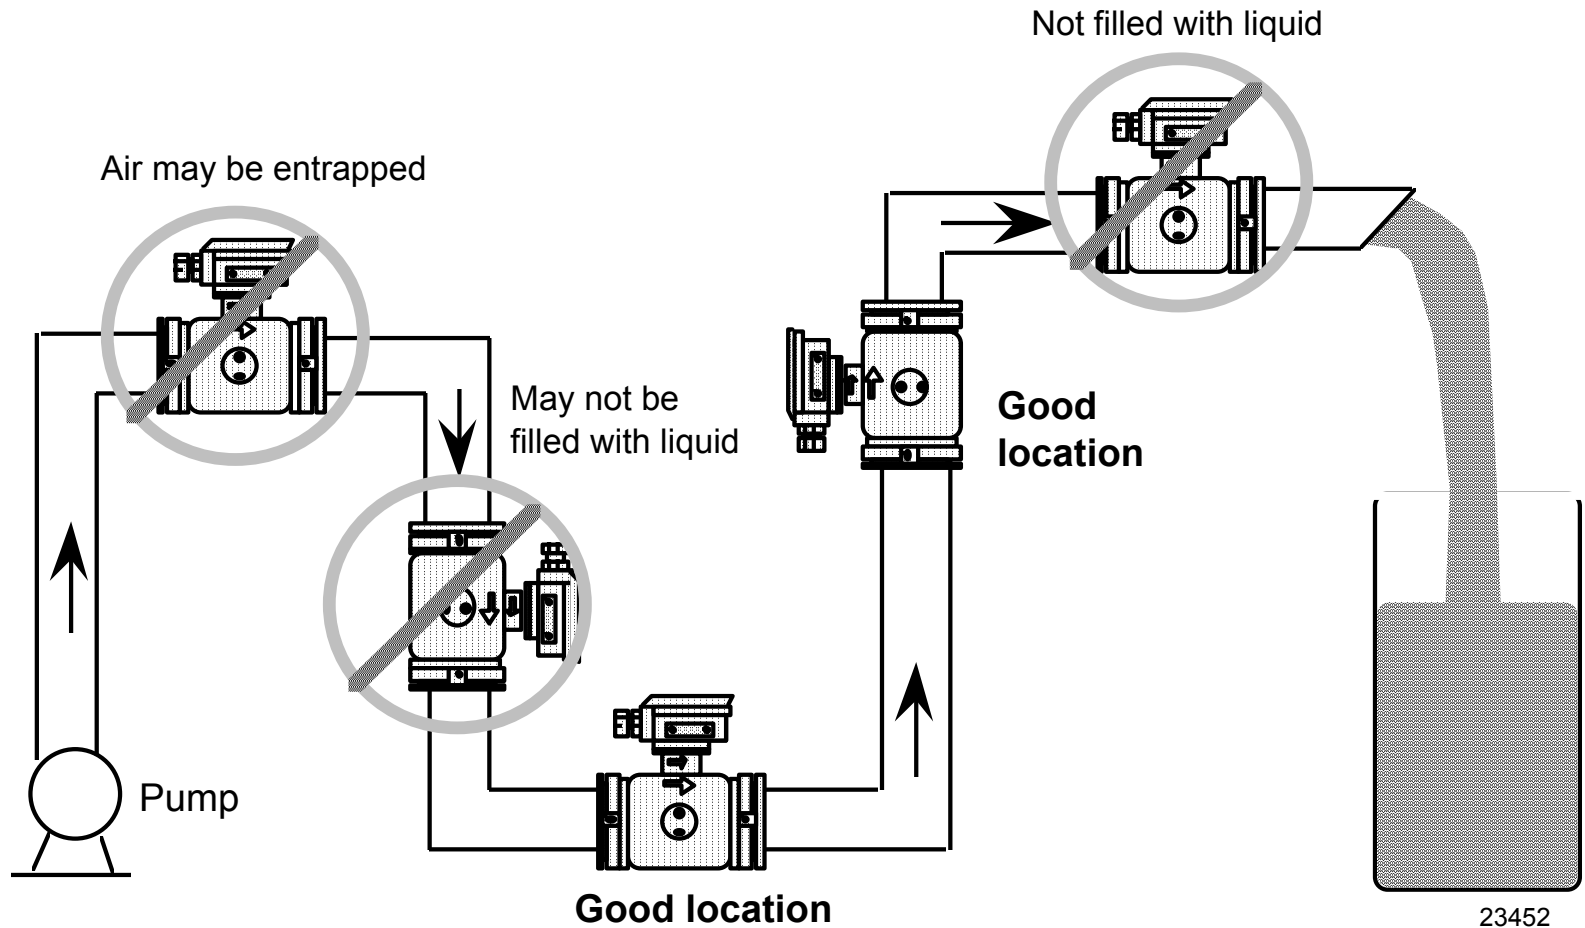

INSTALLATION (Piping [2])

- ⌘ Straight pipe length of upstream side is too important for measuring flow volume.
- ⌘ Especially there is dosing pump or butterfly valve, pay attention to installing position for flowmeter.

