

SDC25/26 Single Loop Controller User's Manual "Installation"

Thank you for purchasing the SDC25/26. Before operating this product described in this User's Manual, please take note of the following points regarding safety. Be sure to keep this manual nearby for handy reference.

RESTRICTIONS ON USE

This product has been designed, developed and manufactured for general-purpose application in machinery and equipment. Accordingly, when used in applications outlined below, special care should be taken to implement a fail-safe and/or redundant design concept as well as a periodic maintenance program.

- Safety devices for plant worker protection
- Start/stop control devices for transportation and material handling machines
- Aeronautical/aerospace machines
- Control devices for nuclear reactors

Never use this product in applications where human safety may be put at risk.

REQUEST

Ensure that this User's Manual is handed over to the user before the product is used. Copying or duplicating this User's Manual in part or in whole is forbidden. The information and specifications in this User's Manual are subject to change without notice. Considerable effort has been made to ensure that this User's Manual is free from inaccuracies and omissions. If you should find any inaccuracies or omissions, please contact Yamatake Corporation. In no event is Yamatake Corporation liable to anyone for any indirect, special or consequential damages as a result of using this product.

©2003 Yamatake Corporation ALL RIGHTS RESERVED

This manual explains the handling precautions, mounting, wiring, PV range type, list of parameters and main specifications only. See the separate "Installation & Configurations" manual listed below for the detail handling procedures and the setting methods, etc. These manuals also contain information on using various functions. Please read if necessary.

SDC25/26 Single Loop Controller User's Manual "Installation & Configurations" CP-SP-1149E
SLP-C35 Smart Loader Package for SDC15/25/26/35/36 Single Loop Controller User's Manual CP-UM-5290E

Unpacking

Check the following items when removing the SDC25/26 from its package:

| Name | Part No. | Q'ty | Remarks |
|------------------|--------------|------|-------------|
| Mounting Bracket | 81409654-001 | 2 | |
| User's Manual | CP-UM-5288E | 1 | This Manual |

SAFETY PRECAUTIONS

WARNING Warnings are indicated when mishandling this product might result in death or serious injury to the user.

CAUTION Cautions are indicated when mishandling this product might result in minor injury to the user, or only physical damage to this product.

WARNING

- ❗ Note that incorrect wiring of the SDC25/26 can damage the SDC25/26 and lead to other hazards. Check that the SDC25/26 has been correctly wired before turning the power ON.
- ❗ Before wiring, or removing/mounting the SDC25/26, be sure to turn the power OFF. Failure to do so might cause electric shock or faulty operation.
- ⚡ Do not touch electrically charged parts such as the power terminals. Doing so might cause electric shock.
- ⚡ Do not disassemble the SDC25/26. Doing so might cause electric shock or faulty operation.

CAUTION

- ❗ Use the SDC25/26 within the operating ranges recommended in the specifications (temperature, humidity, voltage, vibration, shock, mounting direction, atmosphere, etc.). Failure to do so might cause fire or faulty operation.
- ⊘ Do not block ventilation holes. Doing so might cause fire or faulty operation.
- ❗ Wire the SDC25/26 properly according to predetermined standards. Also wire the SDC25/26 using specified power leads according to recognized installation methods. Failure to do so might cause electric shock, fire or faulty operation.
- ❗ Do not allow lead clippings, chips or water to enter the controller case. Doing so might cause fire or faulty operation.
- ❗ Firmly tighten the terminal screws at the torque listed in the specifications. Insufficient tightening of terminal screws might cause electric shock or fire.
- ⊘ Do not use unused terminals on the SDC25/26 as relay terminals. Doing so might cause electric shock, fire or faulty operation.
- ❗ We recommend attaching the terminal cover (sold separately) after wiring the SDC25/26. Failure to do so might cause electric shock.
- ❗ Use the relays within the recommended service life. Failure to do so might cause fire or faulty operation.
- ❗ Use Yamatake Corporation's "SURGENON" if there is the risk of power surges caused by lightning. Doing so might cause fire or faulty operation.
- ⊘ Do not operate the keys with a propelling pencil or sharp-tipped object. Doing so might cause faulty operation.

Mounting



Location

- Install the controller in the following locations:
- Common mode voltages for I/O except power supply and relay contact output: The voltage to ground is 33Vr.m.s max., 46.7V peak max., and 70Vdc max.
 - Not high or low temperature / humidity.
 - Free from sulfide gas or corrosive gas.
 - Less dust or soot.
 - Appropriately processed locations to prevent direct sunlight, wind or rain.
 - Less mechanical vibration and shock.
 - Not close to the high voltage line, welding machine or electrical noise generating source.
 - The minimum 15 meters away from the high voltage ignition device for a boiler.
 - Less effect by the magnetic field.
 - No flammable liquid or gas.

Mounting Procedure

- The mounting must be horizontal within 10 degrees tilted in back side lowering or within 10 degrees tilted in back side rising.
- The mounting panel should be used with a thickness of less than 9 mm of firm board.


External Dimensions

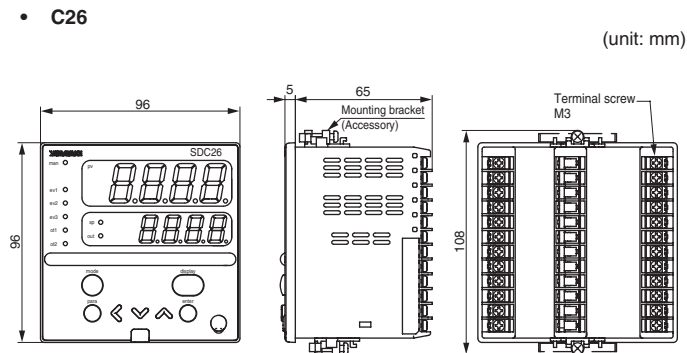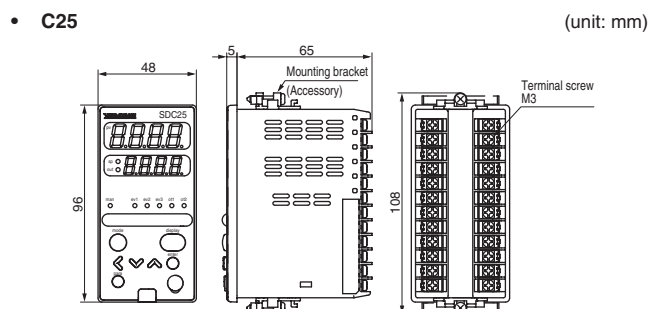

Handling Precautions

To fasten this controller onto the panel, tighten a mounting bracket screws, and turn one more half turn when there is no play between the bracket and panel. Excessively tightening the screws may deform the controller case.

Panel Cutout Dimensions

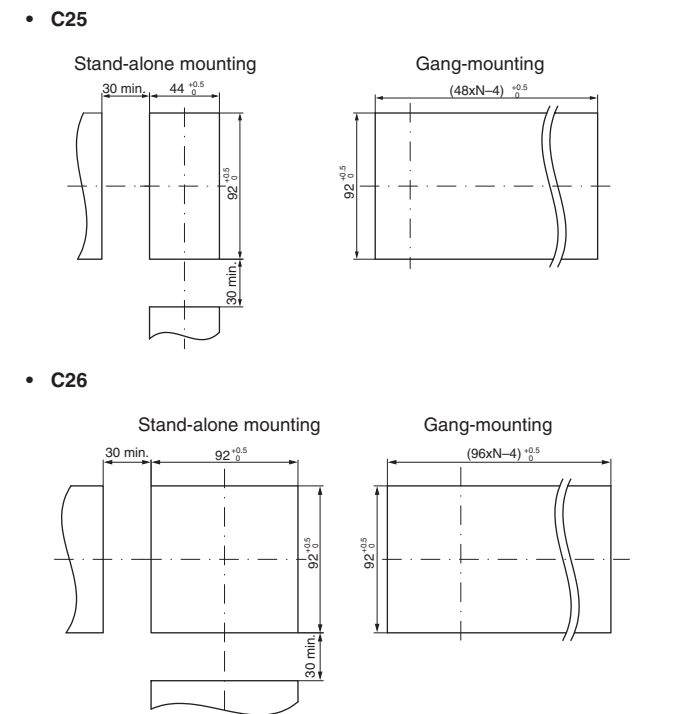

Handling Precautions

- When three or more units are gang-mounted horizontally, the maximum allowable ambient temperature is 40°C.

Wiring

Be sure to provide a switch within operator reach for shutting OFF the main power supply to the controller in the main supply wiring. Also, in case of AC power supply models, the main supply wiring also requires a time-lagged type (T) fuse (rated current: 0.5A, rated voltage: 250 V). (IEC127)

The following table shows the meaning of the symbols in the terminal wiring label on the controller side:


| Symbols | Meaning |
|---------|---------------------------------|
| ~ | AC power supply |
| --- | DC power supply |
| ⚡ | Caution, fear of electric shock |
| ⚡ | Caution |

Handling Precautions

- Before wiring the SDC25/26, verify the controller's model No. and terminal Nos. written on the label on the side of the body. Inspect all wiring once wiring work for the SDC25/26 has been completed.
- Use M3 crimp-type terminal lugs for wiring to terminal.
- Provide a distance of at least 50cm between I/O lead wires or communications lead wires and power lead wires. Also, do not pass these lead wires through the same piping or wiring duct.

- Be careful not to allow any crimp-type terminal lugs to touch adjacent terminals.
- Prepare a heater current conductor to send a heater current through the current transformer. Do not use a heater current that exceeds the specified permissible current as this may damage the controller.
- The current transformer input cannot be used for phase control.
- There is no isolation provided between control output 1 and control output 2. Install an isolator as required.
- Do not connect a terminating resistor to either end of the RS-485 communications line. Doing so may interfere with communication.
- Regarding a device or equipment which is connected to this controller, use a model to which the basic insulation meeting with the power supply voltage and the maximum operating voltage of the I/O units is provided.
- The controller requires maximum 6 seconds to start up once the power is turned ON. The controller can be used once it has started up. However, it is recommended to allow a warm-up time of at least 30 minutes to attain the specified accuracy.

Connection of C25/26

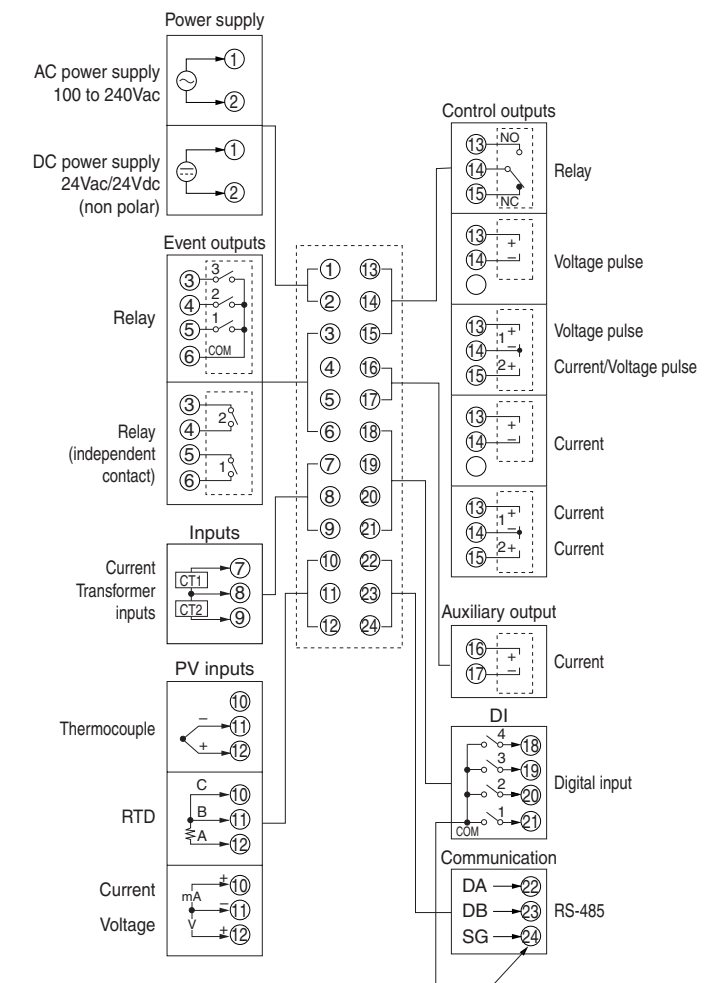


I/O isolation

| Power supply | Internal circuit | Control output 1 |
|-----------------------------|------------------|-------------------------|
| PV input | | Control output 2 |
| Current transformer input 1 | Internal circuit | Auxiliary output |
| Current transformer input 2 | | Event output 1 (Note 1) |
| Loader communication | | Event output 2 (Note 1) |
| Digital input 1 | | Event output 3 |
| Digital input 2 | | |
| Digital input 3 | | |
| Digital input 4 | | |
| RS-485 communication | | |

Items surrounded by solid lines are insulated from other signals. Availability of input or output is based on a model number.

Note 1 In case of independent contact, the part between the event output 1 and the event output 2 is isolated.

Part names and functions

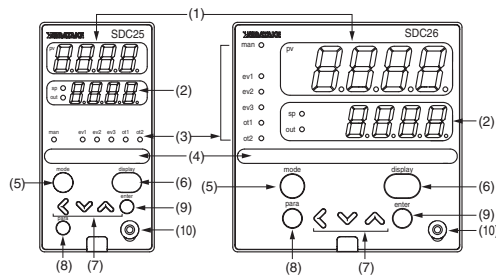

- (1) Upper display: Displays PV values (present temperature, etc.) or setup items.
- (2) Lower display: Displays SP values (set temperature, etc.) and other parameter values. When the lower display shows the SP value, the "sp" lamp lights up. When the display shows the manipulated variable (MV), the "out" lamp lights up.
- (3) Mode indicator man: Lights when MANUAL (manual mode).
ev1 to ev3: Lights when event relays are ON.
ot1, ot2: Lights when the control output is ON.
- (4) Multi-status indicator: In the combination of the lighting condition and the lighting status as a group, the priority 3 groups can be set.
- (5) [mode] key: The operation which has been set beforehand can be done by pushing the key for 1s or more.
- (6) [display] key: Used to change the display contents in the operation display mode. Display is returned from bank setup display to operation display.
- (7) <, v, ^ key: Used for incrementing numeric values and performing arithmetic shift operations.
- (8) [para] key: Switches the display.
- (9) [enter] keys: Used to set the setup values at the start of change and during the change.
- (10) Loader connector: Connects to a personal computer by using a dedicated cable supplied with the Smart Loader Package.

PV range table

| C01 Set value | Sensor type | Range | C01 Set value | Sensor type | Range |
|---------------|-------------------|--------------------------------------|---------------|-------------|-------------------------------------|
| 1 | K | -200 to +1200°C / -300 to +2200°F | 41 | Pt100 | -200.0 to +500.0°C / -300 to +900°F |
| 2 | K | 0 to 1200°C / 0 to 2200°F | 42 | JPt100 | -200.0 to +500.0°C / -300 to +900°F |
| 3 | K | 0.0 to 800.0°C / 0 to 1500°F | 43 | Pt100 | -200.0 to +200.0°C / -300 to +400°F |
| 4 | K | 0.0 to 600.0°C / 0 to 1100°F | 44 | JPt100 | -200.0 to +200.0°C / -300 to +400°F |
| 5 | K | 0.0 to 400.0°C / 0 to 700°F | 45 | Pt100 | -100.0 to +300.0°C / -150 to +500°F |
| 6 | K | -200.0 to +400.0°C / -300 to +700°F | 46 | JPt100 | -100.0 to +300.0°C / -150 to +500°F |
| 7 | K | -200.0 to +200.0°C / -300 to +400°F | 47 | Pt100 | -100.0 to +200.0°C / -150 to +400°F |
| 8 | J | 0 to 1200°C / 0 to 2200°F | 48 | JPt100 | -100.0 to +200.0°C / -150 to +400°F |
| 9 | J | 0.0 to 800.0°C / 0 to 1500°F | 49 | Pt100 | -100.0 to +150.0°C / -150 to +300°F |
| 10 | J | 0.0 to 600.0°C / 0 to 1100°F | 50 | JPt100 | -100.0 to +150.0°C / -150 to +300°F |
| 11 | J | -200.0 to +400.0°C / -300 to +700°F | 51 | Pt100 | -50.0 to +200.0°C / -50 to +400°F |
| 12 | E | 0.0 to 800.0°C / 0 to 1500°F | 52 | JPt100 | -50.0 to +200.0°C / -50 to +400°F |
| 13 | E | 0.0 to 600.0°C / 0 to 1100°F | 53 | Pt100 | -50.0 to +100.0°C / -50 to +200°F |
| 14 | T | -200.0 to +400.0°C / -300 to +700°F | 54 | JPt100 | -50.0 to +100.0°C / -50 to +200°F |
| 15 | R | 0 to 1600°C / 0 to 3000°F | 55 | Pt100 | -60.0 to +40.0°C / -60 to +100°F |
| 16 | S | 0 to 1600°C / 0 to 3000°F | 56 | JPt100 | -60.0 to +40.0°C / -60 to +100°F |
| 17 | B | 0 to 1800°C / 0 to 3300°F | 57 | Pt100 | -40.0 to +60.0°C / -40 to +140°F |
| 18 | N | 0 to 1300°C / 0 to 2300°F | 58 | JPt100 | -40.0 to +60.0°C / -40 to +140°F |
| 19 | PLII | 0 to 1300°C / 0 to 2300°F | 59 | Pt100 | -10.00 to +60.00°C / -10 to +140°F |
| 20 | Wre5-26 | 0 to 1400°C / 0 to 2400°F | 60 | JPt100 | -10.00 to +60.00°C / -10 to +140°F |
| 21 | Wre5-26 | 0 to 2300°C / 0 to 4200°F | 61 | Pt100 | 0.0 to 100.0°C / 0 to 200°F |
| 22 | Ni-NiMo | 0 to 1300°C / 0 to 2300°F | 62 | JPt100 | 0.0 to 100.0°C / 0 to 200°F |
| 23 | PR40-20 | 0 to 1900°C / 0 to 3400°F | 63 | Pt100 | 0.0 to 200.0°C / 0 to 400°F |
| 24 | DIN U | -200.0 to +400.0°C / -300 to +700°F | 64 | JPt100 | 0.0 to 200.0°C / 0 to 400°F |
| 25 | DIN L | -100.0 to +800.0°C / -150 to +1500°F | 65 | Pt100 | 0.0 to 300.0°C / 0 to 500°F |
| 26 | Gold iron chromel | 0.0K to 360.0K / 0.0 to 360.0K | 66 | JPt100 | 0.0 to 300.0°C / 0 to 500°F |
| | | | 67 | Pt100 | 0.0 to 500.0°C / 0 to 900°F |
| | | | 68 | JPt100 | 0.0 to 500.0°C / 0 to 900°F |


Handling Precautions

- The accuracy is $\pm 0.3\%FS \pm 1$ digit, and $\pm 0.6\%FS \pm 1$ digit for a negative area of the thermocouple.
- The accuracy varies according to the range:
 - The accuracy of the No.17 (sensor type B) is $\pm 4.0\%FS$ for a range of 260°C or less, $\pm 0.4\%FS$ for 260 to 800°C.
 - The PV values under 20°C are not shown.
 - The accuracy of the No.23 (sensor type PR40-20) is $\pm 2.5\%FS$ for 0 to 300°C, and $\pm 1.5\%FS$ for 300 to 800°C, $\pm 0.5\%FS$ for 800 to 1900°C.
 - The accuracy of the No.26 (sensor type gold iron chromel) is $\pm 1.5K$.
 - The accuracy of the No.19 (sensor type PLII) in the range of 0 to 32°F does not meet the indication accuracy.
- The ranges with a decimal point show figures under decimal point.

| C01 Set value | Sensor type | Range |
|---------------|--------------|--|
| 81 | 0 to 10mV | The scaling and the decimal point position can be changed variably in a range of -1999 to +9999. |
| 82 | -10 to +10mV | |
| 83 | 0 to 100mV | |
| 84 | 0 to 1V | |
| 86 | 1 to 5V | |
| 87 | 0 to 5V | |
| 88 | 0 to 10V | |
| 89 | 0 to 20mA | |
| 90 | 4 to 20mA | |

Key operation and setting

The following shows the flow of key operation:

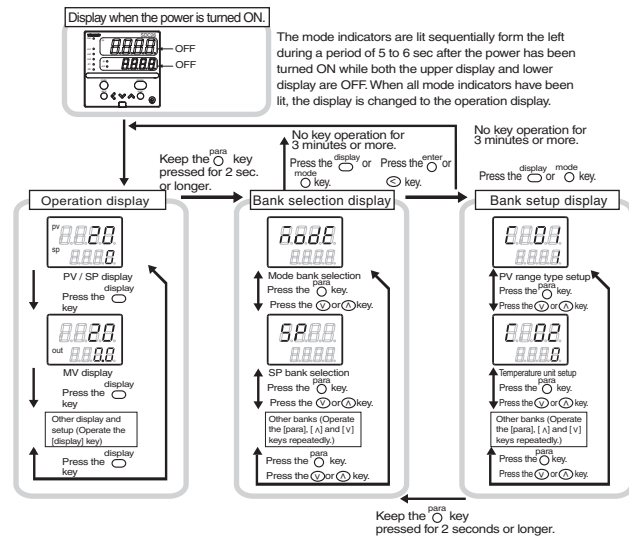

The display and setup status shown above are examples for explanation. Therefore, some displays or settings are not shown actually according to the model and/or setup contents.

There are the standard type and special type in the data setup method. Here, the method is explained in the standard type.

Setting example of the PV range type

Display the **SP** on the upper display in the bank setup mode for the setup bank. When the [enter] key is pressed, the numerical value on the lower display will start to flash. Move the digit or increase/decrease the numeric value by pressing the [\leftarrow] [\vee] [\wedge] keys. When the [enter] key is pressed at the desired numeric value, the flashing will stop and the data will be set.

Setting example of the SP1

Display the **SP** on the upper display in the bank setup mode of the setup bank. When the [enter] key is pressed, the numerical value on the lower display will start to flash. Move the digit or increase/decrease the numeric value by pressing the [\leftarrow] [\vee] [\wedge] keys. When the [enter] key is pressed at the desired numeric value, the flashing will stop and the data will be set.

For details of the handling and setting methods, refer to the following user's manual:

Single Loop Controller SDC25/26 User's Manual "Installation & Configurations" CP-SP-1149E

Alarm code table

This table shows the alarm display and measures for the abnormal operation of this controller.

| Alarm code | Failure name | Cause | Corrective action |
|------------|--|--|--|
| AL01 | PV input failure (over range) | Sensor line break, incorrect wiring, incorrect PV range type setting | Checking wiring or reset PV range type. |
| AL02 | PV input failure (under range) | Sensor line break, incorrect wiring, incorrect PV range type setting | Checking wiring. |
| AL03 | CJ failure | Terminal temperature is faulty (thermocouple). | Checking the ambient temperature. |
| | PV input failure | Sensor line break, incorrect wiring (RTD) | Checking wiring. |
| AL11 | CT input failure (over-range) (CT input 1 or 2, or both) | A current exceeding the upper limit of the display range was measured. The number of CT turns or the number of CT power wire loops is incorrectly set, or wiring is incorrect. | Use a CT with the correct number of turns for the display range, reset the number of CT turns, reset the number of CT power wire loops, and/or check the wiring. |
| AL12 | A/D conversion failure | Defective A/D converter | Replace unit. |
| AL95 | Parameter failure | • Power turned OFF during fixing data • Data corrupted due to noise, etc. | Re-start the system. Reset data or replace unit. (AL95/97: setting data, AL96/98: tuning data) |
| AL96 | Adjustment data failure | • Power turned OFF during fixing data • Data corrupted due to noise, etc. | |
| AL97 | Parameter failure (RAM area) | Data corrupted due to noise, etc. | |
| AL98 | Adjustment data failure (RAM area) | Data corrupted due to noise, etc. | |
| AL99 | ROM failure | ROM (memory) error | Re-start the system. Replace unit. |

Maintenance

- Cleaning :** When wiping out the SDC25/26, use the soft and dried cloth.
- Parts replacement:** Do not replace the parts.
- Fuse replacement:** When replacing the fuse for the power supply wires, make sure that the replacement fuse complies with all applicable safety standards. Standard IEC127, Cutoff Speed Delayed operation type (T), Rated Voltage 250V, Rated Current 0.5A

Model selection table

| Basic model No. | Mounting | Control output | PV input | Power supply | Option 1 | Option 2 | Additions 1 | Additions 2 | Specifications |
|-----------------|----------|----------------|----------|--------------|----------|----------|-------------|-------------|--|
| C25 | | | | | | | | | 48 x 96 size model |
| C26 | | | | | | | | | 96 x 96 size model |
| | T | | | | | | | | Panel mounting type |
| | | | | | | | | | Control output 1 Control output 2 |
| | | | | | | | | | Relay contact output NO Relay contact output NC |
| | | | | | | | | | Voltage pulse output (for SSR drive) |
| | | | | | | | | | Current output |
| | | | | | | | | | Voltage pulse output (for SSR drive) Voltage pulse output (for SSR drive) |
| | | | | | | | | | Current output |
| | | | | | | | | | Current output Current output |
| | | | | | | | | | Universal |
| | | | | | | | | | AC model (100 to 240Vac) 50/60Hz |
| | | | | | | | | | DC model (24Vac/24Vdc) |
| | | | | | | | | | Event relay output: 3 points |
| | | | | | | | | | Event relay output: 2 points, Auxiliary output (current output) |
| | | | | | | | | | Event relay output: 2 points, (independent contact) |
| | | | | | | | | | Event relay output: 2 points (independent contact) Auxiliary output (current output) |
| | | | | | | | | | - |
| | | | | | | | | | Current transformer input: 2 points Digital input: 4 points |
| | | | | | | | | | Current transformer input: 2 points Digital input: 4 points RS-485 communication |
| | | | | | | | | | - |
| | | | | | | | | | No additional treatment |
| | | | | | | | | | Inspection certificate provided |
| | | | | | | | | | Tropicalization treatment applied |
| | | | | | | | | | K Anti-sulfide treatment applied |
| | | | | | | | | | B Tropicalization treatment applied and Inspection certificate provided |
| | | | | | | | | | L Anti-sulfide treatment applied and Inspection certificate provided |
| | | | | | | | | | Y Complying with the traceability certificate |
| | | | | | | | | | 0 IP65 inapplicable |

Note 1. Current transformer is sold separately.
Note 2. Cannot be selected for DC model.

Specifications

- PV input**
 - Thermocouple: K,J,E,T,R,S,B,N (JIS C1602-1995) PL II (Engelhard Industries Data (ITS90)) WRe5-26 (ASTM E988-96(Reapproved 2002)) Ni-NiMo (ASTM E1751-00) PR40-20 (Johnson Matthey Data) DIN U, DIN L (DIN 43710-1985) Gold iron chromel (Hayashidenko Data)
 - Resistance temperature detector (RTD): Pt100 (JIS C1604-1997) JPt100 (JIS C1604-1989) 0 to 10mV, -10 to +10mV, 0 to 100mV, 0 to 1V, 1 to 5V, 0 to 5V, 0 to 10V
 - DC voltage: 0 to 20mA, 4 to 20mA
 - DC current: 300ms
 - Indication accuracy: $\pm 0.3\%FS \pm 1$ digit, $\pm 0.6\%FS \pm 1$ digit for a negative area of the thermocouple (at ambient temperature $23 \pm 2^\circ C$)
- Digital input**
 - Input type: Dry contact or open collector
 - Allowable ON contact resistance: Max.250Ω
 - Allowable OFF contact resistance: Min.100kΩ
 - Allowable ON residual voltage: Max.1.0V

- Terminal current (ON): Approx.7.5mA (in case of short circuit). Approx.5.0mA (in case of contact resistance 250Ω)
- Minimum hold time: 600ms or more
- Current transformer input
 - Input type: Current transformer 800 turns QN206A (5.8mm hole dia.) Sold separately QN212A (12mm hole dia.) Sold separately
 - Range of measurement current: 0.4 to 50.0A
 - Indication accuracy: $\pm 5\%FS \pm 1$ digit
 - Indication range: 0.0 to 70.0A
- Control output
 - Relay output
 - Contact rating: NO side 250Vac/30Vdc, 3A (resistive load) NC side 250Vac/30Vdc, 1A (resistive load)
 - Voltage pulse output (for SSR drive)
 - Open circuit voltage: 19Vdc $\pm 15\%$
 - Internal resistance: 82Ω $\pm 0.5\%$
 - Allowable current: Max. 24mA
 - Min OFF time / ON time: 1ms when the time proportional cycle time is less than 10s. 250ms when the time proportional cycle time is more than 10s.
- Auxiliary output
 - Output type: 0 to 20mA or 4 to 20mA
 - Allowable load resistance: Max.600Ω
 - Output accuracy: $\pm 0.1\%FS$ (at ambient temperature $23 \pm 2^\circ C$) $\pm 1\%FS$ at 0 to 1mA
- Event relay outputs (ev1 to ev3)
 - Output rating: 250Vac/30Vdc 2A (resistive load)
 - Life: Min. 100,000 operations
 - Min. switching specifications: 5V, 10mA (reference value)
- RS-485 communication
 - Transmission line: 3-wire system
 - Transmission speed: 4800, 9600, 19200, 38400bps
 - Communication protocol: CPL and MODBUS conforming
 - Terminating resistor: Do not connect a terminating resistor.
- Environmental condition
 - Operating conditions
 - Ambient temperature: 0 to 50°C (Gang-mounting: 0 to 40°C)
 - Ambient humidity: 10 to 90%RH (non-condensing)
 - Rated power supply voltage: AC model 100 to 240Vac, 50/60Hz DC model 24Vac 50/60Hz, 24Vdc AC model 85 to 264Vdc, 50/60 ± 2 Hz DC model 21.6 to 26.4Vdc, 50/60 ± 2 Hz 21.6 to 26.4Vdc
 - Power supply voltage range: 21.6 to 26.4Vdc
- Transport conditions
 - Ambient temperature: -20 to +70°C
 - Ambient humidity: 10 to 95%RH (non-condensing)
- Other specifications
 - Power consumption: Max. 12VA for AC model Max. 12VA for DC model at 24Vdc Max. 8W for DC model at 24Vdc
 - Non-detected failure time: Max. 20ms (AC model) No power failure allowed (DC model)
 - Altitude: 2000m or less
 - Mass: C25 Approx.250g (with mounting bracket) C26 Approx.300g (with mounting bracket)
 - Terminal screw tightening torque: 0.4 to 0.6 N·m Max.
 - Applicable standards: EN61010-1, EN61326-1
 - Over-voltage category: Category II (IEC60364-4-443, IEC60664-1)
 - Allowable pollution degree: Pollution degree 2

Accessories and optional parts

| Name | Model No. |
|---------------------|--|
| Mounting bracket | 81409654-001(Accessory) |
| Current transformer | QN206A(5.8mm hole dia.) QN212A(12mm hole dia.) |
| Hard cover | 81446915-001(for C25) 81446916-001(for C26) |
| Terminal cover | 81446912-001(for C25) 81446913-001(for C26) |

SDC25/26 List of Parameters

User level details 0: Display in basic/standard/high function,
1: Display in standard/high function,
2: Display in high function.

Initial value may vary depending on model No.

Event bank

Bank selection: E_U

| Display | Item | Contents | Initial value | User level |
|--------------------------|-------------------------------------|---|---------------|------------|
| E_1 to E_5 | Internal event 1 to 5, main setting | -1999 to +9999 The decimal point position varies by meeting the internal event operation type. | 0 | 0 |
| $E_{1.5b}$ to $E_{5.5b}$ | Internal event 1 to 5, sub-setting | 0 to 9999 for some operation type. | 0 | 0 |
| $E_{1.MV}$ to $E_{5.MV}$ | Internal event 1 to 5, hysteresis | 0 to 9999 The decimal point position varies by meeting the internal event operation type. | 5 | 0 |
| $E_{1.on}$ to $E_{5.on}$ | Internal event 1 to 5, ON delay | 0.0 to 999.9 (For the delay time unit 0.1s) | 0 | 2 |
| $E_{1.oF}$ to $E_{5.oF}$ | Internal event 1 to 5, OFF delay | 0 to 9999 (Except for the delay time unit 0.1s) | 0 | 2 |

PID bank

Bank selection: $P_{i'd}$

| Display | Item | Contents | Initial value | User level |
|--------------------------|---|--|---------------|------------|
| P_{-i} to P_{-y} | Proportional band (PID1 to 4 group) | 0.1 to 999.9% | 5.0 | 0 |
| I_{-i} to I_{-y} | Integration time (PID1 to 4 group) | 0 to 9999s or 0.0 to 999.9s (0: No integral control action) | 120 | 0 |
| D_{-i} to D_{-y} | Derivative time (PID1 to 4 group) | 0 to 9999s or 0.0 to 999.9s (0: No derivative control action) | 30 | 0 |
| r_{E-i} to r_{E-y} | Manual reset (PID1 to 4 group) | -10.0 to +110.0% | 50.0 | 0 |
| o_{L-i} to o_{L-y} | MV low limit (PID1 to 4 group) | -10.0 to +110.0% | 0.0 | 1 |
| o_{H-i} to o_{H-y} | MV high limit (PID1 to 4 group) | -10.0 to +110.0% | 100.0 | 1 |
| $P_{-i'}$ to $P_{-y'}$ | Cool-side proportional band (PID1 to 4 group) | 0.1 to 999.9% | 5.0 | 0 |
| $I_{-i'}$ to $I_{-y'}$ | Cool-side integration time (PID1 to 4 group) | 0 to 9999s or 0.0 to 999.9s (0: No integral control action) | 120 | 0 |
| $D_{-i'}$ to $D_{-y'}$ | Cool-side derivative time (PID1 to 4 group) | 0 to 9999s or 0.0 to 999.9s (0: No derivative control action) | 30 | 0 |
| $o_{L-i'}$ to $o_{L-y'}$ | Cool-side MV low limit (PID1 to 4 group) | -10.0 to +110.0% | 0.0 | 1 |
| $o_{H-i'}$ to $o_{H-y'}$ | Cool-side MV high limit (PID1 to 4 group) | -10.0 to +110.0% | 100.0 | 1 |

Parameter bank

Bank selection: P_{RR-R}

| Display | Item | Contents | Initial value | User level |
|------------|---------------------------------------|---|---------------|------------|
| C_{br-L} | Control method | 0: ON/OFF control 1: PID fixed | 0 or 1 | 0 |
| $R_{E.oL}$ | MV low limit at AT | -10.0 to +110.0% | 0.0 | 0 |
| $R_{E.oH}$ | MV high limit at AT | -10.0 to +110.0% | 100.0 | 0 |
| d_{iFF} | ON/OFF control differential | 0 to 9999U | 5 | 0 |
| o_{FF5} | ON/OFF control operating point offset | -1999 to 9999U | 0 | 2 |
| F_L | PV filter | 0.0 to 120.0s | 0.0 | 0 |
| r_{RR} | PV ratio | 0.001 to 9.999 | 1.000 | 1 |
| b_i | PV bias | -1999 to +9999U | 0 | 0 |
| C_{YU} | Time proportional cycle unit 1 | 0: 1s unit 1: 0.5s fixed (Cycle time is disabled.) 2: 0.2s fixed (Cycle time is disabled.) 3: 0.1s fixed (Cycle time is disabled.) | 10 or 2 | 0 |
| C_{YU2} | Time proportional cycle unit 2 | 0: 1s unit 1: 0.5s fixed (Cycle time is disabled.) 2: 0.2s fixed (Cycle time is disabled.) 3: 0.1s fixed (Cycle time is disabled.) | 0 | 2 |
| C_{Y2} | Time proportional cycle 2 | 5 to 120s (*1) 1 to 120s (*2) | 10 or 2 | 0 |
| $E_{P.Y}$ | Time proportional operation type | 0: Controllability aiming type 1: Actuator life aiming type (Only one ON/OFF operation within time proportional cycle time) | 0 or 1 | 2 |
| S_{PU} | SP ramp-up | 0.0 to 999.9U (0.0: No ramp) | 0.0 | 2 |
| S_{PD} | SP ramp-down | 0.0 to 999.9U (0.0: No ramp) | 0.0 | 2 |

*1 When the output includes the relay output.

*2 When the output does not include the relay output.

Extension tuning bank

Bank selection: E_L

| Display | Item | Contents | Initial value | User level |
|------------|--|---|---------------|------------|
| $R_{E.Y}$ | AT type | 0: Normal (Standard control characteristics) 1: Immediate response (Control characteristics immediately responding to the external disturbance.) 2: Stable (Control characteristics with less up/down function of PV) | 1 | 0 |
| $J_{F.bd}$ | Just-FITTER setting band | 0.00 to 10.00 | 0.30 | 2 |
| $S_{P.L3}$ | SP lag constant | 0.0 to 999.9 | 0.0 | 2 |
| R_{E-P} | AT proportional band tuning factor | 0.00 to 99.99 | 1.00 | 2 |
| R_{E-i} | AT integration time tuning factor | 0.00 to 99.99 | 1.00 | 2 |
| R_{E-d} | AT derivative time tuning factor | 0.00 to 99.99 | 1.00 | 2 |
| C_{E-R} | Control algorithm | 0: PID (conventional PID) 1: Rational_COOP (high performance type) | 0 | 1 |
| $J_{F.ov}$ | Just-FITTER overshoot suppression factor | 0 to 100 | 0 | 1 |

[List of Setup Setting Displays]

Setup bank
Bank selection: S_{EUP}

| Display | Item | Contents | Initial value | User level |
|----------|--|---|---------------|------------|
| C_{Q1} | PV input range type | Thermocouple: 1 to 26 RTD: 41 to 68 DC current/voltage: 81 to 84, 86 to 90 | 88 | 0 |
| C_{Q2} | Temperature unit | 0: Centigrade (°C) 1: Fahrenheit (°F) | 0 | 0 |
| C_{Q3} | Cold junction compensation | 0: Cold junction compensation is performed. (Internal) 1: Cold junction compensation is not performed. (External) | 0 | 2 |
| C_{Q4} | Decimal point position | 0: No decimal point 1: One digit after decimal point 2: Two digits after decimal point 3: Three digits after decimal point (Select '0' or '1' for the thermocouple/RTD range with decimal point) | 0 | 0 |
| C_{Q5} | PV range low limit | When the PV input range type is thermocouple or RTD, the setting is disabled although range low limit is displayed. -1999 to +9999U when the PV input range type is DC voltage/current. | 0 | 0 |
| C_{Q6} | PV range high limit | When the PV input range type is thermocouple or RTD, the setting is disabled although range high limit is displayed. -1999 to +9999U when the PV input range type is DC voltage/current. | 1000 | 0 |
| C_{Q7} | SP low limit | PV input range low limit to PV input range high limit | 0 | 1 |
| C_{Q8} | SP high limit | | 1000 | 1 |
| C_{Q9} | Square root extraction dropout | 0.0 to 100.0% (0.0: No square root extraction) | 0.0 | 2 |
| C_{R4} | Control action (direct/reverse) | 0: Heat control (reverse action) 1: Cool control (direct action) | 0 | 0 |
| C_{R5} | Selection of MV at PV alarm occurrence | 0: Control operation is continued. 1: MV at PV alarm occurrence is outputted. | 0 | 2 |
| C_{R6} | MV at PV alarm occurrence | -10.0 to +110.0% | 0.0 | 2 |
| C_{R7} | MV at READY (at heat-side for heat/cool control) | -10.0 to +110.0% | 0.0 | 1 |
| C_{R8} | MV at READY (at cool-side) | -10.0 to +110.0% | 0.0 | 1 |
| C_{R9} | Operation at MANUAL change | 0: Bump-less 1: Preset | 0 | 1 |
| C_{R0} | Preset MANUAL value | -10.0 to +110.0% (Used even at MANUAL mode when power is ON.) | 0.0 or 50.0 | 1 |
| C_{R1} | PID operation initialization function selection | 0: Automatic 1: Not initialized 2: Initialized (when SP value different from current value is inputted.) | 0 | 2 |
| C_{R4} | Zone PID action selection | 0: Disabled 1: Selection by SP 2: Selection by PV | 0 | 2 |
| C_{R5} | Heat/cool control selection | 0: Disabled 1: Enabled. | 0 | 0 |
| C_{R7} | Heat/cool selection | 0: Normal 1: Energy saving | 0 | 1 |
| C_{R8} | Dead zone | -100.0 to +100.0% | 0.0 | 0 |
| C_{R9} | Heat/cool control selection point | -10.0 to +110.0% | 50.0 | 2 |
| C_{R0} | LSP setting system | 1 to 4 | 1 | 0 |
| C_{R2} | SP ramp unit | 0: 0.1U/s 1: 0.1U/min 2: 0.1U/h | 1 | 2 |
| C_{R6} | CT1 operation type | 0: Heater burnout detection 1: Current value measurement | 0 | 0 |
| C_{R7} | CT1 output | 0: Control output 1 1: Control output 2 2: Event output 1 3: Event output 2 4: Event output 3 | 0 | 0 |
| C_{R8} | CT1 measurement wait time | 30 to 300ms | 30 | 0 |
| C_{R9} | CT2 operation type | Same as CT1. | 0 | 0 |
| C_{R0} | CT2 output | Same as CT1. | 0 | 0 |
| C_{R1} | CT2 measurement wait time | Same as CT1. | 30 | 0 |
| C_{R2} | Control output 1 range | Current output: 1: 4 to 2mA 2: 0 to 20mA | 1 | 0 |
| C_{R3} | Control output 1 type | 0: MV 1: Heat MV (for heat/cool control) 2: Cool MV (for heat/cool control) 3: PV 4: PV before ratio bias filter 5: SP 6: Deviation 7: CT1 current value 8: CT2 current value 9: MFB (Invalid on SDC25/26) 10: SP+MV 11: PV+MV | 0 | 0 |
| C_{R4} | Control output 1 scaling low limit | -1999 to +9999 (The decimal point position and unit may vary depending on the control output 1 type.) | 0.0 | 0 |
| C_{R5} | Control output 1 scaling high limit | | 100.0 | 0 |
| C_{R6} | Control output 1 MV scalable bandwidth | 0 to 9999 (Available when control output 1 type is 10 or 11.) | 200 | 0 |
| C_{R7} | Control output 2 range | Same as control output 1. | 1 | 0 |
| C_{R8} | Control output 2 type | | 3 | 0 |
| C_{R9} | Control output 2 scaling low limit | -1999 to +9999 (The decimal point position and unit may vary depending on the control output 2 type.) | 0 | 0 |
| C_{R0} | Control output 2 scaling high limit | | 1000 | 0 |
| C_{R1} | Control output 2 MV scalable bandwidth | 0 to 9999 (Available when control output 2 type is 10 or 11.) | 200 | 0 |
| C_{R2} | Auxiliary output range | Same as control output 1 | 1 | 0 |
| C_{R3} | Auxiliary output type | | 3 | 0 |
| C_{R4} | Auxiliary output scaling low limit | -1999 to +9999 (The decimal point position and unit may vary depending on the auxiliary output type.) | 0 | 0 |
| C_{R5} | Auxiliary output scaling high limit | | 1000 | 0 |
| C_{R6} | Auxiliary output MV scalable bandwidth | 0 to 9999 (Available when auxiliary output type is 10 or 11.) | 200 | 0 |
| C_{R7} | Communication type | 0: CPL 1: MODBUS ASCII format 2: MODBUS RTU format | 0 | 0 |

[List of Operation Displays]

Operation Displays

| Display | Item | Contents | Initial value | User level |
|--|--|---|---------------|------------|
| Upper display: PV Lower display: SP | SP (Target value) | SP low limit (C07) to SP high limit (C08) | 0 | 0 |
| E_{SP1} (Display example) Lower display: LSP | LSP No. (1st digit: Value at the right end digit) | 1 to LSP system group (C30 Max. 4) | 1 | 0 |
| Upper display: PV Lower display: MV | MV (Manipulated Variable) | -10.0 to +110.0% Setting is disabled in AUTO mode. (Numeric value does not flash.) Setting is enabled in MANUAL mode. (Numeric value flashes.) | — | 0 |
| R_{ERE} | Heat MV (Manipulated Variable) | Setting is disabled -10.0 to +110.0% | — | 0 |
| C_{ool} | Cool MV (Manipulated Variable) | | — | 0 |
| Upper display: PV R_{E1} (Display example) | AT progress display (1st digit = Numeric value at right end digit) | Setting is disabled. Except for 0: During execution of AT (Value is decreased.) 0: Completion of AT | — | 0 |
| C_{E1} | CT (Current transformer) current value 1 | Setting is disabled. | — | 0 |
| C_{E2} | CT (Current transformer) current value 2 | Setting is disabled. | — | 0 |
| E_{1} | Internal event 1 main setting | Setting range is different depending on the internal event operation type. | 0 | 0 |
| $E_{1.5b}$ | Internal event 1 sub-setting | -1999 to +9999U: Except below. 0 to 9999U: Setting value is an absolute value. -199.9 to +999.9%: For MV. | 0 | 0 |
| $E_{1..}$ (Display example) | Timer remaining time 1 | Setting is disabled. Upper display: The distinction by ON delay or OFF delay is displayed at the side location of [1.]. Lower display: Displayed by the unit (either one of 0.1s, s, or min) based on the internal event 1 delay time unit (E1, the 3rd digit of C3). | — | 0 |
| E_{2} | Internal event 2 main setting | Setting range is different depending on the internal event operation type. | 0 | 0 |
| $E_{2.5b}$ | Internal event 2 sub-setting | -1999 to +9999U: Except below. 0 to 9999U: Setting value is an absolute value. -199.9 to +999.9%: For MV. | 0 | 0 |
| $E_{2..}$ (Display example) | Timer remaining time 2 | Setting is disabled. Upper display: The distinction by ON delay or OFF delay is displayed at the side location of [2.]. Lower display: Displayed by the unit (either one of 0.1s, s, or min) based on the internal event 2 delay time unit (E2, the 3rd digit of C3). | — | 0 |
| E_{3} | Internal event 3 main setting | Setting range is different depending on the internal event operation type. | 0 | 0 |
| $E_{3.5b}$ | Internal event 3 sub-setting | -1999 to +9999U: Except below. 0 to 9999U: Setting value is an absolute value. -199.9 to +999.9%: For MV. | 0 | 0 |
| $E_{3..}$ (Display example) | Timer remaining time 3 | Setting is disabled. Upper display: The distinction by ON delay or OFF delay is displayed at the side location of [3.]. Lower display: Displayed by the unit (either one of 0.1s, s, or min) based on the internal event 3 delay time unit (E3, the 3rd digit of C3). | — | 0 |

[List of Parameter Setting Displays]

Mode bank

Bank selection: $MoDE$

| Display | Item | Contents | Initial value | User level |
|------------|----------------------------|---|----------------|------------|
| R_{-A} | AUTO/MANUAL mode selection | R_{Mo} : AUTO mode R_{MA} : MANUAL mode | AUTO | 0 |
| r_{-R} | RUN/READY mode selection | r_{UN} : RUN mode r_{RD} : READY mode | RUN | 0 |
| R_{E} | AT Stop/Start selection | $R_{E.oF}$: AT Stop $R_{E.on}$: AT Start | AT Stop | 0 |
| $d_{o.L}$ | Release all DO latches | $L_{E.on}$: Latch continue $L_{E.oF}$: Latch release | Latch continue | 0 |
| $C_{.DI1}$ | Communication DI 1 | $d_{i.oF}$: OFF $d_{i.on}$: ON | OFF | 0 |

SP bank

Bank selection: S_{P}

| Display | Item | Contents | Initial value | User level |
|----------------------------|--------------------------------------|---|---------------|------------|
| S_{P-i} to S_{P-y} | SP of LSP1 group to SP of LSP4 group | SP low limit (C07) to SP high limit (C08) | 0 | 0 |
| $P_{i.d.1}$ to $P_{i.d.4}$ | PID group No (for LSP1 to 4) | 1 to 4 | 1 | 1 |

| Display | Item | Contents | Initial value | User level |
|----------|--------------------------------------|--|---------------|------------|
| C_{65} | Station address | 0 to 127 (Communication is disabled when "0" is set.) | 0 | 0 |
| C_{66} | Transmission speed | 0: 4800bps 1: 9600bps 2: 19200bps 3: 38400bps | 2 | 0 |
| C_{67} | Data format (data length) | 0: 7bit 1: 8bit | 1 | 0 |
| C_{68} | Data format (parity) | 0: Even parity 1: Odd parity 2: No parity | 0 | 0 |
| C_{69} | Data format (stop bits) | 0: 1bit 1: 2bits | 0 | 0 |
| C_{70} | Communication minimum response time | 1 to 250ms | 3 | 2 |
| C_{71} | Key operation mode/type | 0: Standard type 1: Special type | 0 | 2 |
| C_{72} | Mode key function | 0: Invald 1: AUTO/MANUAL selection 2: RUN/READY selection 3: AT Stop/Start 4: LSP group selection 5: Release of all DO latches 6: Invald 7: Communication DI1 selection 8: Invald | 1 | 0 |
| C_{73} | Mode display setup | Whether the mode bank setup display is enabled or disabled is determined by the sum of the following weighting: Bit 0: AUTO/MANUAL display 0: Disabled, +1: Enabled Bit 1: RUN/READY display 0: Disabled, +2: Enabled Bit 2: LSP/RSP display 0: Disabled, +4: Enabled Bit 3: AT stop/start display 0: Disabled, +8: Enabled Bit 4: DO latch release 0: Disabled, +16: Enabled Bit 5: Communication DI1 ON/OFF display 0: Disabled, +32: Enabled Other invalid setup: 0, +64, +128 | 255 | 1 |
| C_{74} | PV/SP value display setup | Whether the basic display is enabled or disabled is determined by the sum of the following weighting: Bit 0: PV display 0: Disabled, +1: Enabled Bit 1: SP display 0: Disabled, +2: Enabled Bit 2: LSP group No. display 0: Disabled, +4: Enabled Other invalid setup: 0, +8 | 15 | 1 |
| C_{75} | MV display setup | Whether the basic display is enabled or disabled is determined by the sum of the following weighting: Bit 0: MV display 0: Disabled, +1: Enabled Bit 1: Heat MV/cool MV display 0: Disabled, +2: Enabled Bit 2: MFB display 0: Disabled, +4: Enabled Bit 3: AT progress display 0: Disabled, +8: Enabled | 15 | 1 |
| C_{76} | Event setting value display setup | 0: In the operation display mode, the internal event setting value is not displayed. 1: In the operation display mode, the internal event 1 setting value is displayed. 2: In the operation display mode, the internal event 1 to 2 setting value is displayed. 3: In the operation display mode, the internal event 1 to 3 setting value is displayed. | 0 | 1 |
| C_{77} | Event remaining time display setup | 0: In the operation display mode, the ON/OFF delay remaining time of the internal event is not displayed. 1: In the operation display mode, the ON/OFF delay remaining time of the internal event 1 is displayed. 2: In the operation display mode, the ON/OFF delay remaining time of the internal event 1 to 2 is displayed. 3: In the operation display mode, the ON/OFF delay remaining time of the internal event 1 to 3 is displayed. | 0 | 1 |
| C_{78} | CT input current value display setup | 0: In the operation display mode, the CT current value is not displayed. 1: In the operation display mode, the CT1 current value is displayed. 2: In the operation display mode, the CT1 to 2 current value is displayed. | 0 | 1 |
| C_{79} | User level | 0: Basic configuration 1: Standard configuration 2: High function configuration | 0 | 0 |
| C_{80} | LED monitor | 0: Disabled 1: Flashing at RS-485 communication signal transmission 2: Flashing at RS-485 communication signal receiving 3: OR (logical sum) of all DI status 4: Flashing at READY | 0 | 2 |

(continued on back page)

■ Event assignment bank

Bank selection: $\mathcal{E}\mathcal{U}\mathcal{L}\mathcal{F}$

| Display | Item | Contents | Initial value | User level |
|-------------------------------------|--|---|---------------|------------|
| $\mathcal{L}\mathcal{B}\mathcal{1}$ | MS indicating lamp ON condition (1st priority) | 0: Normally open (Normally OFF=0) 1: Normally close (Normally ON=1) 2 to 6: Internal event 1 to 5 7 to 9: Internal event 6 to 8 (Invalid in this unit) 10 to 13: Undefined 14: MV1 (ON/OFF, time proportional 1, heat-side, OPEN-side output) 15: MV2 (time proportional 2, cool-side, CLOSE-side output) 16 to 17: Undefined 18 to 21: D1 to D4 22 to 25: Undefined 26 to 30: Internal contact 1 to 5 31 to 33: Undefined 34 to 37: Communication D11 to D14 38: MANUAL 39: READY 40: RSP 41: AT 42: During ramp 43: Undefined 44: Alarm 45: PV alarm 46: Undefined 47: Mode key function selection status 48: Event output 1 status 49: Control output 1 status | 39 | 2 |
| $\mathcal{L}\mathcal{B}\mathcal{2}$ | MS indicating lamp ON status (1st priority) | 0: Lit 1: Slow flashing 2: 2 times flashing 3: Fast flashing 4: Left → Right 5: Right → Left 6: Right to left going and returning 7: Deviation OK 8: Deviation graph 9: MV graph 10: Heat-side MV graph 11: Cool-side MV graph 12: MFB graph 13: DI monitor 14: Internal contact monitor 15: Internal event monitor | 1 | 2 |
| $\mathcal{L}\mathcal{B}\mathcal{3}$ | MS indicating lamp ON condition (2nd priority) | Same as MS indicating lamp ON condition (1st priority) | 44 | 2 |
| $\mathcal{L}\mathcal{B}\mathcal{4}$ | MS indicating lamp ON status (2nd priority) | Same as MS indicating lamp ON status (1st priority) | 6 | 2 |
| $\mathcal{L}\mathcal{B}\mathcal{5}$ | MS indicating lamp ON condition (3rd priority) | Same as MS indicating lamp ON condition (1st priority) | 1 | 2 |
| $\mathcal{L}\mathcal{B}\mathcal{6}$ | MS indicating lamp ON status (3rd priority) | Same as MS indicating lamp ON status (1st priority) | 9 | 2 |
| $\mathcal{L}\mathcal{B}\mathcal{7}$ | MS indicating lamp deviation range | 0 to 9999U | 5 | 2 |
| $\mathcal{L}\mathcal{B}\mathcal{8}$ | Special function | 0 to 15 (0 at power supply ON.) | 0 | 2 |
| $\mathcal{L}\mathcal{B}\mathcal{9}$ | Zener barrier adjustment | Rewriting by adjustment is enabled. Numerical value inputting manually is disabled | 0.00 | 2 |
| $\mathcal{L}\mathcal{B}\mathcal{0}$ | CT1 number of winding | 0: 800 turns 1 to 40: Setting value multiplied by one hundred becomes number of winding. | 8 | 2 |
| $\mathcal{L}\mathcal{B}\mathcal{1}$ | CT1 number of power wire loops | 0: 1time 1 to 6: number of times | 1 | 2 |
| $\mathcal{L}\mathcal{B}\mathcal{2}$ | CT2 number of winding | 0: 800 turns 1 to 40: Setting value multiplied by one hundred becomes number of winding. | 8 | 2 |
| $\mathcal{L}\mathcal{B}\mathcal{3}$ | CT2 number of power wire loops | 0: 1time 1 to 6: number of times | 1 | 2 |

■ DI assignment bank

Bank selection: $\mathcal{d}\mathcal{I}$

| Display | Item | Contents | Initial value | User level |
|--|--|--|---------------|------------|
| $\mathcal{d}\mathcal{I}\mathcal{1}\mathcal{1}$ to $\mathcal{d}\mathcal{I}\mathcal{5}\mathcal{1}$ | Internal contact 1 to 5 Operation type | 0: No function 1: LSP group selection (0/+1) 2: LSP group selection (0/+2) 3: LSP group selection (0/+4) 4: PID group selection (0/+1) 5: PID group selection (0/+2) 6: PID group selection (0/+4) 7: RUN/READY selection 8: AUTO/MANUAL selection 9: Invalid 10: AT Stop/Start 11: Invalid 12: Control action direct/reverse selection (As per setting/opposite operation of setting) 13: SP ramp Enabled/Disabled 14: PV Hold (No-hold/Hold) 15: PV maximum value hold (No-hold/Hold) 16: PV minimum value hold (No-hold/Hold) 17: Timer Stop/Start 18: Release of all DO latches (Continue/Release) 19: Invalid 20: Invalid | 0 | 0 |
| $\mathcal{d}\mathcal{I}\mathcal{1}\mathcal{2}$ to $\mathcal{d}\mathcal{I}\mathcal{5}\mathcal{2}$ | Internal contact 1 to 5 Input bit operation | 0: Disabled. (Input of default) 1: Function 1 ((A or B) or (C and D)) 2: Function 2 ((A or B) and (C or D)) 3: Function 3 (A or B or C or D) 4: Function 4 (A and B and C and D) | 0 | 2 |

| Display | Item | Contents | Initial value | User level |
|--|--|--|---------------|------------|
| $\mathcal{E}\mathcal{U}\mathcal{L}\mathcal{1}$ to $\mathcal{E}\mathcal{U}\mathcal{L}\mathcal{5}$ | Operation type of internal event 1 to 5 Configuration 1 Operation type | 0: No event 1: PV high limit 2: PV low limit 3: PV high/low limit 4: Deviation high limit 5: Deviation low limit 6: Deviation high/low limit 7: Deviation high limit (Final SP reference) 8: Deviation low limit (Final SP reference) 9: Deviation high/low limit (Final SP reference) 10: SP high limit 11: SP low limit 12: SP high/low limit 13: MV high limit 14: MV low limit 15: MV high/low limit 16: CT1 heater burnout/over-current 17: CT1 heater short-circuit 18: CT2 heater burnout/over-current 19: CT2 heater short-circuit 20: Loop diagnosis 1 21: Loop diagnosis 2 22: Loop diagnosis 3 23: Alarm (status) 24: READY (status) 25: MANUAL (status) 26: Invalid 27: During AT execution (status) 28: During SP ramp (status) 29: Control direct action (status) 30: Invalid 31: Invalid 32: Timer (status) 33: MFB high/low limit | 0 | 0 |
| $\mathcal{E}\mathcal{U}\mathcal{L}\mathcal{2}$ to $\mathcal{E}\mathcal{U}\mathcal{L}\mathcal{3}$ | Internal event 1 to 5 Configuration 2 | Digits are called as 1st digit, 2nd digit, 3rd digit and 4th digit from the right end digit. 0: Direct 1: Reverse | 0000 | 0 |
| $\mathcal{E}\mathcal{U}\mathcal{L}\mathcal{3}$ to $\mathcal{E}\mathcal{U}\mathcal{L}\mathcal{4}$ | Internal event 1 to 5 Configuration 3 | Digits are called as 1st digit, 2nd digit, 3rd digit and 4th digit from the right end digit. 0: No event 1: Alarm direct + OR operation 2: Alarm direct + AND operation 3: Alarm reverse + OR operation 4: Alarm reverse + AND operation | 0 | 2 |
| $\mathcal{E}\mathcal{U}\mathcal{L}\mathcal{4}$ to $\mathcal{E}\mathcal{U}\mathcal{L}\mathcal{5}$ | Internal event 1 to 5 Configuration 4 | Digits are called as 1st digit, 2nd digit, 3rd digit and 4th digit from the right end digit. 0: As normal execution 1: Event OFF at the event setting value (main)=0 | 0 | 0 |
| $\mathcal{E}\mathcal{U}\mathcal{L}\mathcal{5}$ to $\mathcal{E}\mathcal{U}\mathcal{L}\mathcal{6}$ | Internal event 1 to 5 Configuration 5 | Digits are called as 1st digit, 2nd digit, 3rd digit and 4th digit from the right end digit. 0: 0.1s 1: 1s 2: 1min | 0 | 0 |
| $\mathcal{E}\mathcal{U}\mathcal{L}\mathcal{6}$ to $\mathcal{E}\mathcal{U}\mathcal{L}\mathcal{7}$ | Internal event 1 to 5 Configuration 6 | Digits are called as 1st digit, 2nd digit, 3rd digit and 4th digit from the right end digit. 0 | 0 | 0 |

| Display | Item | Contents | Initial value | User level |
|--|--|---|---------------|------------|
| $\mathcal{d}\mathcal{I}\mathcal{1}\mathcal{3}$ to $\mathcal{d}\mathcal{I}\mathcal{5}\mathcal{3}$ | Internal contact 1 to 5 Input assignment A | 0: Normally open (OFF, 0) 1: Normally close (ON, 1) 2: D11 3: D12 4: D13 5: D14 6 to 9: Undefined | 2 to 5 or 0 | 2 |
| $\mathcal{d}\mathcal{I}\mathcal{1}\mathcal{4}$ to $\mathcal{d}\mathcal{I}\mathcal{5}\mathcal{4}$ | Internal contact 1 to 5 Input assignment B | 10: Internal event 1 11: Internal event 2 12: Internal event 3 13: Internal event 4 14: Internal event 5 15 to 17: Undefined 18: Communication D11 19: Communication D12 20: Communication D13 21: Communication D14 | 0 | 2 |
| $\mathcal{d}\mathcal{I}\mathcal{1}\mathcal{5}$ to $\mathcal{d}\mathcal{I}\mathcal{5}\mathcal{5}$ | Internal contact 1 to 5 Input assignment C | 22: MANUAL mode 23: READY mode 24: Undefined 25: During AT execution 26: During SP ramp | 0 | 2 |
| $\mathcal{d}\mathcal{I}\mathcal{1}\mathcal{6}$ to $\mathcal{d}\mathcal{I}\mathcal{5}\mathcal{6}$ | Internal contact 1 to 5 Input assignment D | 27: Undefined 28: Alarm is enabled. 29: PV alarm is enabled. 30: Undefined 31: Mode key function selection status 32: Event output 1 status 33: Control output 1 status | 0 | 2 |
| $\mathcal{d}\mathcal{I}\mathcal{1}\mathcal{7}$ to $\mathcal{d}\mathcal{I}\mathcal{5}\mathcal{7}$ | Internal contact 1 to 5 Polarity A to D | Digits are called as 1st digit, 2nd digit, 3rd digit and 4th digit from the right end digit. 0: Direct 1: Reverse | 0000 | 2 |
| $\mathcal{d}\mathcal{I}\mathcal{1}\mathcal{8}$ to $\mathcal{d}\mathcal{I}\mathcal{5}\mathcal{8}$ | Internal contact 1 to 5 Polarity | 0: Direct 1: Reverse | 0 | 2 |
| $\mathcal{d}\mathcal{I}\mathcal{1}\mathcal{9}$ to $\mathcal{d}\mathcal{I}\mathcal{5}\mathcal{9}$ | Internal contact 1 to 5 Internal event No assignment | 0: Every internal event 1 to 5: Internal event number | 0 | 2 |

■ DO assignment bank

Bank selection: $\mathcal{d}\mathcal{O}$

| Display | Item | Contents | Initial value | User level |
|--|---|--|--------------------|------------|
| $\mathcal{d}\mathcal{O}\mathcal{1}\mathcal{1}$ to $\mathcal{d}\mathcal{O}\mathcal{5}\mathcal{1}$ | Control output 1 to 2, event output 1 to 3 Operation type | 0: Input of default 1: MV1 (ON/OFF control output, time proportional output, heat-side proportional output of heat/cool control) 2: MV2 (cool-side proportional output of heat/cool control) 3: Function 1 ((A and B) or (C and D)) 4: Function 2 ((A or B) and (C or D)) 5: Function 3 (A or B or C or D) 6: Function 4 (A and B and C and D) | 0 | 2 |
| $\mathcal{d}\mathcal{O}\mathcal{1}\mathcal{2}$ to $\mathcal{d}\mathcal{O}\mathcal{5}\mathcal{2}$ | Control output 1 to 2, event output 1 to 3 Output assignment A | 0: Normally open (OFF, 0) 1: Normally close (ON, 1) 2: Internal event 1 3: Internal event 2 4: Internal event 3 5: Internal event 4 6: Internal event 5 7 to 13: Undefined 14: MV1 15: MV2 | 14 to 15 or 2 to 4 | 2 |
| $\mathcal{d}\mathcal{O}\mathcal{1}\mathcal{3}$ to $\mathcal{d}\mathcal{O}\mathcal{5}\mathcal{3}$ | Control output 1 to 2, event output 1 to 3 Output assignment B | 16 to 17: Undefined 18: D11 19: D12 20: D13 21: D14 22 to 25: Undefined 26: Internal contact 1 27: Internal contact 2 28: Internal contact 3 | 0 | 2 |
| $\mathcal{d}\mathcal{O}\mathcal{1}\mathcal{4}$ to $\mathcal{d}\mathcal{O}\mathcal{5}\mathcal{4}$ | Control output 1 to 2, event output 1 to 3 Output assignment C | 29: Internal contact 4 30: Internal contact 5 31 to 33: Undefined 34: Communication D11 35: Communication D12 36: Communication D13 37: Communication D14 38: MANUAL mode 39: READY mode | 0 | 2 |
| $\mathcal{d}\mathcal{O}\mathcal{1}\mathcal{5}$ to $\mathcal{d}\mathcal{O}\mathcal{5}\mathcal{5}$ | Control output 1 to 2, event output 1 to 3 Output assignment D | 40: Undefined 41: During AT execution 42: During SP ramp 43: Undefined 44: Alarm is enabled. 45: PV alarm is enabled. 46: Undefined 47: Mode key function selection status 48: Event output 1 status 49: Control output 1 status | 0 | 2 |

| Display | Item | Contents | Initial value | User level |
|--|---|---|---------------|------------|
| $\mathcal{d}\mathcal{O}\mathcal{1}\mathcal{6}$ to $\mathcal{d}\mathcal{O}\mathcal{5}\mathcal{6}$ | Control output 1 to 2, event output 1 to 2 Polarity A to D | Digits are called as 1st digit, 2nd digit, 3rd digit and 4th digit from the right end digit. 0: Direct 1: Reverse | 0000 | 2 |
| $\mathcal{d}\mathcal{O}\mathcal{1}\mathcal{7}$ to $\mathcal{d}\mathcal{O}\mathcal{5}\mathcal{7}$ | Control output 1 to 2, event output 1 to 3 Polarity | 0: Direct 1: Reverse | 0 | 2 |
| $\mathcal{d}\mathcal{O}\mathcal{1}\mathcal{8}$ to $\mathcal{d}\mathcal{O}\mathcal{5}\mathcal{8}$ | Control output 1 to 3 Latch | 0: Disabled 1: Enabled (Latch at ON) 2: Enabled (Latch at OFF, except at the time of initialization after power ON) | 0 | 2 |

■ User function bank

Bank selection: $\mathcal{U}\mathcal{F}$

| Display | Item | Contents | Initial value | User level |
|-------------------------------------|-----------------------------|---|---------------|------------|
| $\mathcal{U}\mathcal{F}\mathcal{1}$ | User function definition 1 | This is the display in upper display. The setup exception is as follows: --- : Yet to be registered. | ---- | 1 |
| $\mathcal{U}\mathcal{F}\mathcal{2}$ | User function definition 2 | P- : Proportional band of the PID group in use | ---- | 1 |
| $\mathcal{U}\mathcal{F}\mathcal{3}$ | User function definition 3 | I- : Integration time of the PID group in use | ---- | 1 |
| $\mathcal{U}\mathcal{F}\mathcal{4}$ | User function definition 4 | D- : Derivative time of the PID group in use | ---- | 1 |
| $\mathcal{U}\mathcal{F}\mathcal{5}$ | User function definition 5 | rE- : Manual reset of the PID group in use | ---- | 1 |
| $\mathcal{U}\mathcal{F}\mathcal{6}$ | User function definition 6 | oM- : MV low limit of the PID group in use | ---- | 1 |
| $\mathcal{U}\mathcal{F}\mathcal{7}$ | User function definition 7 | P- : Cool-side integration time of the PID group in use | ---- | 1 |
| $\mathcal{U}\mathcal{F}\mathcal{8}$ | User function definition 8 | d- : Cool-side derivative time of the PID group in use | ---- | 1 |
| $\mathcal{U}\mathcal{F}\mathcal{9}$ | User function definition 9 | oL- : Cool-side MV low limit of the PID group in use | ---- | 1 |
| $\mathcal{U}\mathcal{F}\mathcal{0}$ | User function definition 10 | oH- : Cool-side of MV high limit of the PID group in use | ---- | 1 |

■ Lock bank

Bank selection: $\mathcal{L}\mathcal{O}\mathcal{L}$

| Display | Item | Contents | Initial value | User level |
|--|--------------------|---|---------------|------------|
| $\mathcal{L}\mathcal{O}\mathcal{L}$ | Key lock | 0: All settings are enabled. 1: Mode, event, operation display, SP, UF, lock, manual MV, and mode key can be set. 2: Operation display, SP, UF, lock, manual MV, and mode key can be set. 3: UF, lock, manual MV, and mode key can be set. | 0 | 0 |
| $\mathcal{L}\mathcal{1}\mathcal{O}\mathcal{L}$ | Communication lock | 0: RS-485 communication read/write is enabled. 1: RS-485 communication read/write is disabled. | 0 | 2 |
| $\mathcal{L}\mathcal{2}\mathcal{O}\mathcal{L}$ | Loader lock | 0: Loader communication read/write is enabled. 1: Loader communication read/write is disabled. | 0 | 2 |
| $\mathcal{P}\mathcal{R}\mathcal{S}\mathcal{5}$ | Password display | 0 to 15 5: Password 1A to 2B display | 0 | 0 |
| $\mathcal{P}\mathcal{S}\mathcal{1}\mathcal{A}$ | Password 1A | 0000 to FFFF (hexadecimal value) | 0000 | 0 |
| $\mathcal{P}\mathcal{S}\mathcal{2}\mathcal{A}$ | Password 2A | 0000 to FFFF (hexadecimal value) | 0000 | 0 |
| $\mathcal{P}\mathcal{S}\mathcal{1}\mathcal{B}$ | Password 1B | 0000 to FFFF (hexadecimal value) | 0000 | 0 |
| $\mathcal{P}\mathcal{S}\mathcal{2}\mathcal{B}$ | Password 2B | 0000 to FFFF (hexadecimal value) | 0000 | 0 |

■ Instrument information bank

Bank selection: $\mathcal{I}\mathcal{D}$

| Display | Item | Contents | Initial value | User level |
|-------------------------------------|--------------------------------------|--|---------------|------------|
| $\mathcal{I}\mathcal{D}\mathcal{1}$ | ROM ID | 0: SDC15 1: SDC25/26 2: SDC35/36 | 1 | 2 |
| $\mathcal{I}\mathcal{D}\mathcal{2}$ | ROM version 1 | XX.XX (2 digits after decimal point) | — | 2 |
| $\mathcal{I}\mathcal{D}\mathcal{3}$ | ROM version 2 | XX.XX (2 digits after decimal point) | — | 2 |
| $\mathcal{I}\mathcal{D}\mathcal{4}$ | SLP support information | | — | 2 |
| $\mathcal{I}\mathcal{D}\mathcal{5}$ | EST support version | | — | 2 |
| $\mathcal{I}\mathcal{D}\mathcal{6}$ | Manufacturing date code (year) | Year - 2000. Ex.: "3" means the year 2003. | — | 2 |
| $\mathcal{I}\mathcal{D}\mathcal{7}$ | Manufacturing date code (month, day) | Month + Day + 100. Ex.: "12.01" means the 1st day of December | — | 2 |
| $\mathcal{I}\mathcal{D}\mathcal{8}$ | Serial No. | | — | 2 |



Specifications are subject to change without notice.

Yamatake Corporation
Advanced Automation Company

1-12-2 Kawana Fujisawa
Kanagawa 251-8522 Japan

Printed in Japan.

URL: <http://www.yamatake.com>

1st Edition: Issued in Oct. 2003(A)
8th Edition: Issued in Feb. 2006(B)

Printed on recycled paper. (05)